

Strata[®] ***DK***

Digital Business Telephone Solutions

Programming Manual

DK14

Software Release 3.1

DK40i

Software Release 4.1

DK424

**Software Release 4.1
and ACD**

Strata DK

General End User Information

The Strata DK Digital Business Telephone System is registered in accordance with the provisions of Part 68 of the Federal Communications Commission's Rules and Regulations.

FCC Requirements

Means of Connection: The Federal Communications Commission (FCC) has established rules which permit the Strata DK system to be connected directly to the telephone network. Connection points are provided by the telephone company—connections for this type of customer-provided equipment will not be provided on coin lines. Connections to party lines are subject to state tariffs.

Incidence of Harm: If the system is malfunctioning, it may also be disrupting the telephone network. The system should be disconnected until the problem can be determined and repaired. If this is not done, the telephone company may temporarily disconnect service. If possible, they will notify you in advance, but, if advance notice is not practical, you will be notified as soon as possible. You will be informed of your right to file a complaint with the FCC.

Service or Repair: For service or repair, contact your local Toshiba telecommunications distributor. To obtain the nearest Toshiba telecommunications distributor in your area, call Toshiba America Information Systems, Inc., Telecommunication Systems Division in Irvine, CA (949) 583-3700.

Telephone Network Compatibility: The telephone company may make changes in its facilities, equipment, operations, and procedures. If such changes affect the compatibility or use of the Strata DK system, the telephone company will notify you in advance to give you an opportunity to maintain uninterrupted service.

Notification of Telephone Company: Before connecting a Strata DK system to the telephone network, the telephone company may request the following:

1. Your telephone number.
2. FCC registration number:
 - ♦ Strata DK may be configured as a Key or Hybrid telephone system. The appropriate configuration for your system is dependent upon your operation of the system.
 - ♦ If the operation of your system is only manual selection of outgoing lines, it may be registered as a Key telephone system.
 - ♦ If your operation requires automatic selection of outgoing lines, such as dial access, Least Cost Routing, Pooled Line Buttons, etc., the system must be registered as a Hybrid telephone system. In addition to the above, certain features (tie Lines, Off-premises Stations, etc.) may also require Hybrid telephone system registration in some areas.
 - ♦ If you are unsure of your type of operation and/or the appropriate FCC registration number, contact your local Toshiba telecommunications distributor for assistance.
DK14 and DK40i
Key system: **CJ6MLA-74479-KF-E**
Hybrid: **CJ6MLA-74478-MF-E**
DK424
Hybrid: **CJ69XA-10243-MF-E**
Key system: **CJ69XA-10242-KF-E**
PBX: **CJCHN-22757-PF-E**
3. Ringer equivalence number: 0.3B. The ringer equivalence number (REN) is useful to determine the quantity of devices which you may connect to your telephone line and still have all of those devices ring when your number is called. In most areas, but not all, the sum of the RENs of all devices connected to one line should not exceed five (5.0B). To be certain of the number of devices you may connect to your line, as determined by the REN, you should contact your local telephone company to ascertain the maximum REN for your calling area.

Publication Information

Toshiba America Information Systems, Inc., Telecommunication Systems Division, reserves the right, without prior notice, to revise this information publication for any reason, including, but not limited to, utilization of new advances in the state of technical arts or to simply change the design of this document.

Further, Toshiba America Information Systems, Inc., Telecommunication Systems Division, also reserves the right, without prior notice, to make such changes in equipment design or components as engineering or manufacturing methods may warrant.

DKA-MA-PRGRM-VE
4025060

Version E, May 1999

Version D.3, December 1998 (Format change)

Version D.2, October 1998 (Update TBDK-0021)

Version D.1, September 1998 (Update TBDK-0019)

Version D, June 1998 (Update TBDK-0009)

Version C, October 1997

Version B, April 1997

Version A.1, February 1997 (Update TB16-0003)

Version A, December 1996

4. Network connection information USOC jack required: RJ1CX, RJ2EX, RJ2GX, RJ48C, RJ48X, RJ11, RJ14C, RJ21X (see Network Requirements in this document). Items 2, 3 and 4 are also indicated on the equipment label.

Radio Frequency Interference

Warning: This equipment generates, uses, and can radiate radio frequency energy and if not installed and used in accordance with the manufacturer's instruction manual, may cause interference to radio communications. It has been tested and found to comply with the limits for a Class A computing device pursuant to Subpart J of Part 15 of FCC Rules, which are designed to provide reasonable protection against such interference when operated in a commercial environment. Operation of this equipment in a residential area is likely to cause interference, in which case, the user, at his/her own expense, will be required to take whatever measures may be required to correct the interference.

This system is listed with Underwriters Laboratory.

UL Requirement: If wiring from any telephone exits the building or is subject to lightning or other electrical surges, then secondary protection is required. Secondary protection is also required on DID, OPS, and tie lines. (Additional information is provided in this manual.)



Important Notice — Music-On-Hold

In accordance with U.S. Copyright Law, a license may be required from the American Society of Composers, Authors and Publishers, or other similar organization, if radio or TV broadcasts are transmitted through the music-on-hold feature of this telecommunication system. Toshiba America Information Systems, Inc., hereby disclaims any liability arising out of the failure to obtain such a license.

CP01, Issue 8, Part I Section 14.1

Notice: The Industry Canada label identifies certified equipment. This certification means that the equipment meets certain telecommunications network protective, operational and safety requirements as prescribed in the appropriate Terminal Equipment Technical Requirements document(s). The Department does not guarantee the Equipment will operate to the user's satisfaction.

Before installing this equipment, users should ensure that it is permissible to be connected to the facilities of the local telecommunications company. The equipment must also be installed using an acceptable method of connection. The customer should be aware that compliance with the above conditions may not prevent degradation of service in some situations.

Repairs to certified equipment should be coordinated by a representative designated by the supplier. Any repairs or alterations made by the user to this equipment, or equipment malfunctions, may give the telecommunications company cause to request the user to disconnect the equipment.

Users should ensure for their own protection that the electrical ground connections of the power utility, telephone lines and internal metallic water pipe system, if present, are connected together. This precaution may be particularly important in rural areas.

CAUTION! Users should not attempt to make such connections themselves, but should contact the appropriate electric inspection authority, or electrician, as appropriate.

CP01, Issue 8, Part I Section 14.2

Notice: The Ringer Equivalence Number (REN) assigned to each terminal device provides an indication of the maximum number of terminals allowed to be connected to a telephone interface. The terminal on an interface may consist of any combination of devices subject only to the requirement that the sum of the Ringer Equivalence Numbers of all the Devices does not exceed 5.

© Copyright 1999 Toshiba America Information Systems, Inc. Telecommunication Systems Division

All rights reserved. No part of this manual, covered by the copyrights hereon, may be reproduced in any form or by any means—graphic, electronic, or mechanical, including recording, taping, photocopying, or information retrieval systems—without express written permission of the publisher of this material.

Strata is a registered trademark of Toshiba Corporation. Strategy is a registered trademark of Toshiba America Information Systems, Inc. Strata AirLink, Call Center Viewer are trademarks of Toshiba America Information Systems, Inc.

Trademarks, registered trademarks, and service marks are the property of their respective owners.

Contents

Introduction

Organization.....	vii
Conventions.....	viii
Related Documents/Media.....	ix

Chapter 1 – Overview

Numerical Program Listing.....	1-1
Alphabetical Program Listing.....	1-7
How to Program a Strata DK System.....	1-10
First-time Programming.....	1-14
Programming Examples.....	1-16

Chapter 2 – Initialization & Test

Program 91-9 – System Initialization.....	2-2
Program 90 – Initialize Programs 00~*99.....	2-4
Program 91-1 – Automatic PCB Recognition and Port Renumber.....	2-6
Program 91-2 – Data Transfer from Temporary Memory to Working Memory.....	2-8
Program 92 – Initializing Misc. Backup RAM.....	2-9
Program 00 – Part 1: Software Check.....	2-12
Program 00 – Part 2: Processor RAM Test.....	2-15

Chapter 3 – System & Station

Program 01 – Station Logical Port Display and/or Change.....	3-1
Program 02 – Station Physical Port Display and/or Change.....	3-2
Program 03 for DK14 – Slot Assignments.....	3-3
Program 03 for DK40i – Flexible PCB Slot Assignments.....	3-4
Program 03 for DK424 – Flexible PCB Cabinet Slot Assignments.....	3-6
Program *03 for DK424 – Cabinet Type Identification.....	3-11
Program 04 – Station Logical Port [PDN] Assignment.....	3-12
Program *04 – [PhDN] and Distributed Hunt [DN] Assignments For Internal and Tie Line Calls..	3-17
Program 05 – Flexible Access Code Numbering.....	3-19
Program *05 – Call Park Pickup Abbreviated Dialing.....	3-22
Program 09 – Built-in Auto Attendant Prompt / Station Assignments.....	3-23
Program *09 – [PDN], [PhDN], DH, ACD or Modem DID Ext. Assignments.....	3-25
Program 10-1 – System Assignments, Part 1 of 3.....	3-27
Program 10-2 – System Assignments, Part 2 of 3.....	3-30
Program 10-3 – System Assignments, Part 3 of 3.....	3-35
Program *10 – Enhanced 911 Operation.....	3-39
Program 12 – System Assignments, Basic Timing.....	3-41

Program 13 – Defining the Message Center	3-43
Program 15 – Ground/Loop/Tie/DID Line Options.....	3-44
Program *15 – CO Line Tenant Assignments	3-47
Program 16 – Assign CO Line Groups (or Dial 9)	3-48
Program 17 – DID/Tie Line Options	3-50
Program *17 – DID Intercept Port Number (Vacant or Wrong Number)	3-53
Program 19 – Alternate Background Music Source Slot Assignment	3-54
Program 20 – Computer and Data Interface Unit Configuration	3-55
Program 21 – Modem Pool Port Assignments.....	3-58
Program 22 – RPCI and DIU Station Hunting for Data Calls	3-60
Program 23 – Built-in Auto Attendant (AA) Primary Announcement Assignments	3-61
Program 24 – Built-in AA Secondary Announcement Assignments.....	3-61
Program 25-1 – Built-in AA Incoming Call Overflow Time.....	3-62
Program 26 – Built-in AA Camp-on Busy Time	3-63
Program 27 – DKT Handset/Headset Receiver Volume Level	3-65
Program 28 – DSS Console/Attendant Telephone Assignments	3-66
Program 29-1~8 – DSS Console and Number Button Assignments.....	3-68
Program *29 – Add-on Modules Button Assignments	3-71
Program 30 – Station Class of Service.....	3-73
Program *30 – Telephone Group Page Assignments	3-79
Program 31 – Station Class of Service.....	3-80
Program *31 – Group Pickup Assignments.....	3-86
Program 32 – Automatic Preference	3-87
Program *32 – RS-232 Voice Mail Message Center Port	3-89
Program 33 – [PDN]/ [PhDN] Station Hunting (Voice Calls Only).....	3-90
Program *33 – [PhDN] Owner Telephone Assignment	3-92
Program 34 – Hold Recall Timing	3-94
Program *34 – Station Class Of Service.....	3-95
Program 35 – Station Class of Service.....	3-97
Program 36 – Fixed Call Forward.....	3-101
Program *36 – System NT Button Lock Password Changing Station Assignment	3-102
Program 37 – Ring Transfer (Camp-on) Recall Time	3-103
Program *37 – Park Recall Timing.....	3-104
Program 38 – Digital and Electronic Telephone Keystrip Type.....	3-105
Program *38 – Standard Telephone Ring-Down Destination.....	3-109
Program 39 – Flexible Button Assignments	3-111
Program *40 – Distributed Hunt Group Member Assignments.....	3-120
Program *41 for DK424 – T1 Assignment Series (Part 1)	3-122
Program *50 – Caller ID Circuit Assignments to CO Line PCBs	3-126
Program *51 – Station Memory Allocation	3-128
Program *52 – Caller ID/ANI Abandoned Call Number Station Owner Assignments.....	3-130
Program 58 – DK424 Attendant Console Series (Part 1)	3-132
Program 59 – Attendant Console Flexible Button Codes	3-135
Program 60-1 – SMDR Data Output Options	3-139
Program 60-2~7 – SMDR Output/Account Code Digit Length	3-140
Program 60-8 – Call Forward External (Remote Change, Security) ID Code.....	3-142
Program 69 – Verified Account Codes	3-143
Program 70 – Verified Account Code Toll Restriction Assignments.....	3-145
Program 71 – DNIS.....	3-147
Program *71~*73 – [DN] to [DN], Tie to [DN], and DID to [DN] Ringing Assignments	3-152

Program 72 – DNIS Number Network Table Assignments.....3-154
 Program 74 – System NT Button Lock Password3-156
 Program 76-1(X-Y) – DK14, DK40i, All RCTUs.....3-157
 Program 76-2 (X-Z) – WSIU, TSIU and RSIU / RSIS / RMDS Transmission Rates.....3-158
 Program 77-1 – Peripheral Options (Door Phones)3-159
 Program 77-2 – Door Phone Busy Signal/Door Lock Assignments.....3-163
 Program 77-3 – Night Ringing Over PIOUS External Page Zones3-165
 Program 77-4 – RSIU Open Architecture Interface (OAI) Data Output Assignments.....3-166
 Program 78 – CO Line Special Ringing Assignments.....3-168
 Program 79 – Door Phone Ringing.....3-170
 Program *79 – Door Phone to [DN] Flashing Assignments.....3-172
 Program 80 – EKT and DKT Ringing Tones (CO Line Calls).....3-173
 Program *80 – Call Forward Station Ring Assignment.....3-174
 Programs 81~89 – Ground/Loop Start/CO Line Station Ringing.....3-175
 Programs *81, *84, and *87 – Ground/Loop Start/CO Line to [DN] LED Flash Assignments.....3-179
 Program 93 – CO Line Identification.....3-183
 Program 97 – Printing Program Data through SMDR.....3-185

Chapter 4 – Toll Restriction

Toll Restriction Methods.....4-1
 Toll Restriction Features4-1
 Completing the Toll Restriction System Record4-3
 Program 40 – Station CO Line Access4-4
 Program 41 – Station Outgoing Call Restriction4-6
 Program 42-0 – CO Line to PBX/Centrex Connection & Access Codes4-8
 Program 42-1~8 – PBX/Centrex Access Codes.....4-10
 Program 43 – 0 + Credit Card Dialing Option.....4-11
 Program 44-1~8 – Toll Restriction/Traveling Class Override Codes.....4-13
 Program 44-91~93 – Emergency Bypass of Forced/Verified Account Codes4-14
 Program 45-1 – LCR/Toll Restriction Dial Plan.....4-15
 Program 45-2 – Toll Restriction Disable4-19
 Program 45-3~6 – Special Common Carrier Numbers and Authorization Code Digit Length.....4-20
 Program 45-8~9 – Toll Restriction Override Code.....4-22
 Program *45-1 (1~4) – Toll Restriction for Office Codes.....4-23
 Program *45-2 (1~6) – LCR/Toll Restriction Bypass4-24
 Program *45-3 (1~9) – LCR/Toll Restriction Bypass For Special Numbers that Begin with */#4-26
 Program *45-4 – Special Code Dialing Sequence with LCR4-28
 Program 46-2~4 – Toll Restriction Allowed/Denied Area Codes by Class4-30
 Program 46-6~8 – Toll Restriction Allowed/Denied Local Office Codes Assigned by Class4-31
 Programs 46-10~80 – Toll Restriction Class Parameters4-33
 Programs 46-11~46-81 – Toll Restriction Class (1~8) Parameters4-35
 Program 47 – Toll Restriction Exception Office Codes Assigned by Area Codes (Tables 1~16)4-36
 Program 48 – Station Toll Restriction Classification4-38

Chapter 5 – Least Cost Routing

LCR Features5-1
 LCR Conditions5-2
 LCR CO Line Programming Reference Table.....5-3
 Program 50-1 – LCR Parameters5-4

Program 50-2 – LCR Home Area Code	5-5
Programs 50-3 (1~5) – LCR Special Codes.....	5-6
Program 50-4 – LCR Long Distance Information (LDI) Plan Number.....	5-7
Program 50-5 – LCR Local Call Plan Number.....	5-8
Program 50-6 – LCR Dial 0 (Zero) Time-out.....	5-9
Program 51 – LCR Area Codes	5-10
Program 52 – LCR Office Code Exceptions for Specified Area Code.....	5-12
Program 53 – LCR Schedule Assignments for LCR Plans.....	5-14
Program 54 – LCR Route Definition Tables.....	5-17
Program 55 – LCR Modified Digits Table	5-19
Program 55-0 – Delete Number of Digits From the Front of Dialed Number.....	5-20
Program 55-1 and 2 – Add Digits Before and/or After the Dialed Number	5-21
Program 56 – LCR Station Group Assignments	5-23

Chapter 6 – Automatic Call Distribution

Program 03 – RSIU, RSSU, PIOUS, PIOUS ACD/MIS Slot Assignments	6-2
Program 09 – Auto Attendant Prompt/ACD Group Assignments	6-3
Program *09 – ACD Group DID Line Digit Assignments	6-5
Program 10-4 – ACD/ISDN Parameters	6-6
Program 11 – ACD Timing Assignments	6-8
Program 14-0 – Loop/Ground Start Line Direct to ACD Group Assignments.....	6-12
Program 14-1 – ACD Agent Identification Code Assignments.....	6-13
Program *14-1 – Auto Answer with Zip Tone Assigned to Agent ID	6-14
Program 18 – Agent Names for SMIS/MIS Assignments	6-15
Program 14-2 – ACD Supervisor Passwords	6-17
Program *14-2 – DID, Tie, DNIS, ANI Line After Shift/Overflow Substitution Destinations	6-18
Program 14-3 – Announcement/Music Port and Queue Pattern.....	6-20
Program 14-4 – Queue Time Out Overflow Destination.....	6-23
Program 14-5 – Overflow Point and Ring No Answer Routing Destination.....	6-25
Program 14-6 – After Shift Service Destination	6-29
Program 14-71 – Queue Size for Alarm, Immediate Assignments.....	6-31
Program 14-72 – Queue Size for Alarm 1	6-32
Program 14-73 – Queue Size for Alarm 2	6-33
Program 14-8 – Alarm Pattern Assignments	6-34
Program 14-9 – Work Unit Assignments.....	6-35
Program 15 – Ground/Loop/Tie/DID Line Options.....	6-36
Program 17 – DID/Tie Line Options	6-36
Program 35 – Station Class of Service.....	6-36
Program 71 – DID/Tie/DNIS/ANI Lines	6-36
Program 39 – Flexible Button Assignments for ACD Telephones.....	6-37

Chapter 7 – ISDN

System Programs Overview	7-1
ISDN Related Programs	7-3
Trunk Programs Overview	7-5
Program 16 – Assign CO Line Groups	7-6
Program *16 – ISDN Trunk Group Type Assignment	7-7
Program *42 – Clock Source	7-8
Program *42-1 – Primary Timing Reference Assignments (Release 3.1 and earlier).....	7-9

Program *43-1~3 – D-Channel Control and NFAS Assignments 7-10
 Program *43-2 – Non-Facility Associated Signaling (NFAS) Assignment 7-11
 Program *43-3 – Network PRI Interface Assignment 7-12
 Program *44 – BRI Service Profile Identifier (SPID) Parameters 7-13
 Program *60 – BRI Line/Station Operation Assignment 7-14
 Program *61 – Analog Trunk Services for ISDN 7-15
 Program *62 – Non-ISDN Station Bearer Service 7-16
 Program *63 – ISDN Dialing Parameters 7-17
 Program *64-1 – Direct Inward Dialing Parameters 7-18
 Program *64-2 – Number of DID/DNIS Digits for Trunk Groups 7-19
 Program *65 – ISDN Channel Group Assignment 7-20
 Program *66-1 – Channel Group Number Parameters 7-21
 Programs *66-2 and *66-4 – Call-by-Call Trunk Group Codes and Network ID 7-22
 Program *66-3 – Channel Group/Trunk Parameters 7-24
 Program *66-5 – Line Directory Number (LDN) Registration 7-25
 Program *66-6 – LDN/Trunk Group to Channel Group Assignments 7-26
 Program *66-7 – LDN/Trunk Group Assignments 7-27
 Program *67-1 – Trunk Group Call Direction 7-28
 Program *67-2 – Call Types for ISDN Trunk Group Supported 7-29
 Program *67-3 – ISDN Trunk Group Minimum Channel Reservation 7-30
 Program *67-4 – ISDN Trunk Groups Maximum Channel Reservation 7-31
 Program *67-5 – Multiple Time Zone Settings 7-32
 Program *68-1 – Calling Number ID Presentation Parameters 7-33
 Program *68-2 – Outbound CNIS Parameters 7-34
 Program *69-1 – CNIS Presentation Parameters 7-35
 Program *69-2 – Special Number Assignment 7-36

Chapter 8 – E911

Operation Overview 8-1
 SMDR 8-2
 Programming Overview 8-3
 Program *11-0 – E911/CAMA Trunk Assignments 8-4
 Program *11-1 – CAMA Trunk Group Line Assignments 8-6
 Program *11-2 – CAMA Trunk Group Hunting Assignments 8-7
 Program *11-5 – CAMA Digits Sent on 911 Calls 8-8
 Program *11-6 – E911 Interdigital Timer 8-9
 Program *11-8 – 911 Special [DN] Notification Assignments 8-10
 Program *12 – CESID Station Information 8-11
 Program *13 – Station To CAMA Trunk Group Assignment 8-13

Glossary GL-1

Index IN-1

Introduction

This manual provides for programming the Strata DK14, DK40i, and DK424 digital business telephone systems. It is intended for qualified service technicians and system programmers. At the time of this printing, this book contains Release 4.1 information for the DK424. It also contains some pre-release information for software beyond Release 4.1.

Important! *Information beyond Release 4.1 is preliminary and given prior to product release. Be careful when using this information as the software will change and updates/additions will be required upon final release.*

This manual uses simplified, generic system record sheets that have legends that show you specific port configurations for Strata DK14, DK40i and DK424 systems.

After using the legends, copy the generic record sheets as required to accommodate your system ports and settings.

The *Installation and Maintenance (I&M) Manual*, a companion book, covers the installation and maintenance information and instructions for the Strata DK systems discussed in this book.

Organization

This manual is organized as follows for your convenience:

- ♦ **Chapter 1 – Overview** includes general programming information and basic instructions on how to program the system with a 20-button LCD digital or electronic telephone.
- ♦ **Chapter 2 – Initialization & Test** includes information for initializing and test programs.
- ♦ **Chapter 3 – System & Station** includes programming information for the entire system and individual stations.
- ♦ **Chapter 4 – Toll Restriction** includes programming information for Toll Restriction.
- ♦ **Chapter 5 – Least Cost Routing** includes programming information for Least Cost Routing.
- ♦ **Chapter 6 – Automatic Call Distribution** includes ACD programming for DK424 (ACD does not apply to the RCTUA processor).
- ♦ **Chapter 7 – ISDN** includes programming instructions and record sheets for Integrated Systems Digital Networking features for the DK424 and DK40i.
- ♦ **Chapter 8 – E911** includes programming information for connecting the DK424 to Enhanced 911 CAMA trunks.
- ♦ **Glossary/Index**

The programs in each chapter are given in numerical order (except Initialization and Test which is given in order of importance). The “*” programs are located behind the program of the same name (e.g., Program *09 follows Program 09).

Conventions

Conventions	Description
Note	Elaborates specific items or references other information. Within some tables, general notes apply to the entire table and numbered notes apply to specific items.
Important!	<i>Calls attention to important instructions or information.</i>
CAUTION!	Advises you that hardware, software applications, or data could be damaged if the instructions are not followed closely.
WARNING!	Alerts you when the given task could cause personal injury or death.
[DN]	Represents any Directory Number button, also known as an extension or intercom number.
[PDN]	Represents any Primary Directory Number button (the extension number for the telephone).
[SDN]	Represents any Secondary appearance of a PDN. A PDN which appears on another telephone is considered an SDN.
[PhDN]	Represents any Phantom Directory Number button (an additional DN).
Arial Bold	Represents telephone buttons.
Courier	Shows a computer keyboard entry or screen display.
“Type”	Indicates entry of a string of text.
“Press”	Indicates entry of a single key. For example: Type prog then press Enter .
Plus (+)	Shows a multiple PC keyboard or phone button entry. Entries without spaces between them show a simultaneous entry. Example: Esc + Enter . Entries with spaces between them show a sequential entry. Example: # + 5.
Tilde (~)	Means “through.” Example: 350 ~ 640 Hz frequency range.
➤	Denotes the step in a one-step procedure.
➤	Denotes a procedure.
■ 03	Used in a programming sequence to denote a variable LED button. A number on the black button represents a specific LED button.
• • •	Indicates continuation of a series of numbers entered.
See Figure 10	Grey words within the printed text denote cross-references. In the electronic version of this document (Library CD-ROM or FYI Internet download), cross-references appear in blue hypertext.

Related Documents/Media

Note Some documents listed here may appear in different versions on the CD-ROM, FYI or in print. To find the most current version, check the version/date in the Publication Information on the back of the document's title page.

The following documents and CD-ROMS can be used to reference further information about the Strata DK systems.

- ♦ **Digital Telephone User Guide** provides all the procedures necessary to operate Toshiba-proprietary digital telephones, including Liquid Crystal Display (LCD) features. It also includes instructions for using the add-on module/DSS console.
- ♦ **Digital Telephone Quick Reference Guide** provides a quick reference for frequently-used digital telephone features.
- ♦ **Digital Single Line Telephone User Guide** provides all the procedures necessary to operate Toshiba-proprietary digital single line telephones.
- ♦ **Electronic Telephone User Guide** explains all the procedures necessary to operate Toshiba-proprietary electronic telephones, including all LCD features. Does not apply to the Strata DK14 system. It also includes instructions for using the electronic DSS console.
- ♦ **Electronic Telephone Quick Reference Guide** provides a quick reference for frequently-used electronic telephone features. Does not apply to the Strata DK14 system.
- ♦ **Standard Telephone User Guide** explains all the procedures necessary to operate rotary dial and push-button standard telephones.
- ♦ **Strata AirLink External Wireless Handset User Guide** shows how to use the wireless handset configured to standard ports of the Strata DK telephone system and many non-Toshiba systems.
- ♦ **Strata AirLink External Wireless Quick Reference Guide** contains instructions for operation of commonly used Strata AirLink External Wireless Handset features.
- ♦ **Strata AirLink Integrated Wireless Handset User Guide** shows how to use the wireless handset configured to digital ports of the Strata DK telephone system.
- ♦ **Strata AirLink Integrated Wireless Quick Reference Guide** contains instructions for operation of commonly used Strata AirLink Integrated Wireless Handset features.
- ♦ **System Administrator Guide** gives instructions for the System Administrator to manage the system. Contains instructions for Station Relocation, System Speed Dial, and other features only activated by the System Administrator.
- ♦ **PC/Data Interface User Guide** explains all the procedures necessary to operate stand-alone data interface units while in the data mode for printer sharing and modem pooling. Also provides instructions on connecting to a Personal Computer with Telephone Application Programming Interface (TAPI).
- ♦ **Cordless Telephone User Guide** provides instructions on using the DKT2004-CT cordless digital telephone as a single unit or in conjunction with a digital telephone.
- ♦ **PC-DKT User Guide** provides installation and operation information for the Personal Computer Digital Key Telephone system.
- ♦ **Strata DK Feature Description Manual** describes each feature associated with the Strata DK424, DK40i and DK14. Also provides descriptions of compatible Toshiba-proprietary telephones and peripherals.

- ♦ **Keyprint 2000 User Guide** provides instructions for the Keyprint 2000 software printing package which allows you to print and store custom button label keystrips for Strata DK 2000-series 10-button or 20-button digital telephones, 20-button add-on modules, and 60-button digital DSS consoles.
- ♦ **Strata DK Programming Manual** provides all instructions necessary to program the system and system record sheets, including ACD.
- ♦ **Strata DK Installation & Maintenance Manual** provides installation instructions for configuring and installing the Strata DK14, DK40i and DK424. It also includes T1/DS-1 interface installation and configuration instructions, as well as fault finding flowcharts to troubleshoot the systems. An ACD Section provides instructions for installing ACD into the Strata DK424.
- ♦ **Strata AirLink External Wireless System Installation Guide** provides step-by-step hardware and software installation instructions. It includes examples of system configurations, information on performing a site survey, and troubleshooting techniques.
- ♦ **Hospitality Management Information System (HMIS) General Description** provides an overall view of the system's hardware, software, applications and features. The HMIS is a PC-based solution, designed to meet the specific operational needs of small- to medium-sized hotel/motels and includes both the PC and software.
- ♦ **Hospitality Management Information System (HMIS) User Guide** describes the product's many software features and gives step-by-step instructions for using them.
- ♦ **Strata DK Library CD-ROM** enables you to view, print, navigate and search publications for Strata DK14, DK40 and DK424 digital business telephone systems. It also includes Strata DK424 ACD Documentation, including the *Strata DK424 Call Center Solutions General Description*, *ACD Agent Guide*, *ACD Supervisor's Guide*. ACD Installation and Programming instructions are included in the *Strata DK Installation and Maintenance Manual* and *Programming Manual*.
- ♦ **Strata DK HMIS CD-ROM** contains a copy of all HMIS documentation/bulletins and enables you to view, print, navigate and search publications.
- ♦ **StrataControl CD-ROM** contains the StrataControl software, that enables viewing, downloading, editing, and uploading Strata DK programmed data on a PC. This software also provides a method of creating custom lists and user guides based on information from the Strata DK system. The CD-ROM contains the *StrataControl User Guide*.
- ♦ **DKQuote CD-ROM** contains the DKQuote application and the *DKQuote User Guide*, that shows how to use this interactive software to assist you with Strata DK Systems configuration and pricing worksheets.
- ♦ **DKAdmin/DKBackup CD-ROM** includes the programs that let you easily and quickly custom program and/or update the Strata DK14/DK40/DK424 with a user-friendly PC display. The CD-ROM also contains the *DKAdmin/DKBackup User Guide*, that explains how to use the DKAdmin/DKBackup interactive software applications. The current version does not support DK40i.

The following documentation and media applies to the Strata DK424 system only.

- ♦ **Strata DK424 Call Center Solutions General Description** provides a system overview, including hardware and feature information. Highlights the technology employed in operating the ACD Strata DK424 system.
- ♦ **ACD Agent Guide** describes the ACD agent feature operation along with step-by-step procedures for using features.
- ♦ **ACD Supervisor Guide** provides instruction on how to use the ACD supervisor features.

- ♦ **Insight DK CD-ROM** which includes Insight DK software, the upgrade to Insight DK Plus, Demo software, Insight DK documentation and training modules.
- ♦ **Insight DK Installation Guide** explains how to set up the network, install the server software, install clients and explains how the data files are organized.
- ♦ **Insight DK Supervisor Guide** provides instructions for using the Strata DK Insight and Insight DK Plus MIS for the Supervisor of a call center. Instructions for creating and using Real Time Displays, Reports, Alarms, and Wallboards are also included.
- ♦ **Insight DK inView Quick Reference Guide** provides instructions for viewing and customizing the on-screen wallboard and large character views of the real time call center data.
- ♦ **PC Attendant Console User Guide** explains the procedures necessary to operate the PC Attendant Console.
- ♦ **PC Attendant Console Quick Reference Guide** provides a quick reference for frequently-used PC Attendant Console features.
- ♦ **Call Center Viewer User Guide** describes how to install and operate the Call Center Viewer application on a PC. It explains how to view and customize ACD group and agent status information.
- ♦ **Software MIS (SMIS) Supervisor Manual** provides descriptions, examples, and instructions on using the Software MIS application.

For authorized users, Internet site FYI (<http://fyi.tsd.toshiba.com>) contains all current Strata DK documentation and enables you to view, print, and download current publications.

Numerical Program Listing

The following numerical listing gives you the Strata DK program numbers, titles and program types.

Program Number	Program Title	Initialization & Test	System	Station	Toll Restriction	Least Cost Routing	ACD	ISDN
00	Part 1: Software Check/Remote Maintenance Security Code Assignments	X						
00	Part 2: RCTU: Random Access Memory (RAM) Test	X						
01	Station Logical Port Display and/or Change			X				
02	Station Physical Port Display and/or Change			X				
03	Flexible PCB Cabinet and Slot Assignments		X				X	
*03	Cabinet Type Identification		X					
04	Station Logical Port Primary Directory Number Assignment			X				
*04	[PhDN] and Distributed Hunt [DN] for Internal Tie Line Calls			X				
05	Flexible Access Code Numbering		X					
*05	Call Park Pickup Abbreviated Dialing		X					
09	Built-in Auto Attendant Prompt/Station Assignments		X				X	
*09	[PDN], [PhDN], DH, ACD or Modem DID External Assignments		X				X	
10-1~3	System Assignments, Basic Timing		X					X
10-4	ACD Parameters and ISDN PRI and BRI T-wait Timers						X	X
*10-11	E911 Standard Telephone Ports Assignment		X					
*10-12	E911 Standard Telephone Ports Assignment		X					
*10-91	E911 Interdigital Timer		X					
*10-92	E911 Pause Before Send Timer		X					
11	ACD Timing Assignments						X	
*11-1~9	CAMA Trunk Assignments		X					
12	System Assignments		X					
*12	ANI Station Information			X				
13	Defining the Message Center			X				
*13	Station Group Information			X				
14-0	Loop/Ground Start CO Line Direct Ring to ACD Group Assignments						X	
14-1	ACD Agent Identification Code Assignments						X	

Program Number	Program Title	Initialization & Test	System	Station	Toll Restriction	Least Cost Routing	ACD	ISDN
*14-1	Auto Answer with Zip Tone Assigned to Agent ID						X	
14-2	ACD Supervisor Passwords						X	
*14-2	DID/Tie/DNIS/ANI Line After Shift and Overflow Substitution Destination						X	
14-3	Announcement / Music Port Assignments and Queue Pattern						X	
14-4	Queue Time Out Overflow Destination						X	
14-5	Overflow Point and Ring No Answer Routing Destination Assignments						X	
14-6	After Shift Service Destination						X	
14-71	Queue Size for Alarm (Immediate Assignments)						X	
14-72	Queue Size for Alarm 1						X	
14-73	Queue Size for Alarm 2						X	
14-8	Alarm Pattern Assignments						X	
14-9	Work Unit Assignments / Stroke Digit Length						X	
15	Ground/Loop/Tie/DID Line Options		X				X	
*15	CO Line Tenant Assignments		X					
16	Assign CO Line Groups (Dial 9, 81~84, 81~88 or 801~816)		X					X
*16	ISDN Trunk Group Type Assignment							X
17	DID/Tie Line Options		X				X	
*17	DID Intercept Port Number		X					
18	Agent ID Code Name for MIS Assignments						X	
19	Alternate Background Music (BGM) Source Slot Assignment		X					
20	Computer Interface Unit and Data Interface Unit Configuration			X				
21	Modem Pool Port Assignments			X				
22	Computer and Data Interface Units (DIU) Station Hunting (Data Calls)			X				
23	Built-in Primary Auto Attendant Announcement Device Assignments		X					
24	Built-in Secondary Auto Attendant Announcement Device Assignments		X					
25-1	Incoming Built-in Auto Attendant Call Overflow Time		X					
26	Built-in Auto Attendant Camp-on-Busy Time			X				
27	Digital Telephone Handset/Headset Receiver Volume Level			X				
28	DSS Console/Attendant Telephone Assignments			X				
29-1~8	DSS Console Button Assignments Console Number			X				
*29	Add-on Module Button Assignments			X				
30	Station Class of Service			X				
*30	Telephone Group Page Assignments			X				
31	Station Class of Service			X				
*31	Group Pickup Assignments			X				
32	Automatic Preference			X				
*32	RS-232 (SMDI or Toshiba Proprietary) Voice Mail Message Center Port			X				
33	Station Intercom and Directory Number Hunting (Voice Calls Only)			X				
*33	Phantom Directory Number [PHDN] Owner Telephone Assignments			X				



Program Number	Program Title	Initialization & Test	System	Station	Toll Restriction	Least Cost Routing	ACD	ISDN
34	Hold Recall Timing			X				
*34	Station Class of Service (Standard Telephone Camp-on Busy and Busy Override Tone Option)			X				
35	Station Class of Service			X			X	
36	Fixed Call Forward (Voice Calls Only)			X				
*36	System NT Button Lock Password Changing Station Assignment			X				
37	CO and Tie Line Ring Transfer (Camp-on) Recall Time			X				
*37	Park Recall Timing			X				
38	Digital and Electronic Telephone Keystrip Type			X				
39	Flexible Button Assignment			X			X	
40	Station CO Line Access				X			
*40	Distributed Hunt Group Member Assignments			X				
41	Station Outgoing Call Restriction				X			
*41-1	T1 Span Frame and Coding Assignments			X				X
*41-2	T1 Channel Assignments			X				X
*41-3	T1 Span Transmit (Send) Level Pad Assignments			X				
*41-4	T1 Span Receive Level Pad Assignments			X				
42-0	CO Line to PBX/Centrex Connection				X			
42-1~8	PBX/Centrex Access Code				X			
*42-1	T1 Span Primary Reference Assignments			X				
*42-2	T1 Span and Secondary Timing (Backup) Reference Assignments			X				
43	0 + Credit Card Dialing Option				X			
*43-1~3	D-Channel Control and NFAS Assignments							X
44-1~8	Toll Restriction Class (1-8)/Traveling Class Override Codes				X			
44-91~93	Emergency Bypass of Forced/Verified Account Codes				X			
*44	BRI Service Profile Identifier (SPID) Parameters							X
45-1	LCR/Toll Restriction Dial Plan				X		X	
45-2	Toll Restriction Disable				X			
45-3-6	Special Common Carrier (SPCC) Numbers and Authorization Code Digit Length				X			
45-8-9	Toll Restriction Override Code				X			
*45-1	Toll Restriction for Office Codes in Local and All Other Area Codes				X			
*45-2	LCR/Toll Restriction Bypass for Special Numbers That Do Not Begin with * or # Digits				X		X	
*45-3	LCR/Toll Restriction Bypass - Special Numbers Beginning with * or #				X		X	
*45-4	LCR/Toll Restriction Bypass				X		X	
46-2~4	Toll Restriction Allowed/Denied Area Codes Assigned by Class				X			
46-6~8	Toll Restriction Allowed/Denied Office Codes Assigned by Class for Local Calls				X			
46-10~80	Toll Restriction Class Parameters				X			

Program Number	Program Title	Initialization & Test	System	Station	Toll Restriction	Least Cost Routing	ACD	ISDN
46-11~81	Toll Restriction Class Parameters				X			
46-21,46-31								
46-41,								
46-51,	Toll Restriction Classes 2-8				X			
46-61,								
46-71,								
46-81								
47	Toll Restriction Exception Office Codes Assigned by Area Codes			X				
48	Station Toll Restriction Classification				X			
50-1	Least Cost Routing Parameters					X		
50-2	Least Cost Routing Home Area Code					X		
50-31~35	Least Cost Routing Special Code					X		
50-4	Least Cost Routing Long Distance Information (LDI) Plan Number					X		
50-5	Least Cost Routing Local Call Plan Number					X		
50-6	Least Cost Routing Dial Zero Time-out					X		
*50	Caller ID (RCIU/RCS) Circuit Assignments to CO Line (RCOU, RCOS, RGLU, and PCOU)		X					
51	Least Cost Routing Area Codes					X		
*51	Station Memory Allocation to Store Caller ID and/or ANI Numbers on Abandoned/ Unanswered Calls			X				
52	Least Cost Routing Code Exceptions for Specified Area Code					X		
*52	Caller ID or ANI Ground/Loop/Tie/DID Line Circuit Abandoned Call Number Store Station Owner Assignments			X				
53	Least Cost Routing Schedule Assignments for LCR Plans					X		
54	Least Cost Routing Route Definition Tables					X		
55-0	Least Cost Routing Modified Digits Table (Delete)					X		
55-1~2	Least Cost Routing Modified Digits Table (Add)					X		
56	Least Cost Routing Station Group Assignments					X		
58-1	Attendant Console Overflow Timer			X				
58-2	Attendant Console Display Type, Answer Button Operation, and Call Waiting Tone			X				
58-4	Attendant Console Answer Button Priority Assignments			X				
58-5	Attendant Console Overflow Destination Assignments			X				
59	Attendant Console Flexible Button Codes			X				
60-1	SMDR Data Output Options			X				
*60	BRI Assignment for Line/Station Operation							X
60-2~7	SMDR Output/Account Code Digit Length		X					
60-8	Call Forward External (Remote Change, Security) ID Code		X					
*61	Analog Trunk Bearer Service							X
*62	Non-ISDN Station Bearer Service							X
*63	Timer for Sending Dialed Digits							X
*64-1	Direct Inward Dialing Parameters							X

Program Number	Program Title	Initialization & Test	System	Station	Toll Restriction	Least Cost Routing	ACD	ISDN
*64-2	Number of DID/DNIS Digits for Trunk Groups							X
*65	Call by Call Channel Group Assignment							X
*66-1	Channel Group Number Parameters							X
*66-2, *66-4	Call-by-Call Trunk Group Codes and Network ID							X
*66-3	Channel Group/Trunk Parameters							X
*66-5	Line Directory Number (LDN) Registration							X
*66-6	LDN/Trunk Group to Channel Group Assignments							X
*66-7	LDN/Trunk Group Assignments							X
*67-1	Trunk Group Call Direction							X
*67	Call Types for ISDN Trunk Group Supported							X
*67	Call Types for ISDN Trunk Groups							X
*67	ISDN Trunk Group Maximum Channel Reservation							X
*68-1	Calling Number ID Presentation Parameters							X
*68-2	Outbound CNIS Parameters							X
69	Verified Account Codes		X					
*69-1	CNIS Presentation Parameters							X
*69-2	Special Number Assignment							X
70	Verified Account Code Toll Restriction Class Assignments		X					
71-0	DID/Tie/DNIS/ANI Lines		X					
71-1~3	DNIS Number and ANI Line Routing Assignments		X					X
71-4	DNIS Number and ANI Only Lines Voice Mail (VM) ID Assignments		X					
71-5	DNIS Number Name Display		X					
*71~*73	[DN] to [DN], Tie to [DN], and DID to [DN] Ringing Assignments			X				
72	DNIS Network Table Assignments		X					
74	System NT Button Lock Password		X					
76-1	TSIU, WSIU, RSIU, RSIS, and RMDS Port Assignments		X					
76-2	TSIU, WSIU, RSIU, RSIS, and RMDS Port Assignments		X					
77-1	Peripheral Options RSIU, RSIS, RMDS, IMDU, PIOU, PIOUS, and PEPJ		X					
77-2	Door Phone Busy Signal/Door Lock Assignments			X				
77-3	Night Ringing Over PIOU External Page Zones		X					
77-4	RSIU Open Architecture Interface (OAI) Data Output Assignments (Caller ID/DNIS/ANI Open Architecture Output Options)		X					
78	Ground and Loop Start CO Line Special Ringing Assignments, DISA, IMDU, RMDS, and Night Ringing Over External Page		X					
79	Door Phone Ringing			X				
*79	Door Phone to [DN] Flashing Assignments			X				
80	Electronic and Digital Telephone Ringing Tones (CO Line Calls)			X				
*80	Call Forward Station Ring Assignment (Release 3.2)			X				

Overview

Program Number	Program Title	Initialization & Test	System	Station	Toll Restriction	Least Cost Routing	ACD	ISDN
*81, *84, *87	Ground/Loop Start/ CO Line to Directory / Number Button LED Flash Assignments		X					
81~89	Ground/Loop Start/CO Line/Station Auto Attendant, Attendant Console, and Distributed Hunt Group Ringing Assignments		X					
90	Initializing Program 00~*99	X						
91-1	Automatic PCB Recognition/Port Renumber	X						
91-2	Data Transfer from Temporary Memory to Working Memory	X						
91-9	System Initialization	X						
92	Initializing Speed Dial Numbers, VM ID Codes, Character Message Memory Timed Reminders, Digital Telephone Volume, Called ID, ANI, and Call Forward Backup RAM	X						
93	CO Line Identification		X					
97	Printing Program Data through SMDR		X					

Alphabetical Program Listing

This alphabetical program listing gives you features/topics and the corresponding Strata DK program numbers that relate to the topic

Feature or Topic	Program Number
Account Codes	15, 70, 39, 69, 30, 60
ACD	03, 09, *09, 10-4, 11, 14-0, 14-1, *14-1, 14-2, *14-2, 14-3, 14-4, 14-5, 14-6, 14-8, 14-9, 14-71, 14-72, 14-73, 15, 17, 18, 35, 39, 71-1~3
Add-on Module	*29
Alarm Sensor	39
All Call Voice Page	05, 10-2, 31, 39
Alert Signal	39
Alternate Point Answer	10-1
Amplified Conference (External)	10-2, 10-3
ANI	10-3, 20, 39, *51, *52, 59, 60-1, 71-0~5), 72, 77-4
Attendant Console	03, 58-1, 58-2, 58-4, 58-5, 59
Auto Attendant (Built-in)	09, 10-3, 23~26, 78, 81~89
Automatic Busy Redial (ABR)	10-1, 16, 30, 39
Automatic Callback	05, 39, 10-2
Automatic Hold	35
Automatic Hold Recall	34
Automatic PCB Recognition	91
Automatic Preference	32
Automatic Release Hold/VM Port	15
Background Music	05, 10-2, 19, 39
Busy Override	05, 31
Busy Station Transfer/Ringing	35
Cabinet Type Identification	*03
Call Blocking (VM Ports)	31
Call Forward Blocking with Handsfree	35
Call Forward External	05, 12, 15, 41, 60-8
Call Forward Station Ring (ground/loop start lines)	*80
Call Forwarding (all types)	10-2, 36, 39, 40
Call Park Orbits	*05, *37, 39, 58-4, 59

Feature or Topic	Program Number
Call Pickup	10-1, *15, *31, 39
Call Transfer with Camp-on	10-1
Caller ID	03, 10-3, 20, 39, *50, *51, *52, 59, 60-1, 77-4, (DK 14 only: 76-1, 76-2)
Camp-on	10-2, 31, *34, 37
Centrex/PBX Compatible	42-0, 42-1~8, *45
Centrex Ringing Repeat	10-1
CO/Centrex/PBX Feature Buttons	39, 42-0, 42-1~8
CO Line Access	39, 40, 41
CO Line Alpha Identification	93
CO Line Groups	16
CO Line Reseize Guard Time	10-1, 42-0
CO Line Queuing	05, 16
CO Line Ringing	78, *80, 81~89, *81, *84, *87
Conferencing	10-1, 10-2, 10-3, 15
Credit Card Calls (0 + dialing)	43, 60-7
Data Port/DIU Configuration	20, 21, 22, 39
DAY/NIGHT Mode	10-2, 78, 81~89, *80, *81, *84, *87
Delayed Ringing	*80, 82, 83, 85, 86, 88, 89
Digital Telephone	03, 27, 30, 38, 39, 80, 92-5
Direct Inward Dialing (DID)	*09, 15, 17, *17, 30, 71, 72
Direct Inward System Access (DISA)	15, 10-1, 60, 78
Direct Station Selection Buttons	29-1~29-8, 39
Directory Number	04, *04, *33, 39, 71-(0-3), *71, *72, *73, 79, *79, 81-89, *81, *84, *87
Directory Number Buttons	39
DISA Code Revision	04, 05, 30, 40, 41
Distinctive Station Ringing	10-2, 80
Distributed Hunt	*04, 33, *40, 71-(0-3), 81-89, *81, *84, *87
DKAdmin	77-1

Overview

Alphabetical Program Listing

Feature or Topic	Program Number
DNIS	12, 17, 20, 60-1, 71-(0-5), 72, 77-4
Do Not Disturb	39
Do Not Disturb Override	05, 30
Door Lock Control	39, 77-1, 77-2
Door Phones	05, 77-1, 77-2, 79, *79
DSS Console Features	03, 28, 29-1~29-8, 10-2
DSS DKT/EKT	28
DTMF and Dial Pulse Assignments	10-1, 15, 30, 39
DTMF Receiver (QRCU3, K5RCU, RRCS) Operation	03, 12, 15
DTMF Signal Time, CO lines (80/160 ms)	10-1
DTMF Signal Time, VM Ports (80/160 ms)	10-2
DTMF Tone/No Tone/Padded Tone Return	10-2
DTMF Continuous Tone (2000-series DKT)	35
Emergency Numbers	44-91~93
Enhanced 911 (E911)	*11-0, *11-1, *11-2, *11-5, *11-6, *11-8, *12, *13
Exclusive Hold	10-1
Executive Override	05, 10-2, 30
External Page Interface	10-2, 77-1, 77-3, 78
External Zone Paging	05, 77-1, 77-3
Fixed Call Forwarding	36, 39
Flash Key Assignment	39
Flash Timing	12
Flexible Access Code Numbering	05, *05
Flexible Button Assignments	38, 39
Flexible Directory Numbering	04, *04, 05, 39
Flexible Line Ringing Assignment	81~89
Flexible PCB Slot Configuration	91-9, 91-1, 03
Forced and Voluntary Account Codes	15, 30, 60, 39
Group Paging	05, *30
Group Pickup	*31

Feature or Topic	Program Number
HMIS	03, 50-1, 50-2, 50-3, 50-4, 50-5, 50-6, 51, 52, 53, 54, 55-0, 55-1/2, 56, 60-2, 60-3, 76-1
ISDN	10-1, 10-4, 16, *16, *42-1, *42-2, *43-1~3, *44, *60, *61, *62, *63, *64-1, *64-2, *65, *66-1~7, *67-1~4, *68-1, *68-2, *69-1, *69-2
Handsfree Answerback	17, 31
Hold/Park Recall Timing	34
Hunting, Station	10-2, 22, 33
Immediate Transfer with Soft Key	10-2
Initialization (system programs)	91-9, 91-1, 90
Initialization (system/personal memory)	91-9, 92
Keystrips	38
Least Cost Routing	*45-2, *45-3, *45-4, 50~56
Liquid Crystal Display Features	10-2, 35, 39
Logical Port Display/Change	01
RAM Memory Test	00 (Part 2)
Message Center	13, *32
Message Waiting/Flash	05, 10-2, 12, 35, 39
Microphone Control	30, 39
Modem Pool Port Assignment	20, 21
Music-on-Hold	77-1
Night Pickup Code	05
Night Ringing over External Page	77-1, 77-3, 78
Night Transfer	29, 39, 59, 77-1, 78
Night Transfer Lock	*36, 39, 59, 74
Off-hook Call Announce	03, 30, 31, 39
On-hook Dialing	32
Outgoing Call Restriction	41
Paging-DKT/EKT (Also see Group Paging and External Paging)	31, 39
Passwords-Remote Programming	00
Pause Timing	12, 39
PBX Access Code	42-1~42-8
PBX Backup	42-0

Feature or Topic	Program Number
Physical Port Display/Change	02
Pooled CO Lines	16, 39
Pooled Line Buttons	16, 39
Pooled Line LED – No Flash	31
Port/Station Number Assignment	04
Privacy/Non-Privacy	31, 30, 39
Privacy Override	10-2, 30, 31
RAM Test (see Memory Test)	00 (Part 2)
Redial Last Number	39
Remote Administration and Maintenance	00, 03, *09, 77-1, 78
Repeat Last Number Dialed	39
Ring Transfer	10-1, 37
Ringling Repeat	10-1
Ring Tones	80
Ring Flash Assignments	*71~*73, 81~89, *81, *84, *87
Ringling Line Preference	32, 81~89
RS-232 Interface	03, (41, 42, 43, 49), 20, 76, 77-1, 77-4
Saved Number Redial	39
Security Code (CF-EXT.)	60-8
Security Code (DISA)	05, 30, 60-6
Security Code (R. Maintenance)	00
Slot Assignment	03
Software Version	00
Speakerphone Assignment	30
Speed Dial	10-1, 30, 39
Speed Dial Clear	92
Speed Dial Entry Timeout	10-3
Standard Telephone Options	10-2, 30, *34, 35
Station Class of Service	30, 31, *34, 35
Station Hunting (Data Calls)	22
Station Hunting (Voice Calls)	33
Station Message Detail Recording (SMDR)	03, 60-1~60-7, 76, 97
Station-to-Station Volume	10-1
SMDI VM Interface	03, 10-2, 10-3, 13, 31, *32, *40, 76

Feature or Topic	Program Number
T1 Assignments	*41, *42
Tandem CO Line Connections	10-1, 15
Tenant Service	*15, *36, 39, 77-3, 74
Tie Lines	03, 04, 15, 17, 30, 37, 71, 72
Toll Restriction	10-1, 30, 35, 41~48, *45-1~3
Toll Restriction Override	10-1
Toll Restriction Override Code Revision	30
Toshiba Proprietary VM Interface	03, 10-2, 13, *32
Transfer Privacy	10-1
Traveling Class	44-1~8
Traveling Class Code Revision	30
Verifiable Account Codes	15, 30, 39, 60, 69, 70
Verifiable Account Codes Revision	30
Voice Mail Interface	10-2, 31, 33, 39
Voice or Tone Signaling	05, 10-1, 10-2
Volume Reset (Digital Telephones)	92-5
Volume Set (Digital Telephones)	27
Voluntary Account Codes	39

How to Program a Strata DK System

Fill out the record sheets that are provided, then enter this data using a 20-button LCD digital (DKT) or electronic (EKT) telephone. Strata DK enables you to enter data from an on-site or off-site PC with Toshiba DKAdmin software. Toshiba highly recommends this easier method of programming.

DK14/DK40i: the programming telephone must be any 20-button LCD DKT (or EKT, DK40i only). The DKT must be connected to a Base KSU, PDKU, RDSU, QCDU, or KCDU digital port. An EKT must be connected to a PEKU port.

DK424: the programming telephone must be a 20-button LCD DKT or EKT connected to circuit 6 of a PDKU or PEKU installed in cabinet slot 11 and/or slot 12.

Note Telephones connected to an RDSU or PESU cannot be used to program DK424.

Programming Section Layout

Each programming section within a chapter begins with the program’s number and title, followed by processor and program type, initialized default, program sequence, then record sheets. A program overview and additional program information are given after the record sheets (see Figure 1-1).

Note Some common program sections also include examples for your convenience.

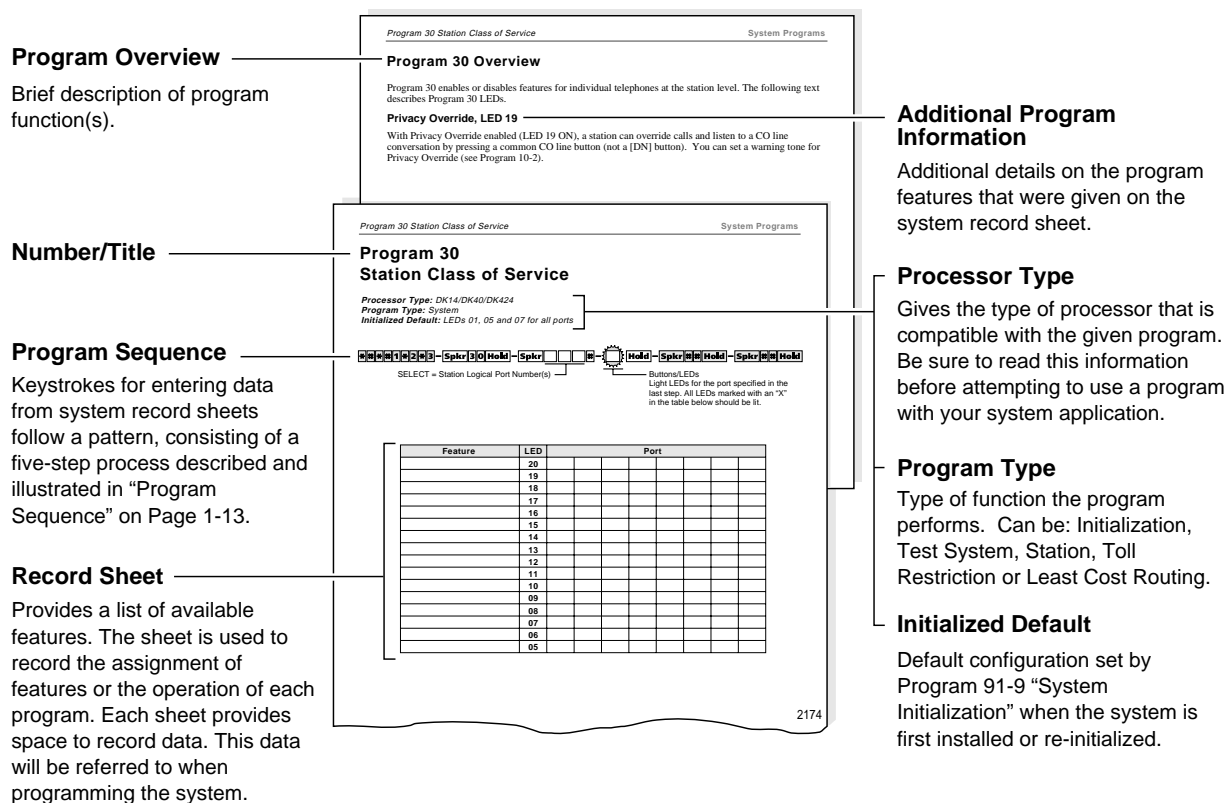



Figure 1-1 System Record Sheet Sample

Program Sequence

Detailed data entry instructions are on the top of each record sheet (see Figure 1-2).

► To use the program sequence on the record sheet

1. From the programming telephone, enter the programming mode by pressing a series of shaded buttons. The shaded buttons represent the entry sequence for all programs.
2. Enter the program number. This sequence is unique for every program. The buttons are white on every record sheet.
3. Enter the program data. Again, this sequence is unique for every program. The buttons are white on every record sheet. To make another entry, repeat this step until ready to exit the current program.
4. Exit the current program. This sequence never changes, and the buttons are always shaded. Upon exiting the current program, repeat Step 2 to enter another program, or continue with Step 5 to exit the programming mode entirely.
5. Exit the programming mode by pressing the same button sequence as in Step 4. This sequence also never changes and is always shaded.

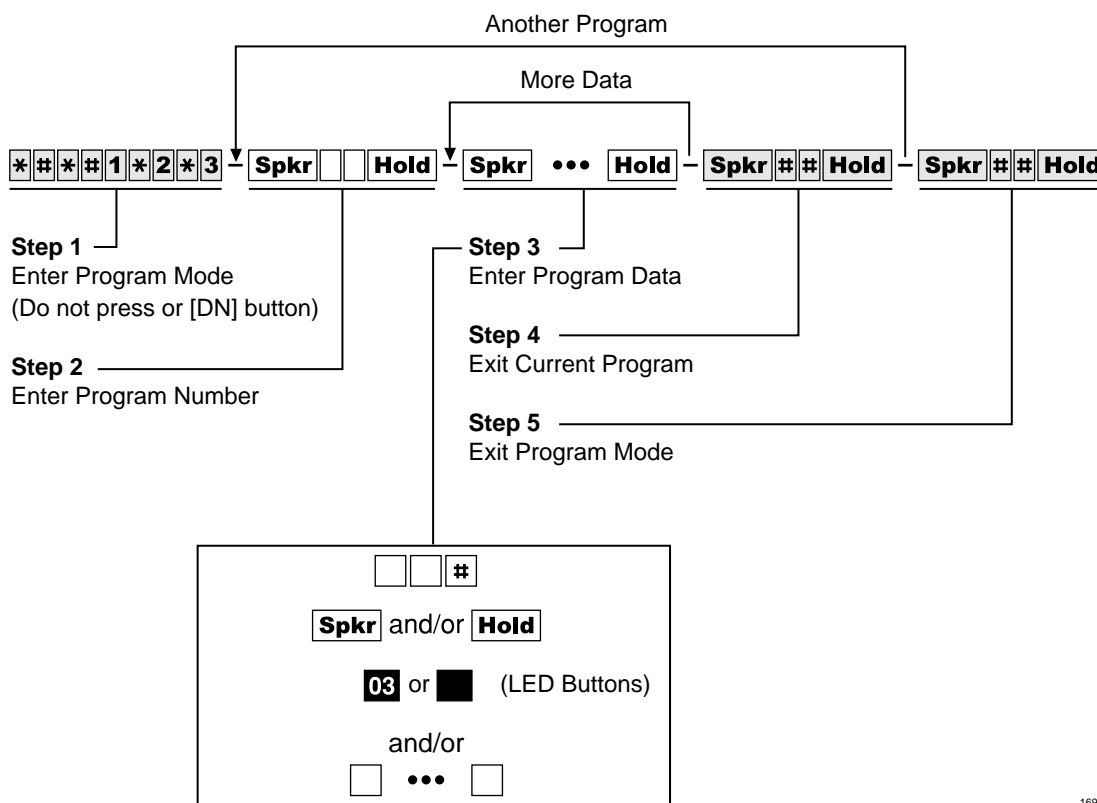

1697

Figure 1-2 Programming Button Sequence Overview

Programming Data Variations

There are two different ways to enter data in Step 3 (Figure 1-2) of a program: pressing the buttons on the dial pad and pressing the LED buttons. Many programs are multidimensional and involve both types of entry.

Simple Programs

Simple programs such as Program 00, only require data to be specified through the dial pad. Data entered from the dial pad displays on the programming digital or electronic telephone's LCD, along with prompts and confirmations.

Multidimensional Programs

Once a program number is entered, the first dimension (usually a CO line number, a station port number, or a range of ports) must be specified. Upon specifying this first dimension on the dial pad, programming button LEDs 01~20 light in the default configuration.

The status of each LED can be changed by pressing its associated button. Pressing the button while its LED is lit turns the LED OFF; pressing the button while its LED is OFF turns the LED ON. An example of multidimensional programming is Program 30.

Range Programming

Data can be entered for a range of stations, [DN] reference ports and CO lines with some programs.

► To enter a range

- Enter a “*” between the starting point of a range and the ending point of a range.

For example, to program the station range of 001~010 for Program 35, press **001*010**.

- ✦ When programming a range of station ports, the station's programming LEDs indicate whether the data programmed matches for all items in the range:
- ✦ LED ON: Indicates that all ports in the range are programmed with the data choice that lights the particular LED.
- ✦ LED OFF: Indicates that all ports in the range are programmed with the data choice that does not light the particular LED.
- ✦ LED Flashing: Indicates that data is currently inconsistent for all ports in the range. Some may be programmed with the LED ON; some with the LED OFF.

CO Line Programming

Since the programming telephone only has 20 buttons, data can only be entered for 20 CO lines at a time.

► To program another range

- Press the **Page** or **Scroll** button below the LCD.

For example, to change from one range to another in Program 15, enter the program code, then press **Scroll** to advance or **Page** to go back to another range.

If the programming telephone is a digital telephone, all CO lines within a range can be activated or deactivated for a feature by pressing the **Vol ▲/Vol ▼** buttons.

- Press **Vol ▲** to turn all LEDs ON; press **Vol ▼** button to turn all LEDs OFF.

► To check the status of a CO line in Program 15

1. Press the **Mode** button (below the LCD) after entering the program code.
2. Then enter the CO line number to be verified.
3. Press **#** to display the status of the CO line and to advance to the next CO line.

Programming LED Buttons Keystrip Template

You place a special buttonstrip template (see Figure 1-3) over the 20 flexible feature buttons of the programming telephone. The template assigns a series of numbers to each of the 20 buttons that correspond with tables found on the record sheets for programming purposes.

Since each button represents more than one CO line, depending on the CO line range selected, the template assigns more than one number to each button.

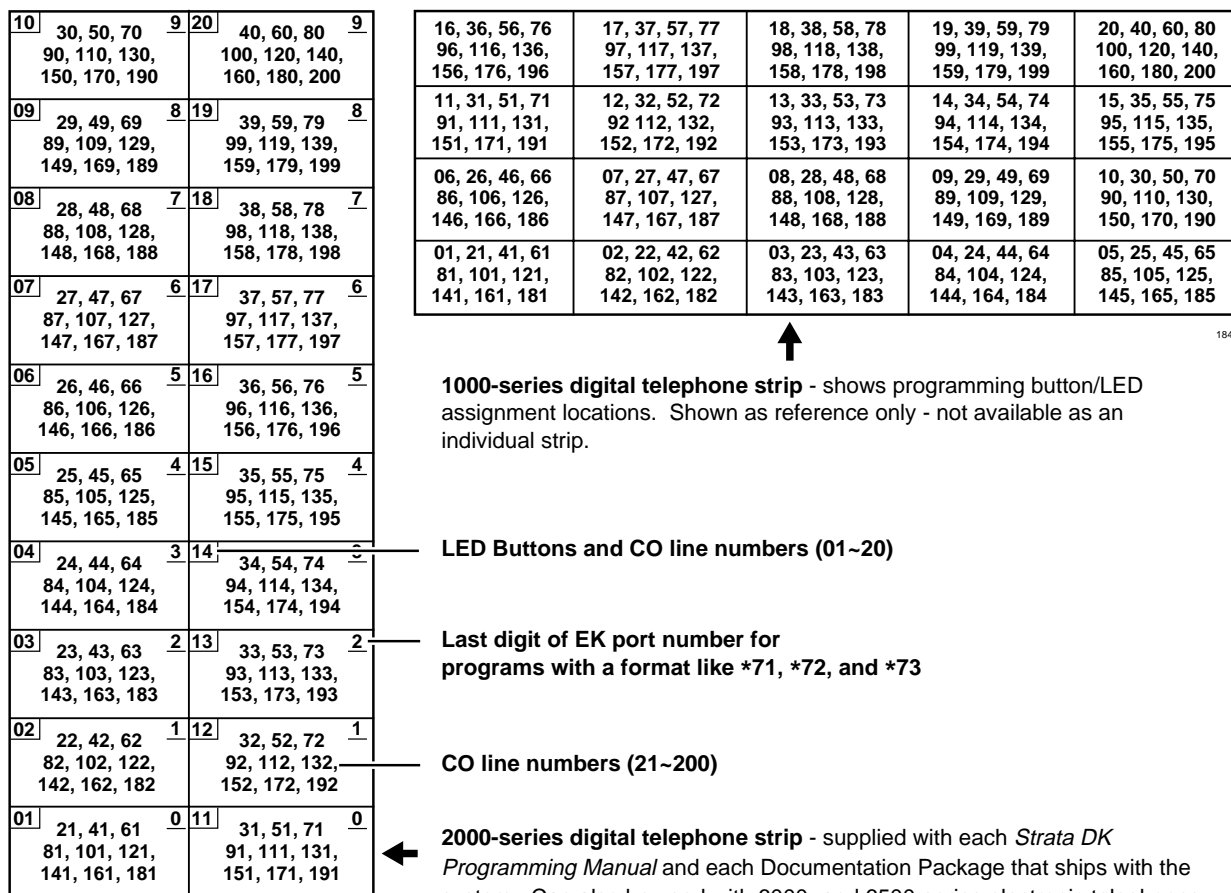


Figure 1-3 LED Buttons Programming Keystrips

First-time Programming

Follow these general procedures the first time you install a system or after major hardware changes and/or you need to start from scratch.

Step 1: Check Minimum Hardware Requirements

A system must have the following minimum hardware installed for programming, as described in the Installation chapters of the *Strata DK Installation and Maintenance Manual*.

► To check hardware requirements on the DK14 and DK40i

1. Make sure the base cabinet power supply was tested and is functional.
 2. Make sure a 20-button digital LCD DKT telephone (equipped with a programming template) is connected to any digital telephone circuit (Base KSU, PDKU, QCDU, KCDU or RDSU digital port); or make sure that a 20-button electronic LCD EKT telephone is connected to a PEKU electronic port (not PESU).
- ✦ **DK14 and DK40i:** make sure the Base KSU's BATT jumper is in the ON position.

► To check hardware requirements on the DK424

1. Make sure the base cabinet power supply was tested and is functional.
2. If using an RCTUE/F, remove the small jumper PCB (MBJU) from the front side of the DK424 base unit backplane (between slot R11 and the RCTU slot. All other RCTUs require the MBJU PCB.
3. Make sure an RCTUA, RCTUBA, RCTUC/D or RCTUF is installed and that its BATT jumper is in the ON position.
4. Make sure a PDKU or PEKU, is installed in Slot S11 or S12 in the base cabinet (S11 if RSIU is not installed, S12 if RSIU is installed in S11).
5. Make sure a 20-button LCD DKT or EKT telephone (equipped with programming template) is connected to physical port 005 and/or port 013 (PDKU or PEKU - circuit 6/slot 11 and/or circuit 6/slot 12). Do not use RDSU or PESU.

Step 2: Initialize the System

1. From a 20-button LCD programming telephone, or from DKAdmin on a PC, run Program 91–9 *twice* in succession to initialize the system. At this point it is not necessary that all PCBs are installed. However, if they are, Program 03 codes are automatically assigned to the appropriate slots.

CAUTION! If you run Program 91-9 while the system is in service, all program data is erased and all calls are dropped.

Program 91-9 sets the following elements to initial default status:

- ✦ Data for Programs 00~*99
- ✦ Speed Dial Memory
- ✦ Logical/Physical Port Locations
- ✦ Voice Mail Identification Codes
- ✦ Character Message Memory

- ✦ Timed Reminders
 - ✦ Digital Telephone Volume Levels
 - ✦ Call Forward Memory (Power OFF, then ON).
 - ✦ Station Message Waiting Status
 - ✦ Caller ID Lost Call Memory
2. Install all PCBs. Run Program 91-1 to inform the software of the system hardware configuration.

Step 3: Run Programs 03 and 19-1

1. Run Program 03 for all PCBs that have options.
2. Run Program 19-1 to inform the software of the system option Alternate BGM slot.

Step 4: Run Program 00

- Run Program 00 - Part 1 to assign remote maintenance security codes. Run Program 00 - Part 2 to test the processor and RAM.

Step 5: Set Date, Time and Day

You can set date, time and day anytime - individually or all.

1. Use DKT or EKT assigned to logical Port 000 or attendant console.
2. Make sure the handset is on-hook.
3. Set the date:

[PDN] # 6 5 1 - - **Redial**

Date in year/month/day format (YYMMDD). If month or day is single digit, precede with a zero.

4. Set the time:

[PDN] # 6 5 2 - - **Redial**

Time in hours/minutes/seconds format (HHMMSS from 000000 to 235959). If any of these values is single digit, precede with a zero.

5. Set the day:

[PDN] # 6 5 3 - - **Redial**

Enter the digit for today's day:

- 1 = Sunday
- 2 = Monday
- 3 = Tuesday
- 4 = Wednesday
- 5 = Thursday
- 6 = Friday
- 7 = Saturday

Step 6: Run Additional Programs as Required

Programming Examples

Some commonly used programs have explicit examples (listed below). Refer to these pages to help familiarize you with running these programs.

Program	Page
Program 91-9—System Initialization	2-2
Program 90—Initializing Programs 00~*99	2-4
Program 91-1—Automatic PCB Recognition and Logical/Physical Port Initialization	2-6
Program 92—Initializing Speed Dial Numbers, VM ID Codes, Character Message Memory, Timed Reminders, Digital Telephone Volume, and Call Forward Backup Memory	2-9
Program 00—Software Check	2-12
Program 03—DK14 Slot Assignments and DK14/DK424 Flexible PCB Slot Assignments	3-3, 3-4, 3-6
Program 04—Station Logical Port Primary Directory Intercom or Number Assignment	3-12
Program 30—Station Class of Service	3-73
Program 33—Station Hunting	3-90

This chapter gives you information on the Strata DK's Initialization and Test programs. The programs in this chapter are not given in numerical order, rather in order of importance. These programs include:

- ♦ **Program 91-9** – System Initialization
- ♦ **Program 90** – Initialize Programs 00~99
- ♦ **Program 91-1** – Automatic PCB Recognition and Port Renumber
- ♦ **Program 91-2** – Data Transfer from Temporary Memory to Working Memory
- ♦ **Program 92** – Initializing Misc. Backup RAM
- ♦ **Program 00** – Part 1: Software Check
- ♦ **Program 00** – Part 2: RCTU RAM Test


Examples are also given for these programs - except Programs 91-2 and Program 00 - Part 2.

Program 91-9 – System Initialization

Processor Type: DK14, DK40i, All RCTUs

Program Type: Initialization

Initialized Default: See individual programs

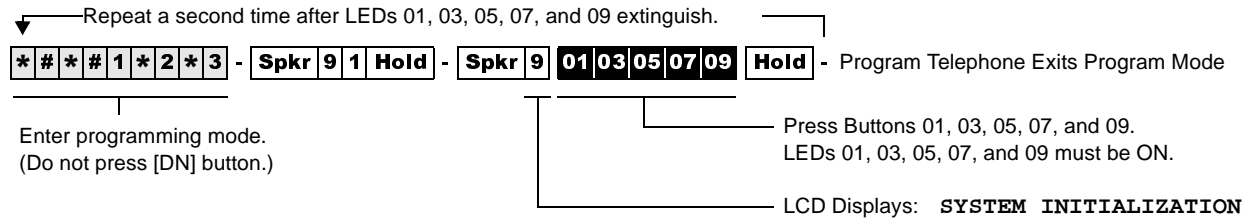

Program 91-9 Overview

Note Always run Program 91-9 before entering the customer database when first installing a system or when its software must be set to the default configuration, but not while system is in service.

CAUTION! If you run Program 91-9 while the system is in service, it will erase all program data and drop all calls.

Running Program 91-9 also runs Program 03 and assigns codes to all PCBs (except options) installed. It also erases all Program 03 option codes for piggyback PCBs, DSS consoles, RRCS, etc., except the RCOS PCB Code (17).

Program 91-9 erases all random or programmed data in all Strata DK software programs and sets all program data to the default value. It automatically runs all other initialization Programs 90-00~*99, 91-1, and 92-1~9. It also brings back logical and physical ports to their initialized settings.

If you are installing the system processor(s) for the first time, after initializing the system, test the RAM: run Program 00 Part 2.

CAUTION! Running Program 00 Part 2 drops all calls in progress and interrupts telephone service for 15 seconds. This test will not erase programmed customer data.

Important! Do not use Program 91-9 if you are only making minor programming changes and system programming is basically correct.

Note Run Program 03 after Program 91-9 for: PCBs with options such as Dual-tone Multi-frequency Receivers K5RCU, QRCU3, RRCS, and DSS consoles, etc.

...or if entering a customer database into system RAM memory before other system PCBs (stations, lines, options) are installed. Program 03 identifies which universal and option PCBs (e.g., RRCS, etc.) are to be installed in each cabinet slot.

Program 91-9 Example

Action (press buttons + LED Buttons)	LCD Response
1. Use the programming LCD electronic or digital telephone. (See "Programming Examples" on Page 1-16.)	No. N-N ¹ Jan 20 Sun 06:43
2. ***#1*2*3 Enter programming mode. (Do not press [DN] button.)	Program Mode
3. Spkr (Speaker) 91 Hold Access Program 91. System beeps after Spkr (Speaker) is pressed to indicate program number may be entered.	Program = 91 Data Store
4. Spkr (Speaker) Prepare the system for a station port selection.	91 Select =
5. Press 9	System Initialization
6. Press LED Buttons 01, 03, 05, 07, and 09 (LEDs turn ON)	System Initialization
7. Press Hold The telephone will exit the programming mode and button LEDs 01, 03, 05, 07, and 09 will go out after a short delay. Make sure all LEDs go out before proceeding to Step 8.	No. N-N (Month Day Time)
8. Repeat Steps 1~7 a second time.	No. N-N (Month Day Time)


1. N-N is the Program Telephone [DN].

Program 90 – Initialize Programs 00~*99

Processor Type: DK14, DK40i, All RCTUs

Program Type: Initialization

Initialized Default: See individual programs

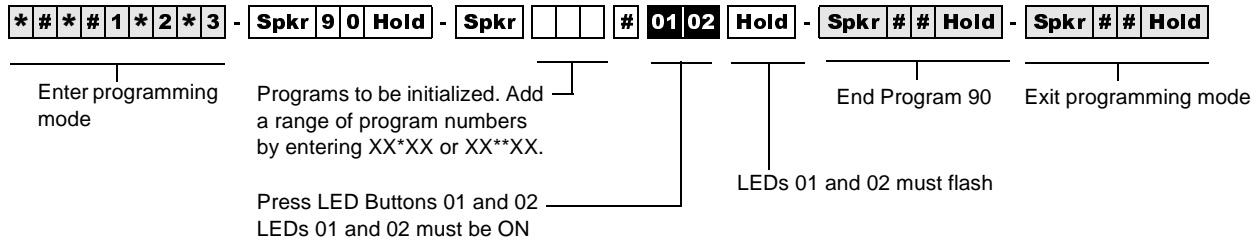

Program 90 Overview

Program 90 enables you to clear all customer data and initialize individual programs or range of programs.

Important! *When installing the system, you must run Program 91-9 which runs Program 90 (before running any other program); if you do not, the system could begin to operate erratically.*

Notes

- Running Program 91-9, automatically runs Program 90.
- To initialize all programs without dropping calls or erasing user names, speed dial numbers, voice mail ID codes, etc., enter **00* *99** as “Programs to be initialized.”
- Each “*” program record sheet immediately follows the program record sheet having the same number (example: *31 follows 31 record sheet). However, in system memory all “*” programs follow Program 99. Therefore, “*” program ranges must be initialized separately from non-star programs unless initializing all system Programs (00**99).
For example, to initialize Programs 30, *30, 31, *31, and 32: initialize the range (30*32), for Programs 30, 31, 32; and the range (*30**31), for Programs *30 and *31.
- If you are installing the system for the first time, run Program 91-9 to erase random data from RAM (caused by battery jumper movement to the internal battery). You can then skip Program 90, since Program 91-9 automatically runs Program 90.

Program 90 Example

Action	LCD Response
1. Use the LCD programming phone per Minimum Hardware Requirements on -14.	No. N-N ¹ Jan 20 Sun 06:43
2. Enter Program mode by pressing ***#1*2*3 . (Do not press [DN] button.)	Program Mode
3. Spkr (Speaker) 90 Hold Access Program 90. System beeps after Spkr (Speaker) is pressed to indicate program number may be entered.	Program = 90 Data Store
4. Spkr (Speaker) Prepare the system for the programs to be initialized.	90 Select =
5. 00* *99+ LED buttons 01 & 02 Enter Program numbers individually, followed by #, or in a range. For a range, separate the low program number and the high program number with an asterisk. 00* *99 initializes all Programs 00~*99. Star * Program memory follows Program 97.	90 Select = 00**99 Data Clr
6. Hold Secure data in system programming. LEDs 01 and 02 flash.	90 Select = 00**99 Data Programmed
7. Spkr (Speaker) Prepare system for another selection (go back to Step 5) or exit Program 90 (continue with Step 8).	90 Select =
8. ##Hold Secure default data in system memory. LED 01 and 02 continue to flash.	90 Select = ## Data Programmed
9. Spkr (Speaker) Exit Program 90. Enter another program number (see “Program 92 Example” on Page 2-10) or exit programming mode (go to Step 10). System beeps to indicate it is exiting Program 90.	Program =
10. ##Hold Exit programming mode. The system will not allow the Spkr (Speaker) LED to light to re-enter the programming mode.	No. N-N Jan 20 Sun 06:43


1. N-N is the Program Telephone [DN].

Program 91-1 – Automatic PCB Recognition and Port Renumber

Processor Type: DK14, DK40i, All RCTUs

Program Type: Initialization

Initialized Default: None

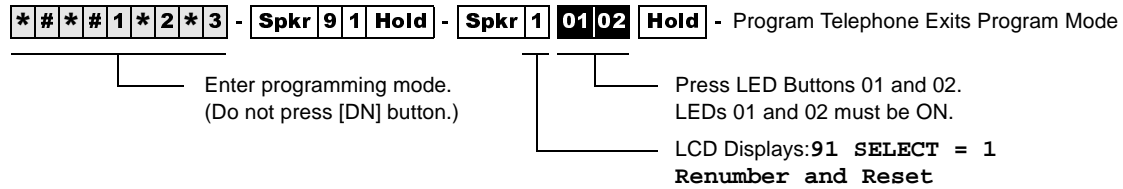

Program 91-1 Overview

Program 91-1 makes slot code assignments to installed PCBs that do not have options - such as a PDKU without a Data Interface Unit or Off-hook Call Announce (OCA), the common control without a Dual-tone Multi-frequency Receiver (RRCS), K5RCU, QRCU3, etc.

Program 91-1 also sets physical *and* logical ports to their initialized settings - even if you previously relocated them. (See Program 01 and 02 for initialized settings.). Programs 04, *04, 05, *05, *09, or 71 are not affected.

CAUTION! Running Program 91-1 drops all calls.

Important! To identify Program 03 PCB slot codes, run Program 91-1 after you install all PCBs.

Notes

- You can run Program 91-1 after setting PCB option codes with Program 03; this does not erase option codes. For example, if Slot 00 is assigned code 92, Program 91-1 will not erase the codes previously assigned with Program 03.
- If you install PCBs before initializing the system with Program 91-9, it is not necessary to run Program 91-1 to assign the Program 03 PCB slot codes for the installed PCBs. You must always run Program 03 to identify PCB options such as K5RCU, QRCU3, and RRCS codes 92, 93 and 94 and PDKU codes 61, 62, and 64, etc.

Program 91-1 Example

Action (press buttons + LED Buttons)	LCD Response
1. Use the LCD programming phone per Minimum Hardware Requirements on -14.	No. N-N ¹ Jan 20 Sun 06:43
2. ***#1*2*3 Enter programming mode. (Do not press [DN] button.)	Program Mode
3. Spkr (Speaker) 91 Hold Access Program 91. System beeps after Spkr (Speaker) is pressed to indicate program number may be entered.	Program = 91 Data Store
4. Spkr (Speaker) Prepare the system for a station port selection.	91 Select =
5. Press 1	91 Select = 1 Renumber and Reset
6. Press LED Buttons 01 and 02 (LEDs turn ON)	91 Select = 1 Renumber and Reset
7. Press Hold The telephone will exit the programming mode and button LEDs 01 and 02 will go out after a short delay.	No. N-N (Month Day Time)


1. N-N is the Program Telephone [DN].

Program 91-2 – Data Transfer from Temporary Memory to Working Memory

Processor Type: DK14, DK40i, All RCTUs

Program Type: Initialization

Initialized Default: See individual programs

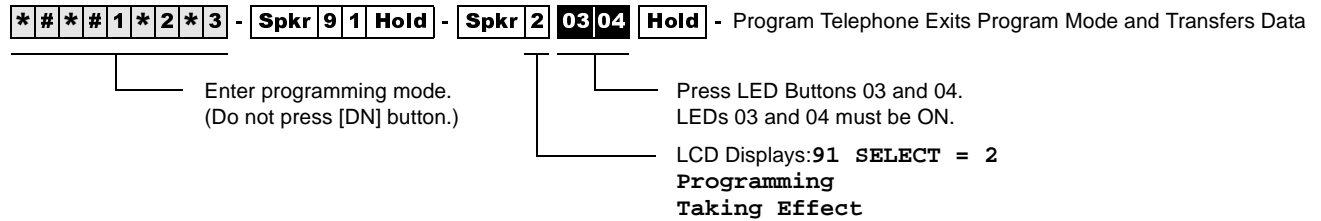

Program 91-2 Overview

Program 91-2 simulates turning system power OFF for five seconds then ON to transfer data from temporary memory to working memory.

This power OFF / power ON sequence is required when programming with a telephone or when using DK Admin/DK Backup. In these cases Program 03, *41-2, *50 and 76-1 data must be transferred from temporary to working memory.

Program 91-2 does not change or erase any programmed data including directory numbers set in Program 04 and *04 or logical/physical port assignments in Program 01 and 02.


CAUTION! Running Program 91-2 drops all calls and renders the system inoperative for up to eight seconds.

Program 92 – Initializing Misc. Backup RAM

Processor Type: DK14, DK40i, All RCTUs

Program Type: Initialization - Includes: Initializing Speed Dial Number, VM ID Codes, Character Message Memory, Timed Reminders, Digital Telephone Volume, Called ID, ANI, and Call Forward Backup RAM

Initialized Default: See individual programs

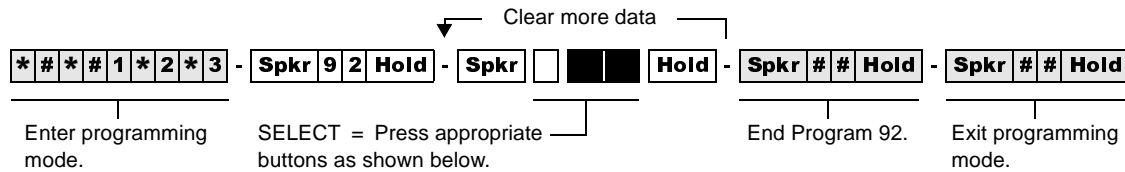

- 1** **01 03** Clears Station Speed Dial, Voice Mail ID Codes, and LCD memos assigned to Station Speed Dial numbers.
- 2** **01 04** Clears System Speed Dial and LCD memos assigned to System Speed Dial numbers.
- 3** **02 03** Clears Character Message Memory (Station and System) and User Name/Number Display.
- 4** **02 04** Clears Timed Reminders.
- 5** **01 05** Resets digital telephone volume levels to initialized settings, specifically, speaker volume levels for Internal Calls [DN], Tone/BGM, Busy Override (muted ring), and Ring volume to approximately mid-range on all DKTs. Program 92-5 does not affect digital telephone handset receiver volume levels. Use Program 27 to set off-hook digital telephone handset receiver volume levels.
- 9** **03 04** **Hold** Power OFF 5 seconds; then Power ON Clears Call Forward and Message Waiting Memory (all stations). Program 92-9 does not affect Call Forward External or Fixed Call Forward settings.

Program 92 Overview

Program 92 clears all previously entered or random data (of the type listed) but does not clear data in system Programs 00~*99.

CAUTION! You must run Program 92 when first installing the system or an RCTU; if you do not, the system could begin to operate erratically.

Running Program 91-9 automatically runs Program 92 (1~9) to erase customer data.

Notes

- Running Program 92-5 does not affect digital telephone handset receiver volume levels. Use Program 27 to set off-hook handset receiver volume levels for digital telephones.

Initialization & Test

Program 92 – Initializing Misc. Backup RAM

- Program 92-9 does not affect Call Forward External or Fixed Call Forward settings.
- You must power the system OFF then back ON to clear telephone LCD Call Forward Displays and Call Forward button LEDs. Call Forward memory is cleared when you run Program 92-9, even if system power is not cycled.

Program 92 Example

Action (press buttons + LED Buttons)	LCD Response
1. Use the programming LCD electronic or digital telephone. (See “Step 1: Check Minimum Hardware Requirements” on Page 1-14.)	No. N-N ¹ Jan 20 Sun 06:43
2. ***#1*2*3 Enter programming mode. (Do not press [DN] button.) System beeps after Spkr (Speaker) is pressed to indicate program number may be entered.	Program Mode
3. Spkr (Speaker) 92 Hold Access Program 92.	Program = 92 Data Store
4. Spkr (Speaker) Prepare the system for selection of programs to initialize. For new system installation perform all 1~4.	92 Select =
5. Select one of the following. 1 + LED Buttons 01 & 03 Clears Station Speed Dial, Voice Mail ID codes, and LCD memos assigned to station speed dial numbers.	92 Select = 1 Each Dial Clr
or... 2 + LED Buttons 01 & 04 Clears System Speed Dial and LCD memos assigned to system speed dial numbers.	92 Select = 2 Common Dial Clr
or... 3 + LED Buttons 02 & 03 Clears Character Message Memory (station and system) and user name display.	92 Select = 3 Msg Clr
or... 4 + LED Buttons 02 & 04 Clears timed reminders.	92 Select = 4 Tmr Reminder Clr
or... 5 + LED Buttons 01 & 05 Presets the Ring, Speaker, Mute Ring, and Intercom Tone, BGM, volume levels of all digital telephones to approximately mid-range.	92 Select = 5 DKT VR Initial
or... 9 + LED Buttons 03 & 04 Clears Call Forward and Message Waiting (R3) Memory except Fixed Call Forward Memory.	92 Select = 9 Back Up RAM Clr
6. Hold LEDs lit in Step 5 turn off to secure data in system programming. Repeat Steps 4~6 until Step is completed.	92 Select = (1~0) Data Programmed

1. N-N is the Program Telephone [DN].

Action (press buttons + LED Buttons)	LCD Response
7. Spkr (Speaker) Prepare system for another selection (go back to Step 5) or exit Program 92 (continue with Step 8).	92 Select =
8. ##Hold Initialized data in system memory (LEDs got out).	92 Select = ## Data Programmed
9. Spkr (Speaker) Exit Program 92. Enter another program number (see “Program 30 – Station Class of Service” on Page 3-73) or exit programming mode (go to Step 10). System beeps to indicate it is exiting Program 92.	Program =
10. ##Hold Exit programming mode.	<div style="display: flex; justify-content: space-between;"> Jan 20 Sun No. N-N 06:43 </div>


Initialization & Test

Program 00 – Part 1: Software Check


Processor Type: DK14, DK40i, All RCTUs

Program Type: Test - Includes: Remote Maintenance Security Code Assignments

Initialized Default: None



Select = Code	Item	Password or S/W Check Codes	LCD Display
0	ROM Version (not programmable)		Version =
1	1st Level Password		Password =
2	2nd Level Password		Password =
8	Software RAM Checksum (not programmable)		Sum =
9	Power Cycle Counter (not programmable)		Counter =

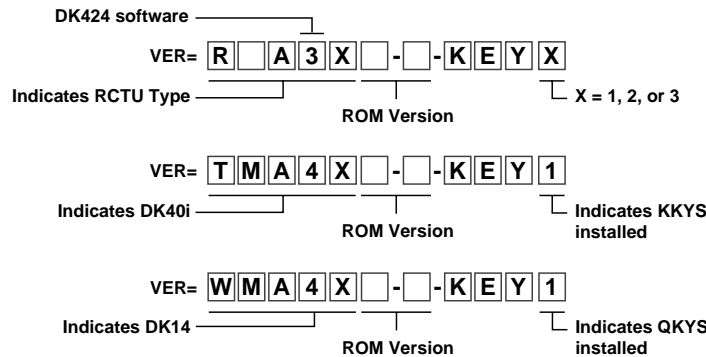

1830

DKT LCD Display	RCTU Type
WMA4	DK14
TMA4	DK40i
RAA3X	RCTUA3
RBA3X	RCTUBA3/RCTUBB3
RCA3X	RCTUC3/D3
REA3X	RCTU E3/F3

Key Type	Description
KEY 1	AA: Indicates built-in Auto Attendant software (RKYS1, KKYS, or QKYS installed).
KEY 2	ACD: Indicates Automatic Call Distribution software and AA (RKYS2 installed).
KEY 3	ACD/MIS: Indicates Automatic Call Distribution, Management Information System Software, plus AA and ACD (RKYS3 installed).
KEY 4	Open Architecture Interface (OAI) and AA, plus AA, ACD, and ACD/MIS (RKYS4 R3.2 installed).

Program 00 Part 1 - Overview

This program enables you to run various checks on the Strata DK System.

DK14: the QKYS feature key must be installed on the QRCU3 PCB to allow AA.

DK40i: the KKYS feature key must be installed on the K5RCU PCB to allow AA.

DK424: the RKYS feature key must be installed on the RCTU to allow AA, ACD, and ACD/MIS.

Code 0, ROM Version

Code 0 displays the software version of the system common control unit (RCTUA, RCTUB, RCTUBA/RCTUBB and RCTUC/RCTUD, RCTUE/F, DK40i Base KSU, or DK14KSU) and if installed on the RCTU, the RKYS, KKYS, or QKYS key type. See the Program 00 Record Sheet for an illustration of software displays. This information cannot be altered with this program.

Code 1, Level 1 Security Code

Use to assign a Remote Maintenance security code that allows entry to all programs and data.

Code 2, Level 2 Security Code

Use this program to assign a Remote Maintenance security code that allows entry to Programs 30~39, 77~89, and *30~*31.

Important! *When using a DK Admin PC, either Security Code (1 or 2) enables the DK Admin user full access to all Strata DK programs. Always change Security Code 1 and Code 2 to prevent unauthorized programming changes by DK Admin users that may try to log-in remotely with the default security code: 0000.*

Code 8, Software RAM Checksum and Code 9, Power OFF Counter

For factory purposes only.

Program 00 Part 1 - Example

Action (press buttons + LED Buttons)	LCD Response
1. Use the programming LCD electronic or digital telephone. (See "First-time Programming" on Page 1-14.)	No. N-N ¹ Jan 20 Sun 06:43
2. ***#1*2*3 Enter programming mode. (Do not press [DN] button.)	Program Mode
3. Spkr (Speaker) 03 Hold Speaker beeps to indicate when to enter program number. Access Program 00.	Program = 00 Data Store
4. Spkr (Speaker) Prepare system for a selection.	00 Select =
5. Select one of the following attributes:	
0 View the software version. This attribute can not be edited. or...	00 Select = 0 RNAXNN-Key X Note NN = The actual version number and letter. See Program 00 record sheet for details). X = 1, 2, or 3.

Initialization & Test

Program 00 – Part 1: Software Check

Action (press buttons + LED Buttons)	LCD Response
<p>1NNNN</p> <p>Define the Level 1 remote maintenance security code from the System Record Sheet (four digits maximum). Level 1 allows remote access to all programs and data. Default Level 1 security code is "0000."</p> <p>or...</p>	<p>00 Select = 1</p> <p>Password = 0000</p>
<p>2NNNN</p> <p>Define the Level 2 remote maintenance security code from the System Record Sheet (four digits maximum). Level 2 allows remote access to programs 30~39 and 77~89 only. Default Level 2 security code is "0000."</p> <p>or...</p>	<p>00 Select = 2</p> <p>Password = 0000</p>
<p>8</p> <p>View the software RAM Checksum. This attribute can not be edited. The default checksum may change.</p> <p>or...</p>	<p>00 Select = 8</p> <p>Sum = XXXXXXXXX</p>
<p>9</p> <p>View the RPSU Power Cycle Counter. This attribute can not be edited. The counter indicates the number of times power is removed from the system after Program 00 was initialized via Program 90 or 91-9.</p>	<p>00 Select = 9</p> <p>Counter = XXXX</p>
<p>6. Hold</p> <p>Secure data in system programming. (Only works for "1" and "2")</p>	<p>00 Select = (0,1,2,8, or 9)</p> <p>Data Programmed</p>
<p>7. Spkr (Speaker)</p> <p>Prepare system for another selection (go back to Step 5) or exit Program 00 (continue with Step 8).</p>	<p>00 Select =</p>
<p>8. ##Hold</p> <p>Secure Program 00 data in system memory.</p>	<p>00 Select = ##</p> <p>Data Programmed</p>
<p>9. Spkr (Speaker)</p> <p>Exit Program 00. Enter another program number (see "Program 91-1 Example" on Page 2-7) or exit programming mode (go to Step 10). System beeps to indicate it is exiting Program 00.</p>	<p>Program =</p>
<p>10. ##Hold</p> <p>Exit programming mode.</p>	<p style="text-align: right;">No. N-N</p> <p>Jan 20 Sun 06:58</p>

1. N-N is the Program Telephone [DN].

Program 00 – Part 2: Processor RAM Test

Processor Type: DK14, DK40i, All RCTUs

Program Type: Test - Includes: Remote Maintenance Security Code Assignments

Initialized Default: None

General RAM Test

Note See “Program 00 Part 2 - Overview” on Page 2-16

##1*2*3 - Spkr 0 0 Hold - Spkr 5 1 01 03 Hold - Tests RAM (15 seconds downtime)

Programming Telephone LCD Displays: _____
GENERAL RAM TEST

Display General RAM Test Results

##1*2*3 - Spkr 0 0 Hold - Spkr 5 2 - Programming Telephone LCD Displays:

DK424

TEST 1 X=OK Y=OK

or...

**TEST 1 X=NG Y=NG
X=00000 X=00000**

DK14/DK40i

TEST 1 =OK

or...

TEST 1 =NG

Where:

X = RCTUA, RCTUBA, RCTUC

Y = RCTUD3, RCTUF

OK = RAM is good

NG = RAM is defective

An **X=NG** or **Y=NG** RAM test result indicates a defective RCTU PCB; change the appropriate (X or Y) RCTU PCB and retest RAM on the newly installed RCTU.

Replace the DK14 KSU or DK40i Base KSU if **Test 1=NG**.

Backup RAM Test

##1*2*3 - Spkr 0 0 Hold - Spkr 6 1 - 02 04 - Hold - RCTU Tests RAM (15 seconds downtime)

Programming Telephone LCD Displays: _____
BACKUP RAM TEST

Display Backup RAM Test Results

##1*2*3 - Spkr 0 0 Hold - Spkr 6 2 - Programming Telephone LCD Displays:

DK424

TEST 2 X=OK Y=OK

or...

TEST 2 X=NG Y=NG
X=00000 X=00000

DK14/DK40i

TEST 1 =OK

or...

TEST 2 =NG

Where:

X = RCTUA, RCTUBA, RCTUC

Y = RCTUD3, RCTUF

OK = RAM is good

NG = RAM is defective

An X=NG or Y=NG RAM test result indicates a defective RCTU PCB; change the appropriate (X or Y) RCTU PCB and retest RAM on the newly installed RCTU.

Replace the DK14 or DK40i Base KSU if Test 1=NG.

Program 00 Part 2 - Overview

Use this program to test the RAM on system processor. If a RAM test error occurs during this test, the processor causing the error should be replaced. In the case of two-PCB processors, isolation of a RAM failure is indicated on the programming telephone X or Y (see above).

If the DK14 or DK40i processor fails the RAM test, the Base KSU must be replaced.

CAUTION! Running each RAM test drops all calls and interrupts telephone service for 15 seconds.

Note Running Program 00 RAM tests do not change or erase any customer data.


This chapter gives you programming information for the Strata DK system and its stations.

Program 01 – Station Logical Port Display and/or Change

Processor Type: DK14, DK40i, All RCTUs

Program Type: Station

Initialized Default: Logical port number = physical port number
Program 90, 91-1, or 91-9 initializes Program 01

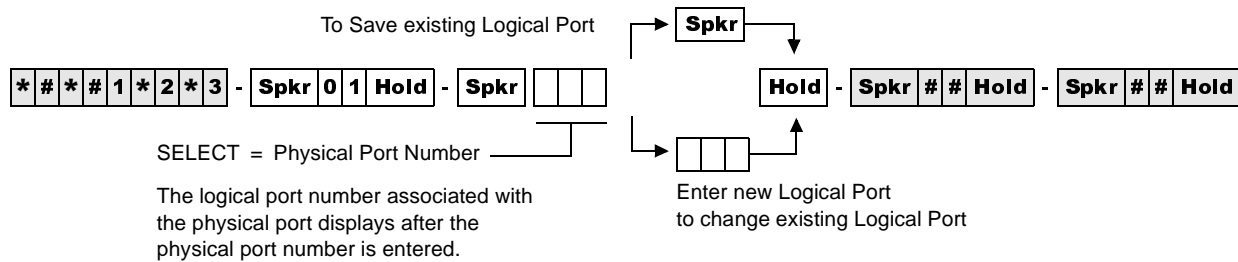

Processor	[PDN] Port Range
DK14	000-009
DK40i	000-027
RCTUA	000-031

Processor	[PDN] Port Range
RCTUBA/BB	000-079
RCTUC/D	000-239
RCTUE/F	000-335

Program 01 Overview

Program 01 enables you to enter a physical port to display the associated logical port. You then have the option to assign a new logical port to the physical port. (To return ports to their initialized settings, see Programs 90 and 91.)


Note Record port locations on Program 04 record sheet.

Program 02 – Station Physical Port Display and/or Change

Processor Type: DK14, DK40i, All RCTUs

Program Type: Station

Initialized Default: Logical port number = physical port number
 Program 90, 91-1, or 91-9 initializes Program 02

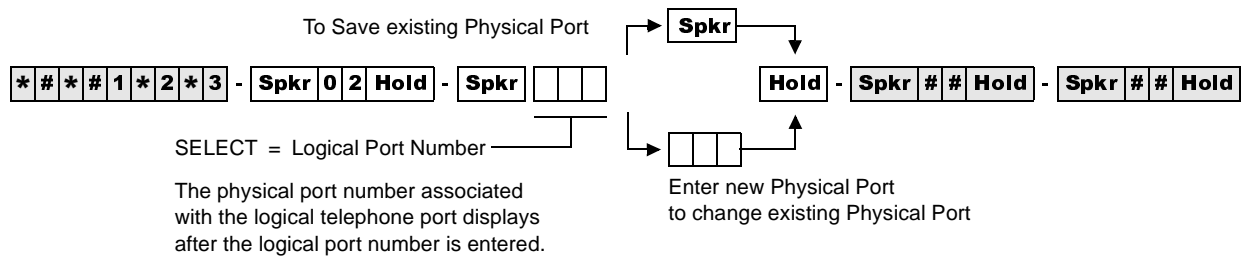

Processor	[PDN] Port Range
DK14	000–009
DK40i	000–027
RCTUA	000–031

Processor	[PDN] Port Range
RCTUBA/BB	000–079
RCTUC/D	000–239
RCTUE/F	000–335

Program 02 Overview

Program 02 enables you to enter a logical port to display the associated physical port. You then have the option to assign a new physical port to the logical port. (To return ports to their initialized settings, see Programs 90 and 91.)

Notes

- Record port locations on Program 04 record sheet.
- The system allows only like ports to be reassigned (see below).

Allowed	Not Allowed
Digital-to-Digital Ports (KCDU-QCDU-PDKU-PDKU-RDSU Ports)	Attendant Console (DK424 only), DSS, BGM or Amplified Conference Ports should not be reassigned
Electronic-to-Electronic Ports (PEKU-PEKU-PESU Ports)	Door Phone Ports (004, 012, 020, 028) should not be reassigned
Standard Tel to Standard Tel Ports (QSTU-KSTU-PSTU-RSTU-PESU-RDSU/RSTS)	Tie/DID Line Ports – should not be reassigned
	PDKU to PEKU – cannot be exchanged
	PSTU to PDKU – cannot be exchanged
	PEKU to PSTU – cannot be exchanged

- RCIU/RCIS circuit assignments to CO lines are not affected by Program 01 and 02.

Program 03 for DK14 – Slot Assignments

When DK14 is powered ON, Program 03 automatically assigns the correct codes for installed PCBs. No record sheet is needed. Refer to the following table for PCB slot and slot code information:

DK14 Base KSU

	WMAU	DKU	COU and QCDU2	QSTU2	None
Slot Number	00	11	12	13	14
PCB Code	91 or 92	62	11	00 or 31	00
PCB Type	QRCU3				
Options		OCA/DIU			
Station Numbers		000~007		008~009	
CO Line Numbers			001~004		

Notes


- In the DK14 software: QCDU2 digital ports are considered to be installed in slot 11. QCDU2 CO lines are considered to be installed in slot 12.
- opt=QRCU3
- opt=Always assigns 8 ports (000~007), digital ports (OCA/DIU). No DSS allowed.
- Always assigns 4 CO lines
- Always assigns 2 ports (008, 009) standard telephone ports

Program 03 for DK40i – Flexible PCB Slot Assignments

Processor Type: DK40i

Program Type: System

Initialized Default: PCB codes of PCBs installed prior to running Program 91-1 or Program 91-9
Code 00 for empty slots (15–18), Base KSU has codes for PCBs

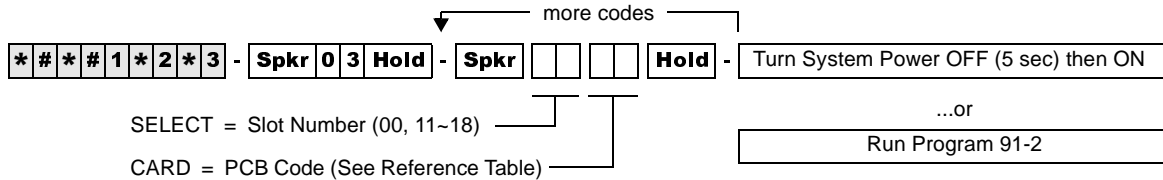

DK40i Base KSU

	TMAU2	DKU	TBSU, TCOU, or TDDU	KSTU2	TCIU2
Slot Number	00	11	12	13	14
PCB Code	91, 92 or 98	62 or 64	00, 11, 16, or 77	00 or 31	00 or 81
PCB Type					
Options					
Station/BRI Port Numbers					
CO/DID/BRI Line Numbers					

DK40i Expansion KSU

Cabinet Label	04	05	06	07
Slot Number	15	16	17	18
PCB Code				
PCB Type				
Options				
Station/BRI Port Numbers				
CO/Tie/DID/BRI Line Numbers				

Notes

- For systems containing ISDN PCBs, immediately after running Program 03, make sure to run Program *60 to identify all station (NT) and CO (TE) BRI circuits for each RBSU/RBSS and TBSU installed. Program *60 causes station port and CO line shifting on PCBs installed in higher slots that follow the BRI PCBs.
- Consult DK40i configuration section to check that the DK40i is configured properly.

PCB Code Reference Table

PCB Fixed Slot	Code	Ports/Type
Common Control	91	None
Common Control w/K4RCU3	92	4 DTMF/ABR
Common Control w/K5RCU or K5RCU2	98	5 DTMF/ABR
PIOU/PIOUS/RSSU/PEPU	41	None
PEKU	21	8 EKT
PEKU with EOCU	22	8 EKT
PEKU with DSS	23	8 EKT
PEKU with EOCU, DSS	24	8 EKT
PESU	25	2 SLT/4 EKT
PESU with EOCU	26	
KSTU2/RSTU2/Stratagy DK	31	4 SLT/8 SLT/8VM
TCOU/PCOU/RCOU/RGLU2	11	4/CO
RCOU + RCOS	17	8 Loop CO
Base Unit DKT CKTs, PDKU, and RWIU	61	8 DKT
Base Unit DKT CKTs & PDKU w/ DIU or SP-OCA	62	8 DKT
Base Unit DKT CKTs and PDKU with DSS (w/ or w/o DIU or SP-OCA)	64	8 DKT
KCDU	65	2/CO, 4 DKT
KCDU SP-OCA or DIU	66	2/CO, 4 DKT
RDSU (RSTS)	27	4 DKT/4 SLT
RDSU (RSTS) with DIU or SP-OCA	28	4 DKT/4 SLT
RDDU/TDDU	16	4 DID Lines
REMU	13	4-Tie Lines
RCIU2/RCIS/TCIU2	81	4 or 8 Caller ID
TBSU or RBSU	77	2 BRI S/T
RBSU/RBSS	78	4 BRI S/T
TSIU		No Code Required
None	00	None

Program 03 for DK40i - Overview

Program 03 tells the system what type of optional PCBs are installed in the Expansion KSU. You must run Program 03 after installing PCBs with options such as OCA, DIU, etc. Also, run Program 03 for each PCB slot when installing a PCB in that location.

It is not necessary to run Program 03 for slots 00~14. The DK40i automatically assigns the Base KSU PCBs if they are installed when system power is turned ON. However, if DSS is required on the Base KSU's DKT circuit 8, you must run Program 03 to assign code 64 to slot 11. If universal PCBs are installed, Program 91-1 and 91-9 automatically assign the appropriate PCB codes to the installed slots. But, Programs 91-1 or 91-9 do not assign option codes (such as OCA, DIU, etc.).

Codes allowed in DK40i Expansion KSU: 11, 13, 16, 21~28, 31, 41, 61~62, 64~66, 77, 78, 91, 92, and 81.

CAUTION! Running Program 91-9 erases Program 03 option codes; Program 91-1 does not.

Important! After completing Program 03 set the configuration in memory by running OFF and wait five seconds before turning it back ON.

The Program 03 record sheet is the main record for the hardware configuration of the entire system. It provides space to record station ports assigned to the station, Tie, and DID line PCBs and line numbers assigned to the ground loop start, CO, Tie, and DID line PCBs. Use the PCB Code Reference Table on the Program 03 record sheet to determine the proper option code for each PCB with an option.

The DK40i Base KSU is divided into four fixed slots, even though the unit has no slots per se.

- ♦ Slot 00 represents the system's common control (TMAU2) and optional K4RCU3, K5RCU, or K5RCU2
- ♦ Slot 11 contains the KSU's eight digital circuits/ports (DKU)
- ♦ Slot 12 contains the KSU's four optional CO or DID line circuits (TCOU or TDDU) or two BRI (TBSU) circuits
- ♦ Slot 13 contains the four optional standard telephone circuits KSTU2
- ♦ Slot 14 contains four optional Caller ID circuits for TCOU (TCIU2)

DK40i Slots 15~18 (Expansion KSU Assignment Criteria)

- ♦ Allowed PCBs: PDKU, RDSU/RSTS, RSTU, RSTU2, PSTU, PEKU, PESU, KCDU, RCOU/RCOS, RGLU2, RCIU2/RCIS, RWIU, PCOU, RDDU, REMU, PEMU, PIOUS, PIOUS, RSSU, PEPU, Stratagy DK.

Note Some PCBs cannot be installed in slot 18 (see Chapter 2 – DK40i Configuration).


- ♦ Expansion KSU PCBs must be installed in the slots specified in Tables 2-9~2-15 or the system may not operate properly. (See tables in Chapter 2 – DK40i Configuration of the *Strata DK Installation and Maintenance Manual*.)
- ♦ Slots 15 and 16 support Speaker OCA and RPCI/DIU Data Switching; slots 17 and 18 do not. All slots support Handset OCA and RPCI-DI TAPI operation.
- ♦ On DK40i, RCIU2 must be installed in slot 17; RCIU1 cannot be used.
- ♦ The RWIU must be installed in slot 15 and slot 16 must be vacant to support 9 to 16 wireless handsets. It can be installed in any expansion slot to support 1~8 wireless handsets.
- ♦ If the RWIU supports 9 to 16 handsets, program code 61 in slot 15 and 16.

Program 03 for DK424 – Flexible PCB Cabinet Slot Assignments

Processor Type: All RCTUs

Program Type: System

Initialized Default: PCB codes of PCBs installed prior to running Programs 91-1 or 91-9;
Code 00 for empty slots

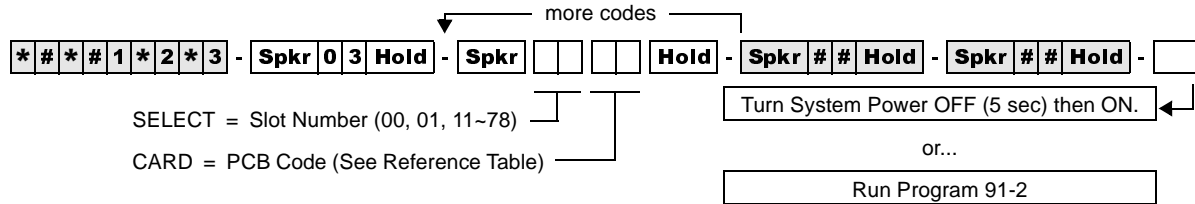

DK424 Base Cabinet 1

Slot Number	00 (R11)	01 (RCTU)	S11	S12	S13	S14	S15	S16
PCB Code								
PCB Type								
Options								
Station/Tie/DID/ISDN Port Numbers								
CO/Tie/DID/ISDN Line Numbers								

DK424 Expansion Cabinet 2

Slot Number	S21	S22	S23	S24	S25	S26	S27	S28
PCB Code								
PCB Type								
Options								
Station/Tie/DID/ISDN Port Numbers								
CO/Tie/DID/ISDN Line Numbers								

DK424 Expansion Cabinet 3

Slot Number	S31	S32	S33	S34	S35	S36	S37	S38
PCB Code								
PCB Type								
Options								
Station/Tie/DID/ISDN Port Numbers								
CO/Tie/DID/ISDN Line Numbers								

DK424 Expansion Cabinet 4

Slot Number	S41	S42	S43	S44	S45	S46	S47	S48
PCB Code								
PCB Type								
Options								
Station/Tie/DID/ISDN Port Numbers								
CO/Tie/DID/ISDN Line Numbers								

DK424 Expansion Cabinet 5

Slot Number	S51	S52	S53	S54	S55	S56	S57	S58
PCB Code								
PCB Type								
Options								
Station/Tie/DID/ISDN Port Numbers								
CO/Tie/DID/ISDN Line Numbers								

DK424 Expansion Cabinet 6

Slot Number	S61	S62	S63	S64	S65	S66	S67	S68
PCB Code								
PCB Type								
Options								
Station/Tie/DID/ISDN Port Numbers								
CO/Tie/DID/ISDN Line Numbers								

DK424 Expansion Cabinet 7

Slot Number	S71	S72	S73	S74	S75	S76	S77	S78
PCB Code								
PCB Type								
Options								
Station/Tie/DID/ISDN Port Numbers								
CO/Tie/DID/ISDN Line Numbers								

DK424 PCB Codes

PCB	Code	Ports/Type
RCOU, RGLU2	11	4 Gnd./Loop Lines
RCOU/RCOS	17	8 Loop CO Lines
RDDU	16	4 DID Lines/4 Stations
REMU	13	4 Tie Lines/4 Stations
PEKU	21	8 Stations
PEKU (EOCU)	22	8 Stations
PEKU w/DSS	23	8 Stations
PEKU (DSS, EOCU)	24	8 Stations
PESU	25	6 Stations
PESU (OCA)	26	6 Stations
RDSU/RSTS	27	8 Stations
RDSU/RSTS (OCA, DIU)	28	8 Stations
RSTU2	31	8 Stations
PIOU, PIOUS/ RSSU, PEPU	41	Remote Maintenance (TTY)
PIOU/PIOUS/RSSU	42	MIS for ACD (TTY)
PIOU/PIOUS/RSSU	43	SMDI VM Interface (TTY)
PDKU2, RWIU	61	8 Stations
PDKU2 (OCA, DIU)	62	8 Stations
PDKU2 (DSS, OCA, DIU)	64	8 Stations

PCB	Code	Ports/Type
RDTU	71	8 T1 Channels
RDTU	72	16 T1 Channels
RDTU	73	24 T1-channels
RCTU	91	None
RCTU (with 4-CKT RRCS)	92	None
RCTU (with 8-CKT RRCS)	93	None
RCTU (with 12-CKT RRCS)	94	None
NONE	00	00
RATU	51	4 Stations
RSIU	49	I/O Interface
RCIU2/RCIS	81	8 CKT, Caller ID
Stratagy DK	31	8 VM Ports
RBUU without RBUS	75	2 U Interfaces (4 stations/4 CO lines)
RBUU with RBUS	76	4 U Interfaces (8 stations/8 CO lines)
RBSU without RBSS	77	2 S/T Interfaces (4 stations/4 CO lines)
RBSU with RBSS	78	4 S/T Interfaces (8 stations/4 CO lines)
RPTU Interface Card	79	PRI Interface (24 CO lines)

See the following text for specific installation rules on the above PCBs.

Program 03 for DK424 - Overview

Program 03 tells the system what type of optional PCBs are installed.

The Program 03 record sheet is the main record for the hardware configuration of the entire system. It provides space to record station ports assigned to the station, Tie, and DID line PCBs and line numbers assigned to the ground loop start, CO, Tie, and DID line PCBs.

Use the DK424 PCB Code table on Page 3-7 to determine the proper option code for PCBs with options. You must run Program 03 after installing PCBs with options such as OCA, RRCS, DIU, etc. Also, run Program 03 for the slot of each new PCB when installing a new PCB in an existing installation.

If universal PCBs are installed, Program 91-1 and 91-9 automatically assigns the appropriate PCB codes to the installed slots. But, they do not assign option codes (such as OCA, PDIU, RRCS, etc.).

CAUTION! Running Program 91-9 erases Program 03 option codes; Program 91-1 does not.

Important! After completing Program 03 set the configuration in memory by running Program 91-2 or turn the base cabinet power supply switch off and wait five seconds before turning it back on.

Expansion slots 7 and 8 can only be used if the following equipment is installed: DK424 Base (with RCTUE/F and MBJU removed) and the DK424 Expansion.

See Chapter 4 – DK424 Configuration (Strata DK Installation and Maintenance Manual) to determine PCB slot placement.

PIOU/PIOUS/RSSU

Codes 41, 42, and 43 assigns PIOU/PIOUS RSSU TTY port as Remote Maintenance, MIS for ACD, and SMDI respectively; SMDR, Paging, Relay Control, and other miscellaneous options are active on the PIOU/PIOUS that has the lowest number code (41, 42 or 43) in the system. Codes set for RSIU/RSIS/RMDS in Program 76 have priority over codes 41, 42, and 43.

Piggyback PCB / Speaker OCA / Data Interface Unit Options

Run Program 03 to assign codes for all options except RCOS. Program 91-9 erases option codes assigned with Program 03; Program 91-1 does not erase option codes already programmed. After completing all Program 03 data entry, run Program 91-2 or cycle system power to transfer Program 03 data into working memory.

RCIU/RCIS or RCIU2/RCIS

When installing RCIU2/RCIS, enter the Caller ID circuit numbers on the record sheet in place of the CO line number. Each RCIU2/RCIS slot uses eight Caller ID circuits. RCIU2/RCIS circuit numbers are assigned automatically in numerical order (001~200) starting with the lowest slot number, to the highest RCIU2/RCIS slot number in 8-circuit increments.

Important! *If more than four circuits are needed, never install an RCIU without an RCIS.*

On DK424, RCIU2/RCIS can be installed in any universal slot except slot 11 or if RSIU is installed, slot 12; they do not have to be installed adjacent to corresponding CO lines. Refer to Program *50 to manually assign RCIU2/RCIS circuits to CO line circuits.

RWIU

Code 61 must be set for all RWIU slots including slots that are vacant because they support RWIU channels 09~32.

RCTU

The table below gives you slot locations and PCB Code Assignments for all RCTUs.

Processor	R11 Slot	RCTU Slot Cabinet 1	Slot Code	PCB Code Assignment
RCTUA	No	Yes	00	91~94
RCTUB	No	Yes	00	91~94
RCTUBA	Yes	No	00	91~94
RCTUBB	No	Yes	01	91
RCTUC	Yes	No	00	91~94
RCTUD	No	Yes	01	91~94
RCTUE	Yes	No	00	91~94
RCTUF	No	Yes	01	91~94

PCB Codes:

91=No RRCS

92=4 -circuit RRCS

93=8 -circuit RRCS

94=12 -circuit RRCS

Note When using RCTUA, Slot 15 and 16 does not support Speaker OCA or DIU Data Switching. RCTUA does not support ACD, ACD/MIS, RS-232 Voice Mail Integration (SMDI), and attendant console features.

RSIU

If an RSIU is installed in base cabinet slot 11, you must connect the programming station to circuit 6 in slot 12. In this case, a PDKU or PEKU should be installed in slot 12 and Station Port Number 000~007 will be in slot 12.

If an RSIU is not installed, you must connect the programming station to circuit 6 in slot 11 (Port 005) and/or circuit 6 in slot 12 (port 013). The station must be a 20-button digital LCD or electronic LCD telephone. Also, if an RSIU is not installed, install a PDKU or PEKU in slot 11.

Program 03 Example


Action (press buttons + LED buttons)	LCD Response
1. Use an LCD programming phone per Minimum Hardware Requirements on Page 1-14.	No. 205 Jan 20 Sun 06:43
2. ***#1*2*3 Enter programming mode. (Do not press [DN] button.)	Program Mode
3. Spkr (Speaker) 03 Hold Access Program 03. System beeps after Spkr (Speaker) is pressed to indicate program number may be entered.	Program = 03 Data Store
4. Spkr (Speaker) Prepare the system for a selection.	03 Select =
5. Dial a PCB slot number (00~78 for DK424 or 00-18 for DK40i) using the dial pad.	03 Select = (00~78) Card = (91, 62 or 00)
The system defaults as follows: 00 Initialized default assigns slot 00 and 01 to be a non-optioned RCTU without RRCS DTMF receivers, or DK40i Base without K4RCU3, K5RCU, and K5RCU2.	03 Select = 00 (Slot Number) Card = 91
11 Initialized default assigns slot 11 to be a non-optioned PDKU without DSS console or OCA (Code 61).	03 Select = 11 (Slot Number) Card = 61
00, 01, 12~78 (DK424), 00~18 (DK40i) Initialized default assigns slot 12~78 to be empty (Code 00).	03 Select = 12~78 (Slot Number) Card = 00
6. 00~99 Dial the PCB code recorded on the record sheet. Refer to the PCB code reference table on Program 03 record sheet for a definition of the codes.	03 Select = (00~78) Card = (00~97)
7. Hold Secure data in system programming.	03 Select = (00~78) Data Programmed
8. Spkr (Speaker) Prepare system for another selection (go back to Step 5) or continue with Step 9.	03 Select =
9. ##Hold Secure Program 92 data in system memory.	92 Select = ## Data Programmed
10. Spkr (Speaker) Exit Program 92 (system beeps). Enter another program number or exit programming mode (go to Step 11).	Program =
11. ##Hold Exit programming mode.	No. 205 Jan 20 Sun 06:58
12. To secure Program 03 entries, Power off for five seconds, then power on, or run Program 91-2.	

Program *03 for DK424 – Cabinet Type Identification

Processor Type: RCTUE/F only

Program Type: System

Initialized Default: All cabinets = 1

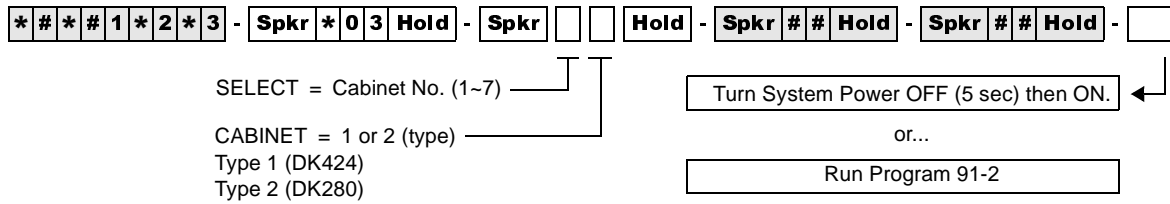

SELECT = (Cabinet No. 1~7)	Cabinet Type (1 or 2)
1 (Base)	
2 (1st Expansion)	
3 (2nd Expansion)	
4 (3rd Expansion)	
5 (4th Expansion)	
6 (5th Expansion)	
7 (6th Expansion)	1 only

Expansion Cabinet Universal PCB Slot Availability

Case 1

RCTUE/F in DK424 Base Cabinet with MBJU removed

Expansion Cabinet (max 6)	Universal PCB Slots
DK424	1~8 available
DK280	1~6 available

Case 2

RCTUE/F in DK280 Base Cabinet

Expansion Cabinet (max 5)	Universal PCB Slots
DK424	1~6 available
DK280	1~6 available

Program *03 - Overview

You must run this program when using the RCTUE/F processor. It identifies which type of cabinets are installed (DK424 or DK280). The RCTUE/F processor can be installed in a DK424 or DK280 base cabinet. The expansion cabinets can be any combination of DK424 and DK280 - except the seventh expansion cabinet must be a DK424.

The DK280 expansion cabinet can only support six universal PCB slots in any possible configuration.

The DK424 expansion cabinet supports eight universal PCB slots only if the RCTUE/F is installed in a DK424 base cabinet and the MBJU jumper is removed from the DK424 base cabinet backplane.

Program 04 – Station Logical Port [PDN] Assignment

Processor Type: DK14, DK40i, All RCTUs

Program Type: Station

Initialized Default: See [PDNs] in the record sheets

DK14 Record Sheet

* # * # 1 * 2 * 3 - Spkr 0 4 Hold - Spkr # Hold - Spkr # # Hold - Spkr # # Hold

SELECT = Station Logical Port Number(s) [PDN] (1~4 digits)
(see table below)

Physical Ports	Modular Jack Location Record	Logical Ports	[PDNs] (Initialized)	Port Type for Different Base Configurations			
				KSU	1st QCDU2	2nd QCDU2	QSTU2
000		000	(10)	4 - Digital Telephone Ports			
001		001	(11)				
002 ¹		002 ¹	(12)				
003 ¹		003 ¹	(13)				
004		004	(14)		2 - Digital Telephone Ports		
005		005	(15)				
006		006	(16)			2 - Digital Telephone Ports	
007		007	(17)				
008		008	(18)				2 - Standard Telephone Ports
009 ²		009 ²	(19)				

1. Supports a Digital Telephone or a DDCB Door Phone Control Box.
2. Supports Alternate Background Music (BGM).

DK40i Record Sheet

* # * # 1 * 2 * 3 - Spkr 0 4 Hold - Spkr # Hold - Spkr # # Hold - Spkr # # Hold

SELECT = Station Logical Port Number(s) [PDN] (1~4 digits)
(see table below)


Logical Ports (Initialized)

Important! Refer to Chapter 2 – DK40i Configuration before installing PCBs in slots 15~18.

Expansion Slot Configuration Record¹: Slot 15 _____ Slot 16 _____ Slot 17 _____ Slot 18 _____

Physical Ports	Modular Jack Location Record	Logical Ports	[PDNs] (Initialized)	Port Type for Different Base Configurations				
				TCOU or TDDU	TCOU, TBSU ² or TDDU+KSTU2	TBSU	TBSU+KSTU2	
000		000	(10)	Base Slot 11 8 - Digital Telephone Ports	Base Slot 11 8 - Digital Telephone Ports	Base Slot 11 8 - Digital Telephone Ports	Base Slot 11 8 - Digital Telephone Ports	
001		001	(11)					
002		002	(12)					
003		003	(13)					
004		004	(14)					
005		005	(15)					
006		006	(16)					
007		007	(17)					
008		008	(18)	Expansion Slots 15~18	Base Slot 13 4 KSTU2 Ports	Base Slot 12 ³ TBSU CKT 1 2 Ports	Base Slot 12 ³ TBSU CKT 1 2 Ports	
009		009	(19)			Base Slot 12 ³ TBSU CKT 2 2 Ports	Base Slot 12 ³ TBSU CKT 2 2 Ports	
010		010	(20)		Expansion Slots 15~18	Expansion Slots 15~18	Expansion Slots 15~18	Base Slot 13 4 KSTU2 Ports
011		011	(21)					
012		012	(22)					
013		013	(23)					
014		014	(24)					
015		015	(25)					
016		016	(26)					
017		017	(27)					
018		018	(28)					
019		019	(29)					
020		020	(30)					
021		021	(31)					
022		022	(32)					
023		023	(33)					
024		024	(34)					
025		025	(35)					
026		026	(36)					
027		027	(37)					

1. Expansion slots 15~18: See DK40i Configuration tables in Chapter 2 of the *Strata DK Installation and Maintenance Manual*.
2. TBSU circuits configured for line-side BRI.
3. If TBSU circuits that are set as station-side in Program *60, use two station ports per circuit. TBSU circuits that are set to line-side do not use station ports.



System & Station

Program 04 – Station Logical Port [PDN] Assignment

DK424 Record Sheet

* # * # 1 * 2 * 3 - Spkr 0 4 Hold - Spkr [] [] # [] [] [] Hold - Spkr # # Hold - Spkr # # Hold

SELECT = Station Logical Port Number(s) _____ Press [PDN] or Button LED 01 to erase (1~4 digits)

Processor	[PDN] Port Range	Initialized [PDNs]	DISA Port	Reserved for Special Functions
RCTUA	000-031	200-231	039	032-039
RCTUBA/BB	000-079	200-279	089	080-089
RCTUC/D	000-239	200-239	249	240-249
RCTUE/F	000-335	100-435	344	336-349

Physical Ports	Modular Jack Location Record	Logical Ports	[PDN]	Cabinet and Slot Number	Physical Ports	Modular Jack Location Record	Logical Ports	[PDN]	Cabinet and Slot Number	
				Cabinet: _____ Slot: _____					Cabinet: _____ Slot: _____	
				Cabinet: _____ Slot: _____					Cabinet: _____ Slot: _____	
				Cabinet: _____ Slot: _____					Cabinet: _____ Slot: _____	
				Cabinet: _____ Slot: _____					Cabinet: _____ Slot: _____	

Program 04 Overview

Program 04 assigns the Primary Directory Number [PDN] to each telephone (logical port). [PDNs] can be one to four digits. [PDNs] must not conflict with Phantom Directory Numbers [PhDNs] or, DK424 Distributed Hunt Directory Numbers set in Program *04.

[PDNs] can be changed using Program 04, but door phone and modem numbering cannot.

- Door phone standard numbering is #151~#159 and #161~#163; the internal modem (IMDU or RMDS) is #19 (DK40i and DK424).
- [PDNs] cannot begin with the digits 41~49 because 44 is the substitute code to rotary dial the “#” in feature access codes.

Only the first digit of a feature code can be changed with Program 05. The system automatically assigns door phone station numbers if a door phone is specified in Program 77-1. [PDN] assignments are flexible so that each station can have up to four assigned digits.

All Strata DK telephone user guides are written using the standard default access codes and [PDNs]. If desired, a telephone accompanying a DSS console can have an [PDN] of 0 or 01, etc., without conflict.

If you make no assignment in Program 04, the system, upon powering up automatically assigns eight [PDNs] for each station PCB installed and four logical station ports for each PEMU, REMU, RDDU, and RATU PCB.

Each DK424 RDTU, Tie, and DID channel is also assigned a station port. This is done in sequence of ascending slot numbers for station port numbers 008 and up.

DK424 Attendant consoles rings on the ICI “0” button for Dial “0” calls, and on the [PDN] when the [PDN] assigned to the console (station) port in this program is dialed.

Peripheral Devices other than telephones or DIUs can be connected to the ports listed below. If a peripheral device is connected to a Physical Port, the Logical Port must have the same port number as the Physical Port. See the following table.

Logical & Physical Ports	System	Peripheral Device
00	DK40i	Digital telephone associated with DSS console.
02, 03	DK14	Digital Door phone/lock control unit (DDCB).
04, 12, 20	DK40i	Digital Door phone/lock control unit (DDCB).
07, 015, 027	DK40i	Digital Direct Station Selection Console (DDSS).
10	DK14	DISA port number used for Toll Restriction Class and Verified/Forced Account Code assignment.
35	DK40i	
09	DK40i	Separate background Music Source (KSTU2 required in Base KSU).
00, 08, 020	DK40i	Digital telephone associated with DSS console (PDKU/Expansion Unit required).
		Electronic telephone associated with DSS console (PEKU/Expansion Unit required).
00, 13, 17	DK40i	DK40i: Separate Background Music Source (PEKU, PESU, or PSTU/Expansion Unit required). DK14: QSTU2 required.
09	DK14	
31	DK40i	IMDU modem.

Program 04 Example

Action (press buttons+LED buttons)	LCD Response
1. Use an LCD programming phone per Minimum Hardware Requirements in Chapter 1 - Overview.	No. N-N ¹ Jan 20 Sun 06:43
2. ***#1*2*3 Enter programming mode. (Do not press the [DN] button.)	Program Mode
3. Spkr (Speaker) 04 Hold Access Program 04. The speaker beeps to indicate when to enter a program number.	Program = 04 Data Store
4. Spkr (Speaker) Prepare the system for a selection.	04 Select =
5. 000#~335# Select a port number (use three digits plus #).	04 Select = 000 INT = N-N
6. XXXX Enter the port's station number (up to four digits) from the record sheet. Note Station numbers must not exceed four digits, or conflict with feature access codes listed in Program 05 record sheet.	04 Select = 000 ~239 INT = XXXX
7. Hold Secure data in system programming.	04 Select = (000~335) Data Programmed
8. Spkr (Speaker) Prepare the system for another selection (go back to Step 5) or continue with Step 9.	04 Select =
9. ##Hold Secure Program 04 data in system memory.	00 Select = ## Data Programmed
10. Spkr (Speaker) Exit Program 04 (system beeps). Enter another program number or continue with Step 11.	Program =
11. ##Hold Exit programming mode.	No. N-N Jan 20 Sun 06:58

1. N-N = program telephone [PDN]

Program *04 Overview

Program *04 assigns the system Phantom Directory Numbers [PhDNs] and Distributed Hunt (DH) Group [DNs].

All DK systems provide 16 DH groups. [PhDNs] and DH [DNs] can be one to four digits.

[PhDNs] and DH [DNs] cannot conflict with each other, or be the same as Primary Directory Numbers assigned in Program 04. [PhDNs] can not conflict with, or be the same as Distributed Hunt Directory Numbers assigned in this program. Default [PhDNs] and DH [DNs] are shown in the legend above the record sheet.

Note

- [PhDNs] and DH [DNs] cannot have 41~49 as the first two digits because 44 is the substitute code to rotary dial the “#” in feature access codes.
- See Program *09 or 71 for DID line call routing to DH Groups; see Programs 81~89 or Ground/Loop start CO line call routing to DH Groups.

Program 05 – Flexible Access Code Numbering

Processor Type: DK14, DK40i, All RCTUs

Program Type: System

Initialized Default: See record sheet

* # * # 1 * 2 * 3 - Spkr 0 5 Hold - Spkr [] [] Hold - Spkr # # Hold - Spkr # # Hold

SELECT = Access Code (1-9)
See the table below for standard access codes.

SPECIAL DIAL = New Access Codes

The first digit of access codes can be replaced by 2 digits.

Press LED Button 01 to enter blanks.

Default Access Code	Features Affected (N/A = Not Affected/ Cannot Change)		New Access Codes
0	Unused		
1	Voice First/Tone First (Dial 1-N/A) Door Phones: (#151~#159; #161~#163) IMDU or RMDS Access: DK424 and DK40i (#19) Default [PDNs] and Park Orbits (see Program 04)	Station LCD Messages (10~19-N/A) Station Speed Dial (100~139-N/A) RCTUE/F Station Speed Dial Set (10~49-N/A) RCTUA, BA/BB, C/D	
2	Default [PDNs] and Park Orbits (see Program 04) Busy Override (Dial 2-N/A) Do Not Disturb Override (Dial 2-N/A)	ACD Ports (*04, *09, 71) Off-hook Call Announce (2-N/A) RCTUE/F System Speed Dial (200~999)	
3	Default [PDNs] and Park Orbits (see Program 04) Executive Override (Dial 3-N/A) All Call Voice Page (#30) All Call Voice Page with External Spkrs (#39) RCTUE/F Ext Page Zones #351~#358	RCTUA~C/D External Page Zones 1~4 (#35~#38) Group Page (Internal) (#311~#318) Park + Page (Cnf+#331) Park Pick Up [DN]+#331 (see Program *05) Park + Hold (Cnf+#332)	

System & Station

System & Station

Program 05 – Flexible Access Code Numbering

Default Access Code	Features Affected (N/A = Not Affected/ Cannot Change)		New Access Codes
4	Default [PDNs] and Park Orbits (see Program 04) Default [PhDNs] (see Program *04) Automatic Callback (Dial 4-N/A) CO Line Queuing (Dial 4-N/A) Station Number Display (#401) Port Number Display (#402) Hold (#41) Hold Pickup (#42) Automatic Busy Redial (Conf + #44) Automatic Busy Redial Cancel (Int + #44) Message Waiting Answer (#408) from INT, [PDN], or [PhDN] Display [PDN], [SDN], or [PhDN] on LCD (#407) Emergency Call to Attendant Console (#400) Standard telephone Redial (44) or dial # for feature access code Flash (Cnf + #45) Account Code Input (Cnf + #46)	T.R. Override/T. Class Code Input (Cnf + #47) BGM Over Stations ON (#481) BGM Over Stations OFF (#480) BGM Over External Speakers ON (#491)(Station Port 000 only) BGM Over External Speakers OFF (#490)(Station Port 000 only) Cancel Message Waiting at Station (#409) from [PDN] or [PhDN] Retrieve Message Waiting (#408) Access Code/Speed Dial Prefix (44 or #) To store a CO line or feature access code in Speed Dial memory from rotary phones or phones without the Speed Dial and Redial buttons, enter 44 + 7XXX instead of # + 7XXX. Start Trace #489 (Station Port 000 only) Stop Trace #488 (Station Port 000 only) Cancel Auto Call Back (#43)	
5	Call Pickup Station (#5+Station No.), Ringing CO or DID line (#59) Directed Pickup of CO Line on Hold (#5+#7 XXX, XXX = 001~200), Pick-up External Page (#5 + #30 or for Zone Page #5+#35~#38) #5#79 Pick up Tandem Connection (Release 3.2 and above)	Selected Group Pickup (#5+#320~#339) Own Group(s) Pickup (#5+#34) Pickup Ringing Line (#59) [DN] Pickup #5#2+XXX (XXX=[PDN] or [PhDN], DK Release 3.1 and above) Verified Account Codes (DK14, DK40i, RCTUA~C/D: Speed Dial + 50; RCTUE/F Speed Dial + 050)	

Default Access Code	Features Affected (N/A = Not Affected/ Cannot Change)	New Access Codes
6	Call Forward (#601, #602, #603, #604)	T.R. Override Code Change (#654, #655)
	Timed Reminder (#605~#609)	System Speed Dial
	M/W for Voice Mail ON (#63+Station No.)	(N/A 600~699 RCTUB, RCTUBA/BB, & RCTUC/D)
	M/W for Voice Mail OFF (#64+Station No.)	
	Voice Mail ID Code Set (Call Fwd, #656)	System Speed Dial Set (N/A 60~99 - DK14, DK40i and RCTUA)
	Voice Mail ID Code Set (Ans. MW, #657)	LCD User Name (#621-Set, #620-Reset, TR dial plan Set #650 +6267 +7/8/9 Change
	LCD Message Set (#68)	
	DKT Mute Ring Adjust (#6101)	DISA Security Code Change (#658)
	DKT Ring Level Adjust (#6102)	Verified Account Code Change (#659)
	Port Swap/Station Relocation OFF (#6281)	Set LCD Messages (#68)
	Station Relocation ON (#6282)	System LCD Messages (N/A 60-99)
	Logical Port Swap ON (#6283)	Traveling Class Code 1~8 Change (#691~#698)
	Call Forward Ext Set or Remote Change Code (#670)	Logical Port Swap (#627 + Destination Intercom No.)
	Date Set (#651)	Physical Port Calling (#629 + Physical Port No.)
Time Set (#652)	Message Waiting Set/Cancel (N/A) (7) (77)	
Weekday Set (#653)	Night Lock Password Change (#622)	
7	CO Line Outgoing Calls (#7001~#7200) To store a CO line or feature access code in Speed Dial memory from rotary telephones or telephones without the Speed Dial and Redial buttons, enter 44 + 7XXX instead of # + 7XXX.	
8	CO Group Outgoing Calls (801~816)	Default Distributed Hunt [DNs] (850~ 865) See Program *04
9	Least Cost Routing or CO Group (9), Distributed Hunt Group Prog *04 Port Ref. (900~915)	

Program 05 Overview

Program 05 enables you to change feature access codes. The first digit of a feature access code can be changed to a different digit or to two digits. Digits after this prefix cannot be changed. Some access codes cannot be changed (such as the code for Automatic Callback) and are shown with N/A on the record sheet.

Notes


- Access code conflicts may exist if new access codes are assigned, and a new system numbering plan will have to be implemented.
- Be sure access code changes do not conflict with existing access code or station numbering schemes. Refer to Program 04 – Port/Station Number Assignment.
- If access codes are being changed to a number that is currently assigned, change the currently assigned code to an unused code first. In the initialized state, the only unused code is zero (0).

Program *05 – Call Park Pickup Abbreviated Dialing

Processor Type: DK14, DK40i, All RCTUs

Program Type: System

Initialized Default: Blank



SELECT = 1

DATA = 1 or 2 digit abbreviated dialing for Call Park Pickup.

SELECT = Call Park type:

1 = Change #331 Call Park Pickup Code

2 = Change #332 Call Park Pickup Code

It is only necessary to change one code, but each code can be changed to the same or

Program *05 Overview

This program assigns two Call Park Pickup abbreviated dialing codes to pick up parked calls. For dialing convenience, the 1- (or 2-) digit abbreviation for Call Park Pickup replaces the Call Park access codes #331 and #332. To park calls, Code #331 and #332 must still be used if the Program 39 **Park in Orbit** buttons are not available on a telephone. Changing the #331 and #332 codes only applies to Call Park Pickup.

- ♦ LED 01 blanks out the Call Park abbreviated dialing data.

Example:

If Park Pickup code #331 is changed to the digit “1”, Park Pickup functions by dialing 1XXX, where XXX is the orbit number in which the call is parked.

Program 09 – Built-in Auto Attendant Prompt / Station Assignments

Processor Type: DK14, DK40i, All RCTUs

Program Type: System and ACD

Initialized Default: Blank



SELECT = Prompt
Press prompt number offered to caller. First or second digit.

AUTO ATT DIAL = (1~4 digits)
Enter the station numbers, [PDNs], [PhDNs], DH [DNs], or #4 plus the ACD Group No. which will receive Auto Attendant calls. Could be * if establishing the first digit.

Press LED Button 01 to delete data.

Dialed Digit (Menu Prompts)	Station Number [PDN]	Department, Division, Etc.
0		
1		
2		
3		
4		
5		
6		
7		
8		
9		

Program 09 Overview

Program 09 tells the system where to direct calls after incoming Auto Attendant callers dial a digit(s) in response to the menu of dialing prompts offered by one of the Auto Attendant’s digital announcers.

The exact dialing prompts along with their associated station numbers, [PDNs], [PhDNs], Distributed Hunt [DN] and ACD group numbers are assigned with this program. The actual announcements that are delivered to callers are recorded on customer-supplied digital announcers. The dialing prompts can either be all one-digit or all two-digits (or numbers of 1~4 digits).

One digit dialing prompts can be used, but they cannot conflict with the first digit of the [PDN] in Program 04 or the [PhDN] and DH [DN] in Program *04.

Two-digit dialing prompts are only used when it is necessary to stop the announcement to prevent errors in digit translation or when single-digit prompts conflict with [PDN], [PhDN], and DH [DN] numbering plans. Digit Translation errors occur sometimes when line transmission is low or the announcement voice frequencies are the same as a DTMF digit and the system RRCS, K4RCU3, K5RCU, K5RCU2, or QSTU3 circuit will not dial or misdials.

The first digit of the two-digit prompts cannot conflict with [PDNs] in Program 04 or [PhDNs] and DH [DNs] in Program *04.

- **To create one-digit dialing prompts and to assign the associated destination station numbers**
 1. Enter Program 09.
 2. When “**SELECT**” appears on the LCD, press the desired digit (prompt). Then “**AUTO ATT DIAL**” appears on the LCD.
 3. Enter the destination DH or station [PDN] (not Port number) number or **#4** plus the ACD group (per Note) associated with the prompts and then the **Hold** button.
 4. Press **Spkr** and repeat Steps 2 and 3 for more prompt-station entries.

- **To enter two-digit dialing prompts along with their destination station numbers**
 1. Enter Program 09 and then see “**SELECT**” on the LCD.
 2. Press the desired leading digit then see “**AUTO ATT DIAL**” on the LCD.
 3. Press ***** and then the **Hold** button. The first digit will now be set, and “**DATA PROGRAMED**” will again appear on the LCD.
 4. Press **Spkr** and press a second digit, and then see “**AUTO ATT DIAL**” on the LCD.
 5. Enter the destination station [DN] assigned to the two-digit prompt and then the **Hold** button.
 6. To complete more prompt-station entries, repeat Steps 4 and 6.

- **To assign a digit (menu prompt) to an ACD Group**
 - Enter **#4XX** in place of the [DN]) at the “**AUTO ATT DIAL**” LCD programming prompt, where XX is the ACD Group number 01~16.

Note When transmission and DTMF levels are lower than normal or when the digital announcement voice frequencies match DTMF digital frequencies (talk-off), Auto Attendant efficiency may be improved with two-digit dialing options, instead of one-digit dialing options.

Program *09 Overview

This program assigns the routing destinations for incoming DID line calls.

Program *09 DID extension numbers can be routed to [PDNs], [SDNs], or [PhDNs], ACD Groups, or Distributed Hunt groups. Each [PDN]/[SDN] and/or [PhDN] can appear and ring (immediate, 12 sec. delay or 24 sec. delay with Program *71, *72 and *73) on up to 120 telephones. A DID extension number can ring up to 120 telephones maximum.

Any DID line can be assigned to route with Program 71 and 72 DNIS routing assignments, instead of Program *09 assignments, to provide all the DNIS call routing features to normal DID lines.

Which program options (Program *09 or Program 71 and 72) DID line call routing will follow is determined for each DID line in Program 17, LED 05 and/or 07 (see Program 17 for more details).

On DK424, DID calls will alternately ring all or selected Attendant Consoles (in the load share group, assigned in Program 81-89) when a DID Attendant Console extension number is assigned to ring any one of the Attendant Console ports in the load share group.


Program 10-1 – System Assignments, Part 1 of 3

Processor Type: DK14, DK40i, All RCTUs

Program Type: System

Initialized Default: LEDs 07, 08, 09, 16, 18, 19 and 20 are ON

* # * # 1 * 2 * 3 - Spkr 1 0 Hold - Spkr 1 ■ Hold - Spkr # # Hold - Spkr # # Hold

SELECT = 1  Light the LED Buttons that are marked with an X in the table below.

Button/ LED	X	LED ON	LED OFF
20		Two-CO Line Conference/Allowed	Not Allowed Two-CO line Conference must be allowed for Tandem Line, DISA, CF-EXT, and DNIS external routing operation. Also See Program 15, Code 5.
19		Conference/Allowed	Not Allowed
18		Ring Detect Time-Normal	Ring Detect Time-Short Rings
17		Station to Station Call Volume PAD (-8db)	No Station to Station Call PAD
16		BRI Standard Initialization (2 TEIs)	None (TEI = 0)
15-13		Not Used	Not Used
12		ABR Cycles/10 times	15 times
11		ABR Redial time/30 sec.	1 min.
10		System Speed Dial Override, Toll Restriction	Restricted
09		Exclusive Hold/Allowed	Not Allowed
08		Alternate Point Answer	Transfer Privacy
07		Ring Transfer of CO Line Allowed	Not Allowed If Ring Transfer is allowed, set Ring Transfer Recall time in Program 37; if ring transfer is not allowed (LED 07 OFF), the station recalls immediately if transfer is attempted.
06		CO Line Repeat Ringing	Standard Ring Standard ring pattern is 1 sec. on, 3 sec. off.
05		Incoming Call Abandon 8 sec.	6 sec.
04		CO Line DTMF Signal Time 160 msec.	80 msec. LED 04 DTMF Signal Time applies to manual and speed dial tones sent out of the system via CO lines. This applies when dialing from any Toshiba telephone, including the 2000-series Digital Telephone. LED 04 does not apply to Call Forward or Voice Mail ID DTMF tones sent to voice mail ports. (See Program 10-2, LED 06, for tones sent to Voice Mail ports.)
03		Dial Pulse Make Ratio 33%	40%
02		0.45 or 1.5 sec. per Program 42-0	CO Line Re-seize guard time 0.45 CO line guard time is the time interval the system requires to release a CO line and re-seize it. If LED 02 is off, all lines are set with 0.45 second guard time; if LED is on, guard time is 0.45 or 1.5 seconds per Program 42-0.
01		Tone First (from SLTs, DKTs and EKTs)	Voice First (from SLTs, DKTs and EKTs) This applies to [PDNs] not [PhDNs]; [PhDNs] are always tone first.

System & Station

Program 10-1 Overview

You can make the following system assignments with Program 10-1:

LED 20: Two-CO Line Conference

Two lines can be conferenced with one or two telephones (digital, electronic, or standard). Conference (see LED 19) in this program to enable this feature. Also, Two-line Conference must be allowed for DISA, CF-EXT, and DNIS external routing use of outgoing lines. CO lines must be enabled for tandem connection with Program 15, Code 5.

LED 19: Conference

Gives stations the ability to enable (LED 19 ON) or disable (LED 19 OFF) any Conference.

LED 18: Ring Detect Time

Sets normal ring detect time (LED 18 ON). Only use the normal setting, except unless connected to CO/Centrex lines that send ring signals less than 120 milliseconds.

LED 17: Station-to-Station Call Volume PAD

ON reduces station-to-station talk path volume (-8 dB). LED 17 should be OFF in all cases except where extreme quiet room noise is expected.

LED 16: BRI Standard or Non-initializing Terminal

Determines the initialization process for BRI lines connected to the ISDN network. A normal sequence is followed if this is turned ON. If it is OFF, no initialization sequence is needed.

LED 12: Automatic Busy Redial (ABR) Cycles

If activated from an electronic or digital telephone, ABR retries dialing a telephone number on a line if a far end busy signal is detected. Turn LED 12 ON to have the system try up to 10 times; turn OFF for up to 15 attempts. This feature is not available with standard telephones and/or Tie or DID lines.

LED 11: ABR Redial Time

Upon detecting a far end busy signal on a line, ABR will retry either once every 30 seconds or once every minute. Turn LED 11 ON for 30 seconds; turn OFF for one minute.

LED 10: System Speed Dial Override, Toll Restriction

System Speed Dial can be chosen to override Toll Restriction if LED 10 is turned ON.

LED 09: Exclusive Hold

Exclusive Hold allows electronic and digital telephones to place calls on hold (by pressing the **Hold** button twice) so that other stations cannot pick up the held call with a **CO Line** button. This feature can be disabled on a system-wide basis. Any station can pick up an Exclusive Hold call by using the call pickup code.

LED 08: Alternate Point Answer/Transfer Privacy

If Transfer Privacy is selected, a ring/blind transferred call can only be answered at the called station upon transfer of that call (after the transferring party releases the call). With Alternate Point Answer, any electronic or digital telephone with the appropriate CO line or [DN] button can pick up a call transferred to another telephone. In either case, Call Pickup will function from any station. Station [DN] and CO line transferred calls that occur on [DN] buttons are always Private.

LED 07: Ring Transfer of CO Line Allowed

This option defines station operation for transferring [DN] and CO line calls. If Ring Transfer is allowed, the system will allow “blind” transfers to busy or idle stations. The transferring station may release a transferred call before the called party answers. If not allowed, the system will allow supervised transfers only—the called station must answer before the transferring station releases. If Ring Transfer is not allowed, immediate recall occurs if “blind” transfer is attempted. The system denies Ring Transfer to stations in the Do Not Disturb (DND) mode, and immediate recall will occur if attempted.

LED 06: CO Line Repeat Ringing

If selected, the incoming ringing timing pattern at a station will be the same as the CO line ringing pattern. This is used mainly with Centrex or PBX systems which may vary the ring pattern to distinguish between internal and external incoming calls, etc. If Standard Ringing is chosen, CO line station ringing will cycle one second on, three seconds off regardless of the incoming ring pattern. This ringing option may be undesirable for some COs.

LED 05: Incoming Call Abandon Timing

The amount of time between incoming CO line ring signals determines when the system will discontinue (abandon) sending ringing tones to stations. The choice of six or eight seconds depends on the line ring pattern. This assignment has no effect if the Line Repeat Ringing (LED 06) option is used.

LED 04: Dual-tone Multi-frequency (DTMF) Signal Time

DTMF signals sent out to CO lines can be either 80 or 160 msecs. in length. DTMF to QSTU2, KSTU2, RSTU, RSTU2, RDSU/RSTS, PSTU, PESU ports (including voice mail ports) are not affected by this assignment. See Program 10-2 for standard telephone port DTMF timing. This program pertains to manual dialing or speed dialing from all Toshiba telephones, with the following exception. When dialing manually from 2000-series telephones, signals last as long as the buttons are pressed (minimum 80 msec.).

LED 03: Dial Pulse (DP) Make Ratio

Dial Pulse timing sent out to CO lines can be changed from the normal 40% make ratio to 33%. This selection only applies to those CO lines assigned in Program 15 to signal dialing with dial pulse instead of Dual-tone Multi-frequency (DTMF).

LED 02: Line Reseize Guard Time

Should be set for 0.45 seconds for most installations. Set guard time for 1.5 seconds (using Program 10-1, LED 02 ON, and Program 42-0), if CO lines experience the following situations: no dial tone when a line is released and reseized immediately; or, when operating behind Centrex or PBX, false hookflash signals are sent to the CO when stations release and reseize the same line immediately.

LED 01: Tone First/Voice First Signaling-Electronic and Digital Telephone

With Voice First, a Directory Number call to an electronic or digital telephone will be preceded by a one-second burst of tone, followed by voice communication via the Handsfree Answerback function. For Tone First, repetitive Directory Number ring tone is sent in a one-second on, three-seconds off pattern. Conversion from one signaling mode to the other can be made by dialing an additional digit of 1 from the calling station. Voice First applies to called [PDNs] only; [PhDNs] are always tone first regardless of LED 01 setting.


Program 10-2 – System Assignments, Part 2 of 3

Processor Type: DK14, DK40i, All RCTUs

Program Type: System

Initialized Default: LEDs 02, 14, 15, and 16 are ON

* # * # 1 * 2 * 3 - Spkr 1 0 Hold - Spkr 2 Hold - Spkr # # Hold - Spkr # # Hold

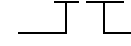SELECT = 2  Light the LED Buttons that are marked with an X in the table below.

Button/ LED	X	LED ON	LED OFF
20		Padded DTMF Tone Return When Dialing	DTMF/No DTMF Per Prog 10-2, LED 11
19		External Conference Amp Connected to PEKU	No External Amplifier Connected
18		External Conference Amp Connected to PEKU	No External Amplifier Connected
17		"TRNS" Soft Key—Immediate	"TRNS" Soft Key—Normal
16		Executive Override Warning Tone/ON	Executive Override Warning Tone/OFF
15		External Page included with All Call Page	Not Included - see Button/LED 20 note.
14		Privacy Override/Attendant/Supervised Loop Warning Tone/ON	Privacy/Attendant Supervised Loop Override Warning Tone/OFF
13		Send Auto Callback Camp-on Tone	No Callback Tone. Called party receives notification tone when calling party activates Auto Call Back.
12		CO Line 3 min Beep Tone	No Beep Tone
11		No DTMF Tone Return When Dialing	DTMF tone return when dialing
10		BGM connected to PESU, Circuit 8	EKT connected to PESU, CKT 8
09		BGM connected to PEKU, Circuit 3	EKT connected to PEKU, CKT 3
08		Elapsed Time Display 1 min. After Access or Answer a CO line	Elapsed Time Display 15 sec. After Access or Answer a CO Line
07		Standard Tel. CO Ring per Prog. 10-1, LED 06	Standard Tel. CO Ring Distinctive
06		VM ID Code DTMF Signal Time 80 ms	160 ms
05		Send Music-on-hold.	Send Ringback Tone to the transferred party.
04		MW cancel from VM: RS-232 or dial #64 + [DN]	MW cancel from VM: Automatic When Answer
03		3 Ringing Modes	2 Ringing Modes
02		Hunt/C.F. override from DSS console's phone	Hunt/C.F. override from DSS console
01		Tone First (from DSS Console)	Voice First (from DSS Console) This applies to [PDNs] not [PhDNs]; [PhDNs] are always tone first.

Program 10-2 Overview

You can make the following system assignments with Program 10-2:

LED 20: Padded Tone Return

With some Central Offices, callers may experience clicking or squealing sounds or a loud DTMF tone return during or after dialing. To counteract this, it is recommended that padded tone return or no tone return be enabled (LED 20 ON) or No DTMF tone return (LED 20 OFF and LED 11 ON). If this option is not selected (LED 20 OFF), Program 10-2, LED 11 selects normal level DTMF Return or No DTMF Return.

The optional padded DTMF frequency system tone is returned to callers at a lower-than-normal volume level with each digit dialed from the telephone dial pad or when speed dialing is used.

The tones are also heard by callers routed to voice mail when DK sends VM ID codes.

LED 19: Stations Use External Amplified Conference

Enable this feature (LED 19 ON) only if an external amplifier (Program 10-3) is used for Two-line conference calls. This provides additional amplification to the station during a Two-line conference call. If Two-CO line conference/tandem call volume is low due to CO line loss, Toshiba recommends testing two-line Conference with LED 19 ON; if it improves the volume level and there is no hum noise, keep LED 19 ON.

Disable this feature (LED 19 OFF) if an external amplifier is not switched into two-line conference calls in all cases. Do this because line unbalance may cause hum noise on the station talk path during Two-CO line conference calls.

LED 18: Two-CO Line Conference

LED 18 should be OFF whenever Two-line (Tandem, DNIS Network, External Call Forward, DISA) connection is allowed (in Program 15-5 and Program 10-1, LEDs 19 and 20) unless Two-CO line conference amplifiers are connected (Program 10-3, LED 01~04).

This increases the volume level between the two outside parties on a tandem (two-line) connection, but it will not affect station volume if conferenced into the tandem connection. If Two-CO line volume is low due to CO line loss, test the volume level with LED 18 ON. If it improves without adding hum noise, keep LED 18 ON.

LED 17: “TRNS” Soft Key Immediate Transfer

If this feature is activated and a transfer is initiated with the “TRNS” Soft Key, the call will ring transfer (Camp-on Busy) immediately after the last digit of the called station (busy or idle) number is dialed. This feature does not apply to transfers initiated with the fixed **Cnf/Trn** button or “CONF” Soft Key.

LED 16: Executive Override Warning Tone

Executive Override allows a station user (if assigned in) to break into and listen to an existing station conversation. A warning tone can be set optionally to be heard by the conversing parties.

LED 15: External Page Included with All Call Page

External speakers and all electronic and digital telephones are paged by dialing: Directory Number [DN] + **#39**. The **All Call Page** button is used to page all digital and electronic telephones only; external speakers are not included when using the button.

If the All Call voice page access code (**#39**) is entered, or if the paging number is dialed on incoming Tie, DID or DNIS lines, external page (all zones) may be included with All Call telephone speaker paging. This option does not affect the **All Call Page** button function, which activates electronic and digital telephone speakers only, never external page (See Program 17, LED 01 and Program 71).

LED 14: Privacy Override Warning Tone

Privacy Override allows a station user to enter an existing CO line conversation by pressing a **CO Line** button (if the called station is assigned in Program 30). A warning tone can be set optionally to be heard by the conversing parties.

LED 13: Auto Callback Camp-on Tone

A busy called digital or electronic telephone user may optionally hear a one-time beep tone (from the speaker) signifying that another station has tried to call and has activated the Automatic Callback feature.

LED 12: CO Line Beep Tone

If this LED is lit, a beep tone will be sent every three minutes to stations on outgoing line calls.

LED 11: Dual-tone Multi-frequency (DTMF) Tone Return

This option deletes DTMF tones that are returned to digital or electronic telephones when manually dialing or speed dialing. It also eliminates auto dial digits returned to callers when digits are automatically sent to voice mail ports on forwarded calls.

LEDs 10 and 09: Background Music/Music-on-Hold Separation

An alternate Background Music (BGM) source can be sent to digital telephone speakers, electronic telephone speakers, and external page speakers, while another Music-on-hold (MOH) source can be sent to lines or internal stations on hold.

The alternate BGM source can be connected to either circuit 3 on a PEKU PCB, circuit 8 on a PESU PCB, or circuit 2 on a PSTU, KSTU2, RDSU, RSTU2, RSTU, or QSTU2. LEDs 09 and 10 should be OFF for RSTU2, RSTU, RDSU, KSTU2, QSTU2, and PSTU alternate BGM. Also run Program 19 to assign BGM to a PCB slot number.

- ♦ **DK14, DK40i:** The normal MOH source can be connected to the MOH RCA jack on the DK14 KSU or on the DK40i KSU.
- ♦ **DK424:** The normal MOH source always connects to an RCTU. Also run Program 19 to assign BGM to a PCB slot number.

When disabled (LED 10 OFF), deletes DTMF tones returned to digital and electronic telephones when dialing from dial pad or speed dialing; also deletes auto dial digits from callers that are call forwarded to voice mail. This does not affect the actual DTMF tones sent out to trunks or voice mail devices.

When disabled (LED 09 OFF) BGM connected to the PEKU or PESU is sent to electronic and digital telephone speakers and external page (optional). To assign the BGM PCB slot number, see Program 19-1.

PESU/PEKU can be in any universal slot assigned in Program 19-1.

LED 08: Display Dialed Number Timing

An LCD telephone will display a dialed number on outgoing calls and the CO line (Program 93) ID name, DNIS, ANI, or Caller ID information on incoming calls for either 15 or 60 seconds before the display changes to the elapsed time of the call.

LED 07: Standard Telephone Distinctive Ring

If Distinctive Ring is enabled (LED 07 ON) the CO line call ring pattern is standard: 0.2 seconds on, 0.4 seconds off, 0.2 seconds on, 3.4 seconds off; intercom ring is always 1 second on, 3 seconds off. This does not apply to VM Ports (Program 31, LED 17 ON) which are always standard ring. The line call ring pattern to standard telephones can be made distinct from the intercom ring pattern.

If Distinctive Ring is not enabled (LED 07 OFF), the pattern is per Program 10-1, LED 06. Intercom, Transferred, Tie, and DID calls, with or without Distinctive Ring enabled, ring with a 1-second on and 3-seconds off pattern.

LED 06: Voice Mail Identification Code, Dual-tone Multi-frequency (DTMF) Signal Time

DTMF digits automatically sent to RSTU/RDSU/RSTU2/RSTS/PSTU/PESU/KSTU2/QSTU2 voice mail ports can be sent in either 80- or 160-millisecond bursts. This applies to digits sent via the voice mail identification code (**#656/#657**) set at each station. This also applies to manually dialed digits sent to voice mail ports from Toshiba telephones, including 2000-series digital telephones.

LED 05: Music-on-hold or Ring Back Tone

Prior to Release 3.2, transferred parties would either hear Music-on-hold (MOH) or silence. With Release 3.2 and higher, transferred parties can hear MOH or Ring Back Tone (RBT). Turn LED 05 ON to play MOH for transferred parties; turn LED 05 OFF to send RBT. If MOH is not installed, and LED 05 has been turned on, the transferred party will hear nothing.

LED 04: Voice Mail Message Waiting Cancel Via Dial #64/Automatic

Set Voice Mail Message Waiting Cancel Via Dial **#64** (LED 04 ON) if the Strata DK system is connected to a voice mail (VM) system that sets station Message Waiting (MW) LEDs by RS-232 or by dialing **#63** + Station number, [PDN] or [PhDN] or RS-232 signal. This ensures the message LED remains flashing and are not cancelled by the DK system until the VM machine cancels the Message LED by sending an RS-232 signal or pressing **#64** + Station Intercom number, [PDN] or [PhDN].

Also, when using RS-232 Voice Mail Integration (SMDI) LED 16 must be set to ON in Program 31, for PGM 10-2 to function.

Set to Automatic (LED 04 OFF) to cancel the flashing message waiting LED any time a station calls the VM machine and the VM machine answers.

LED 03: Ringing Modes

The Strata DK system can be set for either two-ringing mode or three-ringing mode operation. The Day and Night modes are available with the two-mode operation, and the Day, Day2, and Nights modes are available with the three-mode operation. Each ringing mode has distinct CO line ring assignments (Programs 71 (1~3), 78; 81~89 and *81, *84, *87).

The three-mode selection is useful for alternate answering positions. Station users can change modes with the **Night Transfer** button on either a DSS console (Program 29), a telephone (Program 39) and/or Attendant Consoles (Program 59).

This feature applies to loop and ground start lines, and also Tie, DID, and DNIS lines assigned with Program 17, LED 05 ON; these lines will use Program 71 (1~3) assignments. Tie and DID lines assigned with Program 17, LED 05 OFF cannot be routed to different destinations in the Day/Day 2/Night modes.

LED 02: Call Forward/Station Hunt Override From DSS Console (DK424 and DK40i only)

If a station has activated Call Forwarding or Station Hunting, all calls to that station—except for calls from the DSS console position—will forward or hunt to another number. You can Call Forward from the console itself *or* from the digital or electronic telephone assigned to it. You cannot Call Forward from both; it is an either/or choice. If the console calls (using the DSS console station buttons) are forwarded, the telephone attached to the console will not be forwarded, and vice versa. This allows the console operator flexibility in reaching a station user that has Call Forward or Station Hunt telephone options activated.

Note This feature applies to both types of DSS consoles, the DDSS and the HDSS.

LED 01: Tone First/Voice First-DSS Console

The intercom call signal from a DSS console can be set for Tone First Signaling or Voice First Signaling. This setting is independent of the system-wide signal option in Program 10-1. Thus, DSS consoles and their attendant stations can ring with different signaling modes. Voice First applies to called [PDNs] only; [PhDNs] are always tone first.


Program 10-3 – System Assignments, Part 3 of 3

Processor Type: DK14, DK40i, All RCTUs

Program Type: System

Initialized Default: LEDs 11, 13 and 20 ON, all other LEDs OFF

* # * # 1 * 2 * 3 - Spkr 1 0 Hold - Spkr 3 Hold - Spkr # # Hold - Spkr # # Hold

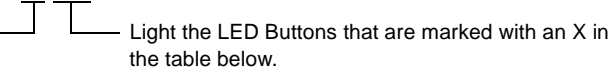SELECT = 3  Light the LED Buttons that are marked with an X in the table below.

Button/ LED	X	LED ON	LED OFF
20		SMDI Message Desk Number (001) is sent in SMDI packet.	CO line number is sent in SMDI packet.
19		Speed Dial Entry Timeout- 3 minutes	Speed Dial Entry Timeout - 1 minute
18		Auto Attendant: Normal Ringing Pattern After Camp-on	Auto Attendant: Back to Announcement After Camp-on
17		Auto Attendant: Ring Before Disconnect time	Auto Attendant: Ring Before Disconnect time
16		Auto Attendant: Ring Before Disconnect time	Auto Attendant: Ring Before Disconnect time
15		Auto Attendant: Sends MOH to Caller	Auto Attendant: Sends RBT to Caller
14		SMDI-Bellcore Standard VM Interface, per LED 09 Below	Not used
13		SMDI-Station Number Digit Length (HEX-8)	SMDI-Station Number Digit Length (HEX-0)
12		SMDI-Station Number Digit Length (HEX-4)	SMDI-Station Number Digit Length (HEX-0)
11		SMDI-Station Number Digit Length (HEX-2)	SMDI-Station Number Digit Length (HEX-0)
10		SMDI-Station Number Digit Length (HEX-1)	SMDI-Station Number Digit Length (HEX-0)
09		Bellcore Standard 1985 Version (1-space)	Bellcore Standard 1985 Version (2-space)
08		Caller ID/ANI numbers are sent out the SMDI port	Caller ID/ANI numbers are not sent out the SMDI port.
07			
06			
05			
04		PEKU Ports 33, 34-Amp, connected (RCTUBA/BB or higher)	PEKU Ports 33, 34-stations connected
03		PEKU Ports 25, 26-Amp, connected	PEKU Ports 25, 26-stations connected
02		PEKU Ports 17, 18-Amp, connected	PEKU Ports 17, 18-stations connected
01		PEKU Ports 09, 10-Amp, connected	PEKU Ports 09, 10-stations connected

System & Station

Program 10-3 Overview

You can make the following system assignments with Program 10-3:

LED 20: SMDI Message Desk Number

For CO line calls answered by Voice Mail/Auto Attendant devices, either the three-digit CO line number (001~200) or the Message Desk number (001) can be sent in the Message Desk fields of the SMDI packet. The system distinguishes CO line number 001 from Message Desk number 001.

LED 19: Speed Dial Entry Timeout

Station users can either have up to one minute or up to three minutes to store a Speed Dial number or memo. If they do not store the number or memo within the set time, their station exits the Speed Dial-storage mode and returns to the normal idle state. The timer is required because of the User Programmable Feature Buttons feature, which allows the [PDN], **Hold**, and **Cnf/Trns** buttons to be programmed in Speed Dial Memory. The three-minute setting is recommended if station users frequently store memos with Speed Dial numbers using the **Mode** button below the LCD.

LED 18: Built-in Auto Attendant Camp-on Busy/Ring No Answer Routing

This option is designed for Auto Attendant configurations that have primary announcement devices, but no secondary ones tells the system where to route Auto Attendant calls that ring and are not answered or have been camped-on for a designated time (see Program 26). The calls can be sent back to the primary announcement device or to the station or stations assigned to the CO lines' normal ringing pattern (see Programs 81, 84, and 87).

LEDs 16 and 17: Built-in Auto Attendant Disconnect Time

If LED 18 is assigned for normal ringing, set LEDs 16 and 17 to tell the system when to disconnect Built-in Auto Attendant calls that have not been answered by the alternative stations.

The time the Auto Attendant rings stations (per Program 81, 84, 87) after a loop start line caller does not dial and/or a ringing station does not answer. If a call is not answered before ring disconnect time period time-out, the call will disconnect. This prevents loop start lines from being locked-up when there is no CPC supervision from the central office after the outside caller hangs up.

Set LEDs 16 and 17 for the desired time as follows:

- ◆ 40 seconds: LED 16 OFF, LED 17 OFF (Initialized default)
- ◆ 120 seconds: LED 16 OFF, LED 17 ON
- ◆ 240 seconds: LED 16 ON, LED 17 OFF

LED 15: Built-in Auto Attendant MOH/RBT for Transfer

Callers can hear ring back tone (RBT) or Music-on-hold (MOH) after being transferred from the Built-in Auto Attendant to a station, depending on the selection made with LED 15.

LED 14: RS-232 Voice Mail Signaling Method

The DK provides two types of RS-232 signaling: Bellcore Standard type (TR-TSY-000283, TR-NWT-000283) or Toshiba Proprietary. Refer to the VM machine installation documentation and contact the Toshiba and/or VM machine manufacturer for VM machine SMDI configuration.

Notes

- Toshiba VP products require Release 7 software or above for Toshiba proprietary integration.
- Toshiba VP products require the SW-X0042 feature package (CO Centrex) for SMDI, but not for Toshiba Proprietary RS-232 Interface.
- Toshiba Strategy products support SMDI only in the standard configuration, not Toshiba proprietary RS-232 interface.

LEDs 13-10: SMDI Station Number Digit Length

Set LED 10-13 ON so that the hex values add up to the Voice Mail station digit length for SMDI VM interface. (Example: For VP100 or Stratagy/Stratagy DK SMDI interface, set LEDs 10, 11, and 12 on for 7 digits (1+2+4=7).

Do not set LED 10-13 OFF for Toshiba proprietary interface; it is no longer supported by DK systems.

This refers to the station digit length that the SMDI voice mail system design requires. This parameter is set for the Voice Mail system digit length; not the DK station digit length. If the voice mail system SMDI is designed per the Bellcore Standard TR-TSY-000283, 1985 version, set this parameter to seven-digits (LEDs 10, 11, and 12 ON which is equal to Hex 7). Current VP and Stratagy voice mail SMDI systems are designed for this seven-digit operation.

If the voice mail system SMDI is designed per the Bellcore Standard TR-NWT-000283, 1991 version, set this parameter between 1-10 digits with LEDs 10, 11, 12, and 13. (See Program 10-3 record sheet for LED-HEX values.) Digit length setting is not necessary with Toshiba Proprietary Interface (LED 10-13 OFF).

LED 08: Caller ID / Automatic Number ID

This option determines if Caller ID (CLID) and/or Automatic Number Identification (ANI) telephone numbers will be sent out the system SMDI port (SMDI only not Toshiba proprietary):

- ♦ Turn LED 08, 10, 11, 12, and 13 ON if received Caller ID and/or ANI numbers should be sent out the system SMDI port.
- ♦ Turn LED 08 OFF (initialized default) if received Caller ID and/or ANI numbers should not be sent out the system SMDI port.

LED 09: SMDI Bellcore Standard Version

Toshiba Proprietary and SMDI is available with RCTUB2 or RCTUC/RCTUD2 Release 2 and above only and is only for use with Toshiba VP systems, not with Toshiba Stratagy systems.

Bellcore released two versions of the SMDI specification. Contact your voice mail machine vendor to determine which specification to enable with this program – TR-TSY-000283, Issue 1, July 1985 version, or the TR-NWT-000283, Issue 2, May 1991 version. Toshiba VP and Stratagy SMDI products currently use the 1985 version. In either case, the VM station digit length must be set with LED 10~13 as shown above.

Also note that the 1985 and 1991 version Bellcore specifications use different space/character parameters for some call types which means the DK will not operate properly if the correct version is not selected. Select the 1985 version (LED 09 OFF) for Toshiba VP and Stratagy products. This selection is not needed with Toshiba Proprietary Interface.

LEDs 01~04: Amplified Conference Assignments

Light LEDs 01~04 to identify which PEKU ports should be connected to external amplifiers. External Amplified Conference is provided by customer-supplied two-way amplifiers connected to system PEKU ports to amplify “two-line” calls.

- ♦ **DK424 and DK40i:** Up to four amplifiers can be connected, depending on the DK system type (two PEKU ports per amplifier). The number of simultaneous Two-CO line conferencing (three-party) calls varies according to the processor:

DK40i: 4 calls (2 amplified)

RCTUA: 4 calls (3 amplified)

RCTUB, RCTUBA/BB and RCTUC/D: 10 calls (4 amplified)

RCTUE: 20 calls (4 amplified)

For DK424 and DK 40, amplifiers are switched into Two-CO line calls automatically, one amplifier for each call, starting from the lowest PEKU ports enabled to the highest (see Program 10-3 record sheet). Skipping ports is allowed. Two-CO line calls established after all amplifiers are in use will not be amplified.

Example

The first amplifier can be connected to PEKU ports 017 and 018, skipping ports 009 and 010. In this case, LED 02 should be ON and LED 01 should be OFF. (See Program 10-1, LEDs 19 and 20; Program 10-2, LEDs 18 and 19; and Program 15-5 for more information on Two-line Conference.)

Important! *The amplifiers used for supervised, Two-line Conference connections are switched in automatically starting with the first connection. Calls made when there are no amplifiers available will not be amplified. Unsupervised Two-line tandem connections are not limited to the numbers listed above (by processor), but are limited by the number of lines equipped in the system.*

Note External amplifiers also amplify two-line DISA, Call Forward External, DNIS externally routed calls, DID, and Tie line trunk to trunk calls.

Program *10 – Enhanced 911 Operation

Processor Type: DK14, DK40i, all RCTUs

Program Type: System


Initialized Default: See each program

Program *10 provides two QSTU2, RSTU, KSTU2, RDSU, PSTU, or PESU ports to be assigned to interface with central office E911 trunks.

E911 enhanced operation provides locator information to the responding agency to provide more complete name and address information, including building, floor, etc. This is done by sending the station number of the 911 caller to the E911 emergency center. This locator information is then cross referenced with name/number/address data in the E911 central database, and the E911 operator receives the precise location along with the basic information.

The Strata DK14, DK40i and DK424 accomplishes this through a special interface between the KSU and the CO. This special interface takes the station number information and sends it through the public network in a format compatible with the central E911 database. This special interface is required in addition to sending software within the Strata DK.

The required interface is an external device (Telident or Proctor) that interfaces to up to two standard analog station ports.

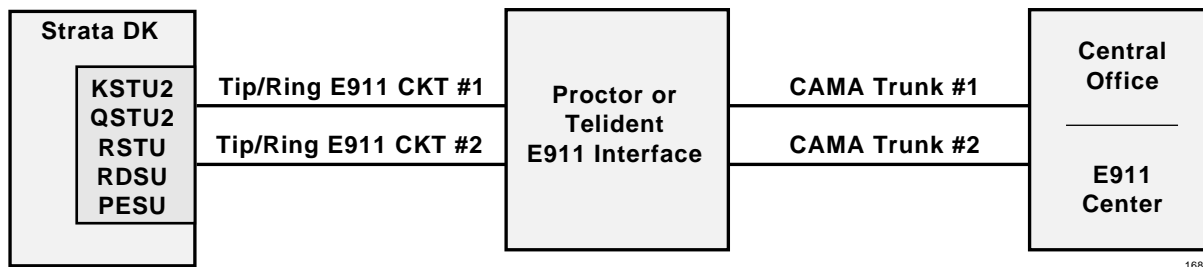

E911 CKT 1 and 2 assigned in Program *10

Figure 3-1 Physical Connection of E911 Interface

Programs *10-11 and *10-12 – E911 Standard Telephone Ports Assignment

Initialized Default: Blank



First E911 Port = 11 — E911 RSTU/KSTU2 Port Number

Second E911 Port = 12

	E911 RSTU/KSTU2/QSTU2 Port Number
First Standard Port	
Second Standard Port	


Programs *10-11 and *10-12 Overview

Programs *10-11 and *10-12 assign which QSTU2, KSTU2, RSTU2, RSTU, RDSU, PSTU, or PESU standard telephone ports are connected to the E911 interface unit.

Important! Program 04 Directory Number data must be blank for E911 QSTU2, KSTU2, RSTU2, or RSTU ports.

Program *10-91 – E911 Interdigital Time

Initialized Default: 15 seconds

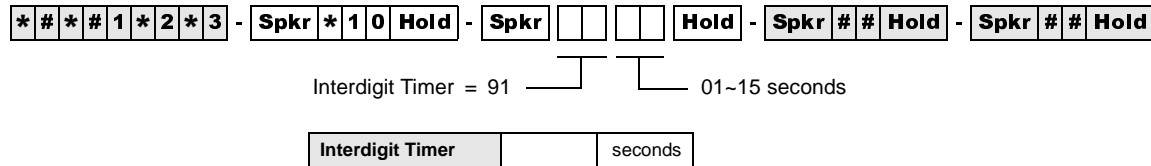


Program *10-91 Overview

*10-91 assigns the time allowed to dial each digit after dialing 9 when using the E911 feature. This time will affect the time that LCR or CO Line dial tone is returned when dialing 9. However, a user can dial a 9+ (non-911) calls normally before receiving LCR or CO line dial tone and the DK will route the call appropriately.

Program *10-92 – E911 Pause Before Send Timer

Initialized Default: 0 - No pause

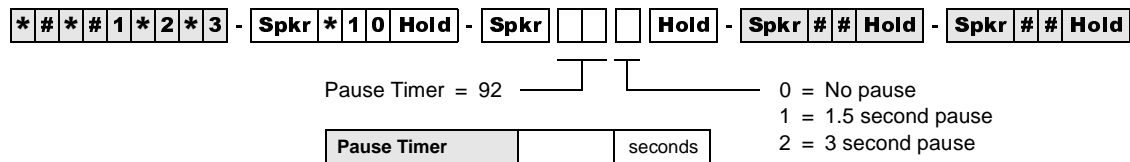

Program *10-92 Overview

*10-92 assigns the time the DK will wait before sending the Station Primary Directory Number to the E911 SLT port after the E911 SLT port answers.

Program 12 – System Assignments, Basic Timing

Processor Type: DK14, DK40i, All RCTUs

Program Type: Station

Initialized Default:

Program Timing	
Code 1	15 secs.
Code 3	1
Code 4	2
Code 5	0
Code 8	1
Code 9	4

* # * # 1 * 2 * 3 - Spkr 1 2 Hold - Spkr [] [] Hold - Spkr # # Hold - Spkr # # Hold

SELECT = 1, 3-5, 8, 9
Enter program code from the table below.

DATA = Enter ring down time (00-60)

SELECT CODE = Enter the 1 digit code which corresponds to the time listed in the table below.

For Program Codes 8 and 9, the LCD responds with

Program Code	Function	Code	Time	Required Code
1	Standard Telephone Ring Down Timer (Release 4.0)	XX	XX = 2 digits. 00-60 secs.	
3	Pause Timing (Speed Dial)	1	1.5 sec	
		2	3.0 sec.	
4	Flash Timing	1	0.5 sec.	
		2	2.0 sec. (Not used in U.S.)	
		4	0.2 sec.	
5	Pause After Flash (Voice Path Delay)	0	no pause	
		1	1.5 sec.	
		2	3.0 sec.	
8	DNIS Ext. Network, External Call Forward, and DISA Disconnect Timer for Loop Start Lines	0	no disconnect timer	
		1	4 min. disconnect	
		2	10 min. disconnect	
		3	20 min. disconnect	
9	QRUC3/K4RCU3/RRCS DTMF Inter-digital Release Time (Standard Phone)	1-9	1-9 secs.	

Program 12 Overview

This program assigns system times for ring down, disconnecting calls, pause times, flash times, auto attendant, DISA, Call Forward External, and DNIS and DTMF receiving decoding.

Code 1: Standard Telephone Ring Down Timer

This feature is available for Release 4.0 and higher. Code 1 assigns the number of seconds that a Hotline or Emergency standard telephone waits after going off-hook before automatically ringing a preassigned directory number. If a valid feature access code or [DN] is dialed prior to the ring down timer expiration, then ring down does not occur. Ring down applies only to standard telephone ports, not electronic or digital telephone ports. Ring down destination numbers are assigned in Program *38.

Code 3: Pause Timing

Code 3 enables station users to program short and long pauses in Speed Dial numbers. Applies to pauses inserted in Speed Dial numbers used for both telephone voice calls and data calls from data interface units. The short pause length can be set system wide for either 1.5 or 3 seconds with this program. The long pause is always 10 seconds.

Code 4: Flashing Timing

When on a CO line, a station user can press the **Flash** button (or enter access code **Cnf/Trn #45**) and the line opens (flash) for 2 seconds, 0.2 seconds (not used in the USA), or 0.5 seconds depending on this assignment. This choice reflects whether to disconnect and regain dial tone (2 seconds), or to use PBX or Centrex features which require a flash signal (0.5 seconds). It also applies to flashes inserted when dialing via Data Interface Units (DIUs).

Code 5: Pause After Flash

Some COs or Centrex facilities require a period of time after a flash signal before they can accept dialing signals. A selection of pause timing is available to automatically delay any dialing signals after flash. This timing applies to Speed Dial calls (with flash signals between the telephone number digits) as well as to manual dialing.

Code 8: DNIS Ext. Network External, Call Forward, and DISA Disconnect Timer for Loop Start Lines

Disconnects DISA, Call Forward External and/or DNIS Telephone Network routed calls when made on loop start lines. Calls can lock-up (keep busy indefinitely) if the CO does not send a disconnect signal (CPC or AR) when the caller hangs up. This timer prevents loop start lines from locking up by disconnecting the call automatically when the timer expires, 4, 10, or 20 minutes from the start of the call. Callers will hear a warning tone and can reset the timer repeatedly by dialing “0”. This disconnect feature is only needed for loop start lines.

Code 9: QRCU3/K4RCU3/K5RCU/K5RCU2/RRCS DTMF Receiver Inter-digital Release Time

With Code 9, one channel of the QRCU3, K4RCU, K5RCU, and K5RCU2 or RRCS Dual-tone Multi-frequency (DTMF) receiver is seized when it is needed for the decoding process, such as for a standard telephone with a DTMF dial pad. When placing outgoing calls with DTMF standard telephones, the talk path to the outside party is not “cut-through” until the DTMF receiver circuit is released. The DTMF receiver channel’s release time can be programmed for between one and nine seconds (initialized timing is four seconds)—this is the time it takes to release the DTMF receiver circuit after the last digit is dialed.

The choice of timing is a trade-off between CO line time to connect and user speed. If the time is too long, the outside called party may answer before the voice path is “cut-through,” and the caller is not heard. If the time is too short, a standard telephone user inputting DTMF tones could be cut off prematurely from using other features, such as Speed Dial or Toll Restriction.

Standard telephones can also defeat Toll Restriction if the seize time is too short and they are not required to dial outgoing calls via Least Cost Routing (LCR). Toshiba recommends that standard telephones should always be required to dial outgoing calls via LCR to prevent them from defeating Toll Restriction.

Note If no digits are dialed after accessing an outgoing CO line, the DTMF receiver remains seized for 15 seconds and then drops; however, the line remains connected.

Program 13 – Defining the Message Center


Processor Type: DK14, DK40i, All RCTUs

Program Type: Station

Initialized Default: No port assigned

* # * # 1 * 2 * 3 - Spkr 1 3 Hold - Spkr 1 [] [] Hold - Spkr # # Hold - Spkr # # Hold

SELECT = 1 PORT = Station Logical Port Number

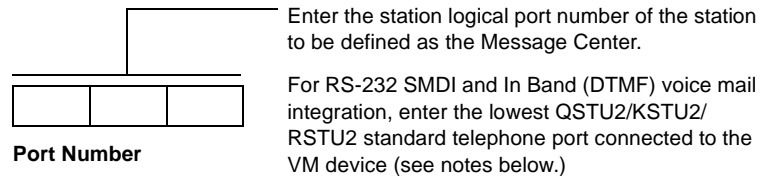

Program 13 Overview

This program assigns a station as the Message Center.

Each digital, electronic and standard telephone can receive a maximum of four message waiting indications per [PDN] and each [PhDN] owned by the station. One of these four is reserved for the designated Message Center. The Message Center should be the customer's main answering position.

Typically, the Message Center is a voice mail device, attendant console, a digital or electronic telephone with a DSS console (DDSS or HDSS), or an add-on module. If incoming traffic to a DDSS or HDSS console attendant is heavy, another station can be assigned as the Message Center.

Notes

- The Message Center is allowed to perform "Message Waiting," even if disallowed on all other stations.
- Assign the Message Center to the customer's main answering position: a station or the lowest port (in VM group) of the customer's voice mail device (see Program 31 for voice mail group port assignments), whichever the customer specifies.
- When using RS-232 SMDI or DTMF voice mail interface, all stations must also be assigned to the message center port in Program *32 and Program 13. This should be the lowest standard telephone port (QSTU2/KSTU2/RSTU2) connected to the VM device. This is also the same (lowest) port assigned in the Program 31 VM group and the lowest standard telephone port assigned in the Program *40 VM Distributed Hunt Group. Do not assign the VM DH Group port number (900~915) as the message center port.

Program 15 – Ground/Loop/Tie/DID Line Options

Processor Type: DK14, DK40i, All RCTUs

Program Type: System

Initialized Default: All LEDs are OFF

* # * # 1 * 2 * 3 - Spkr 1 5 Hold - Spkr Hold - Spkr # # Hold - Spkr # # Hold

SELECT = Program Code

LED Buttons = CO line

Press Scroll to advance or **Page** to go back.

Specify CO line by setting LEDs as defined by the table below. When you are finished, all LEDs with an "X" should be lit.

To advance the CO line range, press **Scroll** located beneath the LCD. Press **Page** for a lower range.

Processor Type	CO Line Range
DK14	001-004
DK40i	001-012
RCTUA	001-016

Processor Type	CO Line Range
RCTUBA/BB	001-048
RCTUC/D	001-144
RCTUE/F	001-200

Program Code	Program	LED ON	LED OFF	Line																	
				LED																	
				01	02	03	04	05	06	07	08	09	10	11	12	13	14	15	16	17	18
0	CPC on AR VM Calls and Voice Calls	Detect	Ignore																		
1	CO/DID/Tie Line Signal	DP	DTMF																		
2	CO/DID/Tie Dial Pulse Rate (Pulse per sec.)	20 PPS	10 PPS																		
3	AR Hold	Detect	Ignore																		
4	AR Timing	Crossbar 95 msec.	ESS (electronic) 450 msec.																		
5	Tandem CO Line Connection with Station Dropout	Enabled	Not Enabled																		
7	Forced Account Code	Enabled	Not Enabled																		
8	Operation After CO Line Flash	No DTMF receiver After Flash	DTMF receiver After Flash																		

Program 15 Overview

This program specifies operational options on a line by line basis.

Code 0: Automatic Release (AR) on Voice Mail or Voice Calls

On loop start CO lines, some COs send the AR (Automatic Release) or CPC (Calling party Control) signal after an external party hangs up (typically 1~15 seconds) to disconnect a loop start line. An AR/CPC signal is a 95 or 450-millisecond open of the CO line loop. If the CO sends this signal after an external party hangs up and before the VM/auto attendant transfers a call, D tone will be sent to the voice mail port (Program 30, LED 15), releasing and clearing that port for another call. This feature is active on all voice calls.

When a station is disconnected from a CO line call by the AR/CPC signal, its LCD will display “CO LINE HANG UP”. The line can be disconnected anytime by the AR/CPC signal during the “talk state” of a call. CO line calls disconnected by the AR/CPC signal will be represented on the SMDR report by a “*” next to the CO line number. Code 0 does not apply to ground start lines, which automatically disconnect when the external party hangs up. The Voice Mail device must recognize the “D” tone as a disconnect signal.

Important! *This option cannot always be used because some COs may send unreliable AR/CPC signaling or no AR/CPC signaling for loop start lines.*

Enable AR/CPC-Hold detect on loop start lines only after testing that the CO sends the AR/CPC-Hold signal.

Code 1: CO Outgoing Signal

Each line can be independently assigned to have either Dial Pulse (DP) or Dual-tone Multi-frequency (DTMF) signaling on outgoing calls toward the Central Office.

- ♦ If a line is set for DP operation, the **Tone Dial Select** button must be programmed on stations that must send DTMF tones over the lines.
- ♦ If Tie or DID lines are programmed for dial pulse, turn LED 11 ON in Program 30 for each station port assigned to the DID or Tie line.

Code 2: Line Pulse (DP) Rate

If a line is assigned DP signaling, the rate can be either 20 or 10 pulses per second (PPS). Some Central Offices do not reliably accept 20 PPS.

Code 3: Automatic Release (AR) From Hold/Transfer

The Automatic Release (AR) signal sometimes called Calling Party Control (CPC) or Supervised Loop Control. This signal consists of a momentary open of the loop start CO line provided by some COs—the duration of the open depends on the CO. If a CO line is programmed (Programs 15-0 and 15-3) to detect the AR/CPC signal, the DK system drops the line when the CO sends the signal (typically 1~15 seconds after the outside party hangs up). The system sends D Tone to voice mail ports to drop the ports when AR/CPC is detected.

The Strata DK system disconnects a loop start CO line voice call and displays “CO LINE HANG UP” on the station’s LCD anytime the AR/CPC signal is detected and the CO line has Programs 15-0 and 15-3 enabled.

On loop start CO lines, some Central Offices send an AR/CPC signal. If the system CO line is on hold (or being transferred to another station or Auto Attendant port) when the AR/CPC signal is sent, it is automatically disconnected if this option is activated.

Two-CO line DISA calls always release when AR/CPC is sent. DISA release via AR/CPC is not related to this program. CO line calls disconnected by the AR/CPC signal will be represented on the Station Message Detail Recording (SMDR) report by a “*” next to the CO line number. Code 3 does not apply to ground start lines, which automatically disconnect when the external party hangs up. See Important! note in earlier paragraph on Code 0.

DK424 only: If loop start lines are programmed to detect the AR/CPC-Hold signal, they do not remain on the attendant console loop keys when the attendant console sets up trunk-to-trunk connection. If programmed to ignore AR/CPC-Hold, they remain on the attendant console Hold loop keys.

Important! *Enable AR/CPC-Hold detect on loop start lines only after testing that the CO sends the AR/CPC-Hold signal.*

Code 4: Automatic Release (AR) Time

AR/CPC signaling timing is different depending on the Central Office equipment. An assignment choice exists between Crossbar or ESS Central Offices.

For more information on AR/CPC, see the preceding Code 0 and Code 3 sections.

Code 5: Tandem Line Connection

Once a Two-line Conference call is made by an electronic, digital or (in R3.2) standard telephone users or voice mail ports, the user or voice mail device may drop out of the conference and leave the two lines connected. The choice exists for each line that may have this capability. This option must be enabled to allow CO lines (ground/loop/Tie/DID) to be used for outgoing DISA, Call Forward External, and Tie/DID/DNIS External Network routing calls.

With Release 3.2, a station which set up a tandem call and then dropped out can dial the pickup code (**#5#79**) to retrieve the tandem call. If more than one tandem connection is set up by a station, **#5#79** picks up the call with the lowest CO line as a priority.

Prior to Release 3.2, standard telephones could set up tandem calls, but they could not drop out. If they tried to drop out, the call would ring back to the standard phone.

Code 7: Forced Account Code (Verified or Non-verified)

If the Forced Account Code feature is used, (see Program 30) a station user is required to enter an Account Code before a CO line call can be completed. A choice exists for each line.

Code 8: Operation After CO Line Flash


If a standard telephone user is on an existing CO line call and flashes the hookswitch on their telephone, a Dual-tone Multi-frequency (DTMF) receiver channel may or may not be connected, depending on this assignment. If the CO line is a rotary dial only type, the QRCU2, K4RCU3, K5RCU, K5RCU2, or RRCS must be seized after flash when dialing from DTMF standard telephones. The QRCU2, K5RCU, K5RCU2, K4RCU3 or RRCS will decode the dialed tones and send dial pulses to the line.

Program 16 – Assign CO Line Groups (or Dial 9)

Processor Type: DK14, DK40i, All RCTUs

Program Type: System

Initialized Default: All CO lines assigned to the Dial 9 group



SELECT = CO Line Group (see legend)

LED Buttons = CO line

Only enter the last two digits of the CO line Group, or enter **00** for Dial 9 group.

Specify CO line by setting LEDs as defined by the table below. When you are finished, all LEDs with an "X" should be lit.

Press **Scroll** to advance or **Page** to go back.

To advance the CO line range, press **Scroll** located beneath the LCD. Press **Page** for a

Processor Type	CO Line Range	CO Line Groups
DK14	001~004	01~04
DK40i	001~012	01~08
RCTUA	001~016	01~08

Processor Type	CO Line Range	CO Line Groups
RCTUBA/BB	001~048	01~08
RCTUC/D	001~144	01~16
RCTUE/F	001~200	01~16

LED	Line Number	CO Line Groups														Dial 9(00)	
20																	
19																	
18																	
17																	
16																	
15																	
14																	
13																	
12																	
11																	
10																	
09																	
08																	
07																	
06																	
05																	
04																	
03																	
02																	
01																	

Program 16 Overview

Use Program 16 to assign each CO line to a CO line group or a general “dial 9” group. A general group for outside calling is available with a “dial 9” access code as the initialized state for all lines.

Lines can be accessed with a dialing code instead of with a CO **Line** button. This is useful for WATS lines or other facilities, and is heavily used in Least Cost Routing and Pooled Line Button assignments.

Do not attempt to assign a line to more than one group. A line need not be assigned to a group. If lines are not used, they should be taken out of all groups, including the “dial 9” group. Automatic Busy Redial (ABR) will not function if unconnected (unused) lines are assigned to a line group.

After programming, press:

- ♦ **Vol▲** to turn all LEDs ON
- ♦ **Vol▼** to turn all LEDs OFF
- ♦ **Mode** and CO line number, then **#** to display and advance

Program 17 – DID/Tie Line Options

Processor Type: DK40i, All RCTUs

Program Type: System

Initialized Default: LED 01/02 OFF, LED 03/04 ON

* # * # 1 * 2 * 3 - Spkr 1 7 Hold - Spkr [] [] # [] Hold - Spkr # # Hold - Spkr # # Hold

Enter Line No. that will be DID or Tie line. _____ Light LED Buttons 01~08 as noted in table below

To add a port range, enter XXX*XXX (low port * high)

Line Numbers:

LED/Button	X	LED ON	LED OFF
09, 10, and 14~20		Not used at this time.	
08		DID/Tie line DTMF digits with * tones	DID/Tie line DTMF digits without * tones
07		DID/Tie line receives ANI and routes per Programs 71 and 72	DID/Tie line does not receives ANI (DID Program *09 and Tie Program 04)
06		Telephone LCD priority is ANI	Telephone LCD priority is DNIS
05		DID/Tie line routes per DNIS assignments: (Programs 71 and 72)	DID/Tie line routes per Non-DNIS assignments: (DID Program *09 and Tie Program 04)
04		DID/Tie no second dial tone	DID/Tie second dial tone
03		DID line Auto Camp-on busy	DID line no Camp-on busy
02		Wink Start for Tie or DID	Immediate Start for Tie or DID
01		Page and Voice Announce on incoming Tie line Page access for Tie/DID DNIS lines	No Page and Voice Announce on incoming Tie line No Page access for Tie/DID DNIS lines

Program 17 Overview

Program 17 assigns lines for Tie and DID operation.

Important! *When normal Tie/DID lines are configured with Program 71 and 72 DNIS assignments, turn LED 05 ON and LED 06, 07 and 08 OFF for those lines - then program the lines as required in Programs 71 and 72.*

Notes

- Each REMU, PEMU, RDDU or TDDU PCB reduces the station port capacity by four station ports, each RDTU Tie/DID line channel reduces the system’s station port capacity by one port.
- Always install Tie or DID line PCBs in slot numbers that are higher than station PCB slot numbers (see Chapter 2 – DK40i Configuration in the *Strata DK Installation and Maintenance Manual*).
- Incoming Tie line calls camp-on only if Program 71 assignments are used.
- Copy one record sheet for each group of Tie/DID lines that have different Program 17 parameters.

LEDs 09, 10 and 14~20

Not used at this time.

LED 08: ANI/DNIS Digit Format

Most DID/Tie lines with ANI/DNIS digit format include * tone with digits (LED 08 ON). One exception, as of this writing, Sprint provides DNIS without ANI and does not include * tone with digits - in this case LED 08 should be turned OFF.

Examples of this signal format are: *ANI digits*DNIS digits* and *DNIS digits*.

DID/Tie lines with normal digit format does not include * tone with digits (LED 08 OFF).

LED 07: ANI Receive Line Option

If a Tie or DID line should receive ANI information, LED 07 should be turned ON for that line. If the Tie/DID line receives ANI digits only (no DNIS digits) LED 06, 07, and 08 should be ON and LED 05 should be OFF. See Program 71-1, address 199, 299, and 499 for Tie/DID ANI only call routing assignments. If a line receives ANI and DNIS, LEDs 05, 07 and 08 must be ON; LED 06 can be ON or OFF.

LED 06: Telephone LCD Display Option ANI or DNIS

Telephone LCDs can display ANI or DNIS information as a priority when Tie/DID lines or ISDN channels receive both ANI and DNIS digits. This system-wide option determines if ANI or DNIS information should display on telephone LCDs when Tie/DID lines provide both ANI and DNIS information together on incoming calls.

It is not possible to display both ANI and DNIS information simultaneously on the same call but the **Page** button on the LCD telephone can be used to toggle between the ANI and DNIS information when an ANI/DNIS line is ringing the telephone. After answering the call, it is not possible to toggle the LCD display between ANI and DNIS

LED 05: DNIS Line/Non-DNIS Line

This option assigns Tie and/or DID lines to follow Dialed Number Identification Service (DNIS) Program assignments.

Turn LED 05 ON for DNIS only or ANI with DNIS lines.

Turn LED 05 OFF and LED 07 and 08 ON for ANI only lines which should route per the last address assignment in Program 71.

Important! *Any Tie or DID line can be assigned to use the features of Program 71 and 72. If normal Tie/DID lines are assigned Name Tags, External Routing, selective Day/Day2/Night Routing: In Program 17, Turn LED 05 ON and turn LED 06, 07 and 08 OFF for those lines - then program the lines as required in Program 71 and 72. In this case, Program *09 (DID) and Program 04 (Tie) do not apply to these lines.*

LED 04: DID/Tie Second Dial Tone Option

If the second dial tone option is selected (LED 04 OFF), callers calling in on the DK DID or Tie lines will hear dial tone after accessing the DK Tie/DID lines. Second Dial tone will not be sent to callers if this option is not selected (LED 04 ON).

Important! *Normally, Tie lines require a second dial tone (LED 04 OFF) and DID lines should not return a second dial tone (LED 04 ON). The initialized data is set for DID lines so this data must be changed when installing Tie lines if second dial tone is required.*

LED 03/04 applies to REMU, PEMU, TDDU, RDDU and RDTU DIDs and Tie lines.

LED 03: DID Camp-on/Busy

Turn LED 03 ON if DID line callers should hear ringback tone and camp on to busy stations when calling busy stations. Turn LED 03 OFF if the DID callers should hear busy tone when calling busy stations. Analog Tie lines will not camp-on to busy stations.

It is recommended to turn LED 03 ON for all DID lines. To provide Camp-on-busy over RDTU Tie line calls, configure Tie lines as DID lines in Program *41-2; LED 03 must be on for the lines in Program 17. This is allowed because Tie and DID signalling is the same for Tie and DID T1 lines.

Also, both Tie and DID lines that route per Program 71 DNIS assignments will camp on busy if LED 03 is turned ON. Tie lines that route per Program 04 will not camp on busy.

LED 03/04 applies to REMU, PEMU, TDDU, RDDU and RDTU DIDs and Tie lines.

LED 02: Wink/Immediate

Applies to REMU, TDDU, PEMU, and RDDU Tie/DID lines only. Select Wink Start or Immediate Start for the entered Tie or DID line. See Program *41-2 for RDTU Tie/DID Wink/Immediate Start assignments or RDTU T1 Tie lines configured as DID lines in Program *42-1.

LED 01: Page/Handsfree Answerback

Allows (LED 01 ON) or denies (LED 01 OFF) the following features when connecting the Strata DK to another Key/PBX. LED 01 applies to both Tie and DID lines when programmed with Program 71 assignments.

If using a private network, then turn LED 01 ON to allow Page access on Tie and DID lines programmed with DNIS assignments in Program 71 (Code #039).

Per FCC regulations, public telephone network, Tie, DID, or DNIS lines must always be restricted (LED 01 OFF) from Page and Handsfree Answerback.


- ♦ Callers on the far-end Key/PBX system can access the Strata DK system external and/or Station All Call Page over DID and/or Tie lines programmed with DNIS assignment (Program 10-2, LED 15 and Program 71-1, Code #039) for DID/Tie DNIS assignments. Tie lines only that route per Program 04 can dial any Page Zone or Page Group access code.
- ♦ Callers on the far-end Key/PBX system can make voice announce calls to stations on the near-end Strata DK. This option applies only Tie lines (not DID lines) that route per Program 04 or Program 71. You must program the Strata DK as “Voice First” in Program 10-1, LED 01; or, the far end can dial “1” after dialing the [DN] on tone first systems.
- ♦ Callers on the far-end Strata DK can answer Tie lines calls (not DID lines) from the Far End Key/PBX in the hands free mode. You must program the near-end Strata DK as “Voice First” in Program 10-1, LED 01, or the far-end caller must dial “1” to switch from ring to voice signaling.

Program 19 – Alternate Background Music Source Slot Assignment

Processor Type: DK40i, All RCTUs (not used for DK14. See Program 10-2, LED 10)

Program Type: System

Initialized Default: Slot 11

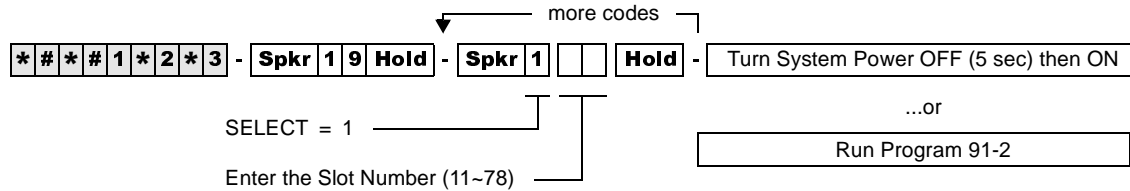

Program 19 Overview

The PCB connected to the alternate BGM source can be in any slot. Use this program to designate that slot. LEDs 09 and 10 in Program 10-2 should be OFF if the source is connected to a QSTU2, KSTU2, PSTU, RSTU, RSTU2, or RDSU. (Only circuit 2 of these PCBs can support the BGM source.)

The alternate BGM source sends BGM to the external speakers and telephone (digital and electronic) speakers. If an alternate BGM source is used, the Music-on-Hold (MOH) source connected to an RCTU will continue to play for lines and stations that are on hold.

Important! *If the alternate BGM source is not connected to a PEKU, PESU or PSTU, RSTU, RSTU2, or RDSU, assign Slot 11 as data in Program 19. If BGM is connected to circuit 2 of QSTU2 or KSTU2, assign slot 13 as data in Program 19. This ensures that all PSTU or RSTU ports function normally. Digital / electronic telephones or RSIU PCBs installed in Slot 11 are not affected by this assignment.*

PEKU/PESU

If using a PEKU, wire the BGM source to circuit 3 and turn LED 09 ON (Program 10-2) to enable the BGM connection.

If using a PESU, wire the BGM source to circuit 8 and turn LED 10 ON (Program 10-2) to enable the BGM connection.

QSTU2, KSTU2, RSTU, RSTU2, RDSU, or PSTU

If using a QSTU2, KSTU2, RSTU, RSTU2, RDSU, or PSTU, wire the BGM source to circuit 2 and turn LED 09 and 10 OFF (Program 10-2). Also, an isolation transformer may be required if connecting the source these PCBs. See Chapter 10 – Peripheral Installation in the Installation and Maintenance Manual for isolation transformer installation instructions.

PDKU

BGM cannot be connected to the PDKU.

Program 20 – Computer and Data Interface Unit Configuration

Processor Type: DK14, DK40i, All RCTUs

Program Type: Station

Initialized Default: LED 17 ON, all others OFF

##1*2*3 - Spkr 2 0 Hold - Spkr # Hold - Spkr # # Hold - Spkr # # Hold

SELECT = PDKU/PDSU Station Logical Port Number that is connected to PDIU-DS or to DKT with PDIU-DI or RPCI-DI

LED Buttons 01~06 define data port type; LED Buttons 17~20 assign data port to security group.

Processor Type	Port Range
DK14	000-009
DK40i	000-027
RCTUA	000-031

Processor Type	Port Range
RCTUBA/BB	000-079
RCTUC/D	000-239
RCTUE/F	000-335

DK40i Base, PDKU, RDSU, KCDU Digital Port Number

<input type="text"/>	<input type="text"/>	<input type="text"/>
----------------------	----------------------	----------------------

LED	X	LED ON	LED OFF
20		Data Security Group 4	Not Included
19		Data Security Group 2	Not Included
18		Data Security Group 3	Not Included
17		Data Security Group 1	Not Included
12-16	Not Used		
11		RPCI-DI DNIS Sent	RPCI-DI DNIS Not Sent
10		RPCI-DI Caller ID/ANI Sent	RPCI-DI Caller ID/ANI Not Sent
07-09	Not Used		
06		DTR Pulse with Data Release	No DTR Pulse
05		Auto Pause Behind PBX	No Auto Pause
04		PDIU-DS Connected	PDIU-DI/RPCI-DI Connected
03		PDIU-DS to Modem Connection	PDIU-DS to other type DCE or DTE
02		AT Commands and Result Codes	AT Commands Only
01		PDIU-DS or RPCI Connected	No PDIU-DS or RPCI Connected

Program 20 Overview

Program 20 identifies the digital station ports connected to RPCI/PDIU and the type of PDIU connected.

RPCIs have two modes: the Data Switching (DIU mode) and the Application Program Interface (or TAPI) mode. In the DIU mode, the RPCI operates as a PDIU-DI (Integrated Data Interface Unit); all Program 20 options apply except LED 10 and LED 11 - which only apply to the RPCI in TAPI mode. In TAPI mode the RPCI does not require Program 20 assignments, except for LED 10 and/or LED 11 if ANI, DNIS, and/or Caller ID must be sent from the RPCI-DI to the PC to which it is connected.

Notes

- RPCIs and PDIUs cannot be connected to PDKU1 circuit 8, but can be connected to all eight PDKU2 circuits. RPCIs and PDIUs that support data switching cannot be connected to PDKU in all slots. See DK424 Chapter 4 – DK424 Configuration, Tables 4-4 and 4-5. DK40i slots 17 and 18 do not support data switching.

- If a PC is connected to the RPCI or PDIU, set the communication mode escape sequences in the PC communication software “Modem Initialization” character sequence. This ensures the escape sequence is restored in case the RPCI Telephone or PDIU is unplugged temporarily.
- RPCI and PDIU-DS units that mostly do data switching, can be connected to ports associated with PDKU1 circuits 1~7 only. All PDKU2 circuits, 1~8, support RPCIs and PDIUs. RDSU digital circuits 5~8 support RPCI and PDIUs.
- Each PDIU-DS requires a separate digital port.
- If a PDIU-DS (Stand-alone Data Interface Unit) is connected to a modem, refer to Modem Setup Recommendations in the PC/Data Communication section of Chapter 10 – Peripheral Installation of the Installation and Maintenance Manual.
- See Chapter 10 – Peripheral Installation for additional hardware information and Chapter 2 – DK40i Configuration and Chapter 4 – DK424 Configuration to identify which slots can support RPCIs and DIUs.

Typical LED Settings for Program 20

RPCI-DI/PDIU-DI Connected to a terminal or personal computer—LEDs 01, 02, 05, and 17 ON; all other LEDs OFF.

PDIU-DS Connected to a Printer: LEDs 01, 04, and 17 ON; all other LEDs OFF.

PDIU-DS Connected to a Modem: LEDs 01, 02, 03, 04, and 17 ON; all other LEDs OFF.

LEDs 17~20: Data Security Groups

Data security groups can be set to block data calls between RPCI/DIUs. RPCI/DIUs can only make data calls to RPCI/DIUs in the same security group. LEDs 17~20 assign the RPCI/DIU to the appropriate security group: light LED 17 for Group 1; LED 18, for Group 3; LED 19, for Group 2; and LED 20, for Group 4. If an RPCI-DI is used in the Application Program Interface (TAPI) mode only, and not the Data Switching mode, this option is not applicable.

LEDs 12~16

Not used at this time.

LED 11: RPCI-DI DNIS to PC Option

DNIS Number or NAME tag information that is sent to a telephone can be sent, or blocked, from the telephone’s RPCI-DI, RS-232 output. If DNIS information should be sent from the Telephone’s RPCI-DI to the Personal Computer to which it is connected, turn LED 11 ON; if this information should not be sent to the PC, turn LED 11 OFF.

LED 10: RPCI-DI Caller ID and ANI to PC Option

Caller ID and ANI information that is sent to a telephone can be sent, or blocked, from the telephone’s RPCI-DI, RS-232 output. If Caller ID and ANI information should be sent from the RPCI-DI to the Personal Computer to which it is connected, turn LED 10 ON; if this information should not be sent to the PC, turn LED 10 OFF. This option does not apply to PDIUs because they can not send ANI, Caller ID, or DNIS numbers.

LEDs 07~09

Not used at this time.

LED 06: DTR Pulse

LED 06 should always be OFF.

LED 06 should be off for all PDIU-DS, RPCI-DIs, or PDIU-DIs. (Refer to Chapter 10 – Peripheral Installation for more PDIU-DS/modem pool information).

LED 05: Auto Pause Behind PBX

Turn LED 05 ON to enable Auto Pause Behind PBX. This inserts the Auto Pause after a Centrex or PBX access code is dialed by a DIU or RPCI. A CO line must be assigned in Program 42-0, and must have an access code assigned in Program 42 (1~8). Pause time is determined by Program 12-3. Also, when Auto Pause Behind PBX is enabled, the Auto Pause is inserted after the CO line access code is dialed (by the DIU).

If the system CO lines are connected to a PBX, Centrex, or a Central Office that is slow to return dial tone after seizure, enable Auto Pause Behind PBX to insert a pause before and after the PBX or Centrex access code is dialed by the DIU or RPCI. Also, light LED 05 to automatically insert a pause before network telephone numbers are autodialed by DIUs or RPCIs.

LED 04: PDIU-DS or PDIU-DI/RPCI-DI Connection

Set LED 04 ON if a PDIU-DS is connected to the digital port.

Important! *If LED 04 is turned on for a telephone port, that telephone cannot be called.*

Set LED 04 OFF if a PDIU-DI or RPCI-DI or any type of telephone is connected. In this case, the digital telephone supporting this PCB may require the Data Call (DATA), Data Release (DRLS), and/or Modem buttons assigned in Program 39. Also, if an RPCI-DI is used in the Application Program Interface (TAPI) mode only, and not the Data Switching mode, set LED 04 OFF.

Note The pause length is set in Program 12-3, and lines behind PBX/Centrex are assigned in Programs 42-0 and 42-1~8.

LED 03: RPCI/PDIU-DS to Modem Connection

If a PDIU-DS is connected to the digital port, identify whether the RPCI/PDIU-DS is connected to a modem (LED 03 ON) or not connected to a modem (LED 03 OFF). If not connected to a modem, the connected device can be a DCE or DTE. This feature is not necessary for RPCI/PDIU-DIs, because they are not normally connected to modems.

LED 02: AT Commands and Result Codes

Enable this feature (LED 02 ON) if the RPCI or DIU must respond to AT commands and return result codes in the Data Switching command mode. RPCI/DIU “AT” dialing commands and “result” codes are listed in the RPCI-DI and the Data Interface User Guide.

If the DIU is connected to a modem, LED 02 should be ON. If the RPCI/DIU is connected to a printer, LED 02 should be OFF. If an RPCI-DI is used in the Application Program Interface (TAPI) mode only, and not the Data Switching mode, this option is not applicable.

If the feature is not enabled (LED 02 OFF), the RPCI/DIU only responds to AT dialing commands (ATDT, ATD, and ATDD) and does not return result codes. If the DIU is connected to a terminal or a personal computer with communication software, LED 02 should be ON

LED 01: RPCI and PDIU Connection

Enable this feature (LED 01 ON) if there is a PDIU-DI, RPCI-DI or PDIU-DS connected to the digital port. Each RPCI-DI or PDIU-DI uses the same digital port as the telephone it is attached to. This feature is not applicable if an RPCI-DI is used only in TAPI, and not DIU mode.

Program 21 – Modem Pool Port Assignments

Processor Type: DK14, DK40i, All RCTUs

Program Type: Station

Initialized Default: Blank

* # * # 1 * 2 * 3 - Spkr 2 1 Hold - Spkr [] [] # [] [] Hold - Spkr # # Hold - Spkr # # Hold

Digital Station Logical Port
Number (see notes below)

Standard Telephone Modem Port
Number (see notes below)

Processor Type	Port Range
DK14	008-009
DK40i	008-027
RCTUA	008-031

Processor Type	Port Range
RCTUBA/BB	008-079
RCTUC/D	008-239
RCTUE/F	008-335

	Logical Port No.		
Assignment 1			
Assignment 2			
Assignment 3			
Assignment 4			
Assignment 5			
Assignment 6			
Assignment 7			
Assignment 8			
Assignment 9			
Assignment 10			

Modem Port No.	

Notes

- Digital Ports include: DK14 KSU, DK40i Base KSU, QCDU2, KCDU, PDKU2, and RDSU digital ports.
- Standard telephone ports include: QSTU2, KSTU2, RSTU2, RDSU, PSTU, and PESU standard telephone ports.

Program 21 Overview

This program assigns modems to the system modem pool. Program 21 identifies modems connected to standard telephone ports (line side of modem) and digital/PDIU-DS ports (RS-232 side of modem). With data security groups (Program 20, LEDs 17~20) and the call blocking feature (Program 31, LED 04), modem access can be denied or allowed to data users.

Notes

- PDIU-DS must be installed on PDKUs in slots designated for DIU operation. (See Chapter 2 – DK40i Configuration and Chapter 4 – DK424 Configuration.)
- When modems are connected to standard telephone ports (PSTU, RSTU, RSTU2, PESU, RDSU/RSTS, KSTU2, QSTU2) the Executive/ Privacy Override blocking feature (Program 31, LED 18) should be enabled for the modem RSTU, RSTU2, PSTU, PESU, RDSU, KSTU2 and QSTU2 ports for data security. The LED 18 feature should be disabled to enable callers to switch from voice to data, or vice versa.
- Digital telephones with RCPI-DIs or PDIU-DIs that must access modems from a pool require a **Modem** button assigned in Program 39.
- PDIU-DS ports that are connected to modems in the modem pool should be set with LEDs 01, 02, 03, and 04 in Program 20.
- If a modem connected to PDIU-DS is connected to a telephone network line instead of a standard telephone station port, Program 21 should not be used.
- Use Program 22 to assign modem/PDIU-DS stations to hunt sequences.
- DIUs can be connected to any ports associated with PDKU circuits, except for ports associated with circuit 8 on a PDKU1. All PDKU2, KCDU, and QCDU circuits can support DIUs. DIUs can also be connected to any digital circuit in the DK14 or DK40i KSU.
- DIUs can be connected to ports associated with PDKU1 circuits 1~7 only. All PDKU2 circuits, 1~8, can support RPCI/DIUs. RDSU circuits 5~8 can support RPCI/DIUs.

Program 22 – RPCI and DIU Station Hunting for Data Calls

Processor Type: DK14, DK40i, All RCTU's

Program Type: Station

Initialized Default: Does not assign "hunt-to" ports to any port

* # * # 1 * 2 * 3 - Spkr 2 2 Hold - Spkr [] [] [] # [] [] [] Hold - Spkr # # Hold - Spkr # # Hold

SELECT = Port Number (see legend below) _____ HUNT TO = (see legend below)

Enter the RPCI/DIU digital port number of the "hunt-from" station.

Enter the "hunt-to" RPCI/DIU digital port number.

Enter the port number(s) to which class of service must be assigned.
To add a port range, enter XXX*XXX (low port * high port).

LED Button 01 deletes a digit from the "hunt-to" port.

Processor Type	Port Range
DK14	000-007
DK40i	000-027
RCTUA	000-031

Processor Type	Port Range
RCTUBA/BB	000-079
RCTUC/D	000-239
RCTUE/F	000-335

Hunt From Port	Hunt To Port	Hunt From Port	Hunt To Port	Hunt From Port	Hunt To Port	Hunt From Port	Hunt To Port

Program 22 Overview

This program assigns computer and Data Interface Unit (DIU) station hunt ports for data calls. If a RPCI/PDIU station (printer, modem, etc.) is busy, data station hunting allows the data call to hunt to an alternate RPCI/PDIU station assigned in this program. If the hunted RPCI/PDIU station is busy, the system will ring the next "hunt-to" station, and so on. If all RPCI/PDIU stations in the "hunt-to" sequence are busy, then the data caller will receive a busy tone. Toshiba recommends that all PDIU-DS station ports grouped in a modem pooling or printer pooling/server configuration be placed into a hunt-sequence arrangement with Program 22.

Notes

- Program 22 applies to RCPI-DI, PDIU-DI and PDIU-DS data calls, not telephone station voice calls. If programming an RCPI-DI or PDIU-DI station, use the associated DKT logical port number; the PDIU-DS is programmed using its own unique port number.
- When a PDIU-DS is connected to a modem(s) assigned to the system modem pool in Program 21, modem hunting is automatic when the user presses the **Data Call** button to transfer a line call to a modem. However, if the user dials the modem's PDIU-DS's station number, modem hunting follows the hunt sequence specified in Program 22.

Program 23 – Built-in Auto Attendant (AA) Primary Announcement Assignments

Processor Type: DK14, DK40i, All RCTUs

Program Type: System

Initialized Default: No ports assigned

##1*2*3 - Spkr 2 3 Hold - Spkr Hold - Spkr ## Hold

SELECT = 1-4 AUTO ATT 1 NO. = Port

Select the Auto Attendant device (digital announcer).

Enter the standard station logical port number to which the device will be assigned.

Processor Type	Port Range	Processor Type	Port Range
DK14	008-009	RCTUBA/BB	008-079
DK40i	008-027	RCTUC/D	008-239
RCTUA	008-031	RCTUE/F	008-335

Announcement Device	Port Number
1	
2	
3	
4	

Program 24 – Built-in AA Secondary Announcement Assignments

Processor Type: DK14, DK40i, All RCTUs

Program Type: System

Initialized Default: No ports assigned

##1*2*3 - Spkr 2 4 Hold - Spkr Hold - Spkr ## Hold

SELECT = 1-4 AUTO ATT 2 NO. = Port

Select the Auto Attendant device (digital announcer).

Enter the standard station logical port number to which the device will be assigned.

Note See Program 23 legend for port ranges.

Announcement Device	Port Number
1	
2	
3	
4	

Programs 23 and 24 Overview

Programs 23 and 24 assign customer-supplied Auto Attendant announcement devices (digital announcers) to standard telephone ports (QSTU2, KSTU2, RSTU, RSTU2, PSTU, PESU, RDSU/RSTS). Use Program 23 to assign devices that deliver primary announcements, dialing options and greetings heard when callers first call in; also, devices that deliver secondary announcements.

Use Program 24 to offer options to unanswered calls routed back to the Auto Attendant. Up to eight devices can be connected to a system. See Primary and secondary announcements below:

Processor Type	Primary Announcements	Secondary Announcements	Processor Type	Primary Announcements	Secondary Announcements
DK14	1	1	RCTUBA/BB	4	4
DK40i	4	4	RCTUC/D	4	4
RCTUA, RCTUB	4	4	RCTUE/F	4	4

Any combination is allowed within the maximum limitations. For example, three primary announcements and one secondary announcement are allowed.

Ports assigned in Programs 23 and 24 should never be assigned with External Auto Attendant voice mail options in other programs (30, 31, 81~89, etc.)

To allow the built-in Auto Attendant programs to function:

DK424: the RKYS (1, 2, 3, or 4) and RRCS must be installed on the RCTU PCB;

DK40i: the KKYS must be installed on the K5RCU;

DK14: the QKYS, and QRCU3 must be installed in the DK14 KSU.

Overflow stations and delay ring operation is assigned in Programs 81~89.

Program 25-1 – Built-in AA Incoming Call Overflow Time

Processor Type: *DK14, DK40i, All RCTUs*

Program Type: *System*

Initialized Default: *20 seconds before overflow*

##1*2*3 - Spkr 2 5 Hold - Spkr 1 Hold - Spkr # # Hold - Spkr # # Hold

SELECT = 1 AATT TIME = Seconds before overflowing

Enter the number of seconds, 12~24.

Program 25-1 Overview

This program sets the time it takes an unanswered incoming Auto Attendant call to overflow to a preassigned station(s). The time can be anywhere from 12 to 24 seconds—the default is 20 seconds. The overflow station or group of stations is assigned in Programs 81~89.

This overflow time applies to the overflow of incoming Auto Attendant calls to normal CO line ringing if either a primary announcement device or K5RCU, K5RCU2, K4RCU3/RRCS (DTMF) circuit is not available.

Note Auto Attendant will not answer when all of the RRCS, K5RCU, K5RCU2, K4RCU3 or QRCU2 circuits or primary announcements are busy.

Program 26 Overview

Note This program only applies to Auto Attendant (built-in) calls to busy or ringing stations; it does not apply to ring transfer camp-on time from stations or customer-supplied Auto Attendant devices; see Program 37 Ring Transfer (Camp-on) recall time.

This program establishes the time it takes for unanswered Auto Attendant calls camped-on to busy or ringing [DNs] to be routed to other destinations. The time, which is set for the “camped-on to station”, can be set from 011 seconds to 999 seconds. Ring/No Answer call time to idle stations is fixed at 16 seconds unless Call Forward/No Answer is set at the called station.

The destination that the call can be rerouted to depends on the Auto Attendant application. In Auto Attendant applications that use just primary announcement devices, the destination is set in Program 10-3, and can be either back to the primary announcement or the normal ringing pattern of the line that the call came in on (Programs 81, 84, or 87 for telephone ringing and *81, *82, *83 for [DN] flash. Also see Program 10-3, LEDs 15 and 16 for disconnect time options. In applications that use secondary announcement devices in addition to primary ones, the rerouted calls are automatically sent to secondary announcement devices.

This program timer sets the time that Auto Attendant calls to a busy or ringing station will camp-on before routing back to a primary announcement or to the calling CO line’s normal ring pattern. (See Program 10-3, LED 3 for routing option after Camp-on-Busy). The time set in this program applies to the called station.

If CF-NA or CF-B/NA is set on a Telephone, the CF-N/A ring timer will have priority over this 16-sec. camp-on-busy timer so the telephone will ring for the duration of the CF-NA timer. Auto Attendant calls to a ring-no-answer or busy station will only forward to one destination, if the CF destination station has call forward set, the call will camp-on for 16-seconds and then route per the Auto Attendant flow diagram—the call will not forward a second time to another destination.

Program 28 – DSS Console/Attendant Telephone Assignments

Processor Type: DK40i, All RCTUs

Program Type: Station

Initialized Default: Assigns Console #1 to Attendant Telephone #1; Console #2 to Attendant Telephone #2; etc.

* # * # 1 * 2 * 3 - Spkr 2 8 Hold - Spkr Hold - Spkr # # Hold - Spkr # # Hold

SELECT = 1~8 _____ DSS ATT = 1~8

Enter the DSS console number.

Enter the attendant digital or electronic telephone number.

Digital DSS consoles (DDSS) should be assigned to digital telephones, and electronic consoles (HDSS) should be assigned to electronic telephones.

Processor	DSS Consoles	HDSS Consoles
DK14	0	0
DK40i	1-3	1-3
RCTUA	1-3	1-3
RCTUBA/BB	1-4	1-4
RCTUC/D	1-8	1-8
RCTUE/F	1-8	1-8

DDSS PDKU/HDSS PEKU PCBs (Lowest to Highest)	DDSS/HDSS Console Number	Attendant DKT/EKT Number (1~8)
Low Slot Number:	1	
Slot Number:	2	
Slot Number:	3	
Slot Number:	4	
Slot Number:	5	
Slot Number:	6	
Slot Number:	7	
High Slot Number:	8	

Program 28 Overview

DK40i: allows up to three DSS consoles (DK40i KSU supports one DSS, Expansion Unit supports two more). A DDSS console can only be connected to circuit 8 of the DK40i base digital ports or a PDKU, and an HDSS console can only be connected to circuits 7 and 8 of a PEKU.

- ♦ **DK424:** supports up to eight DDSS consoles, or eight HDSS consoles, or any combination of the two types of consoles up to eight may be installed with an RCTUC/D or RCTUE/F common control unit. The RCTUA and DK40i can support three DSS consoles, the RCTUB, RCTUBA/BB can support four, and the RCTUC/D and RCTUE/F support eight.

The telephone connected to circuit 1 of the PCB or the DK40i Base KSU supporting a console is designated as an attendant telephone. Consoles and telephones are numbered 1~8 as they are installed from the lowest to highest slot number. For example, in DK424, if a PDKU in Slot 11 had a DDSS console connected to it, the DDSS console would be Console #1 and the digital telephone connected to circuit 1 would be Attendant Telephone #1.

As many as four DSS consoles can be assigned to one attendant telephone. Because more than one DSS console can be assigned to an attendant telephone, the detailed arrangement must be programmed. Initialized data assigns one DSS console to one attendant telephone, both connected to the same PDKU or PEKU PCB.

Notes

- Refer to Program 03—Flexible PCB Slot Assignments, for the PCB slots of PEKUs and PDKUs configured to support consoles.
- The system automatically assigns the console supported by the PEKU or PDKU in the lowest-number PCB slot to be console number 1.
- The system automatically assigns the telephone connected to the first station port on a console PDKU or PEKU to be attendant number 1.
- If more than one console is associated with one attendant telephone, then specify the same number attendant telephone for all consoles associated with it.

Program 29-1~8 – DSS Console and Number Button Assignments

Processor Type: DK40i, All RCTUs

Program Type: Station

Initialized Default: See "Program 29 - Initialized Default DSS Console Button Assignments" on Page 3-72



SELECT = DDSS/HDSS console number 1~8
DDSS/HDSS LED Button Group 1~3
 Each console has three groups of 20 LED buttons.
DKT LEDs 01~20
 Press the DKT LED that is in the same position as the console button being assigned. The LED lights and the LCD displays the console button's number.

CODE =
 Assign Speed Dial, trunk access, or DSS access to this button chosen. See code table below.
 The **Night Transfer** and **All Call Page** buttons may be changed to **DSS, Line (CO)** or **SD** buttons, but they may not be reassigned to other button locations.
 Initialized key assignments are shown following the Program 29 System Record Sheets.

Code Table and Legend

Button Type	Code
All Call	489
Night Transfer 1	439
Night Transfer 2	440
Night Transfer 3	441
Night Transfer 4	442

Processor	Personal Speed Dial Bin Numbers	System Speed Dial Bin Numbers	CO Line Range	DSS Button Range
DK40i	* 10~ * 49	* 60~ * 99	001~012	#000~#027
RCTUA	* 10~ * 49	* 60~ * 99	001~016	#000~#031
RCTUBA/BB	* 10~ * 49	* 600~ * 699	001~048	#000~#079
RCTUC/D	* 10~ * 49	* 600~ * 699	001~144	#000~#239
RCTUE/F	* 100~ * 139	* 200~ * 999	001~200	#000~#335

Console Number _____

Group Number 1	
Button/Code	Button/Code
10	20
09	19
08	18
07	17
06	16
05	15
04	14
03	13
02	12
01	11

Group Number 2	
Button/Code	Button/Code
10	20
09	19
08	18
07	17
06	16
05	15
04	14
03	13
02	12
01	11

Group Number 3	
Button/Code	Button/Code
10	20
09	19
08	18
07	17
06	16
05	15
04	14
03	13
02	12
01	11

Program 29-1~8 Overview

Each button on the DSS consoles can be flexibly assigned as either a Direct Station Selection (**DSS**), Line (**CO**), or **SD** button. The standard equipped **Night Transfer (NT)**, and **All Call Page (AC)** buttons may be changed to one of these three types, but not vice versa.

Station Speed Dial buttons assigned to a DSS console share the associated attendant digital or electronic telephone's Speed Dial memory. The personal Speed Dial numbers of the DSS console circuit port(s) are not available. Initialized data assigns the 60 buttons to be Direct Station Selection (**DSS**), **All Call Page (AC)**, and **Night Transfer (NT)**. Each of the consoles can be independently programmed.

Important! *Only program the following buttons: **SD**, **Line (CO)**, **DSS**, **All Call Page (AC)**, and **Night Transfer (NT)**; programming other feature buttons on a console may cause system operation problems.*

It is not possible to assign [PDNs]/[SDNs]/[PhDNs] to DSS consoles or ADMs

Note When assigning CO line access buttons (001~200), the associated telephone must be assigned access to the CO line also. See Program 40.

Program 29 - Initialized Default DSS Console Button Assignments

Group 1

DSS Button No.	DK40i	RCTUA	RCTUB RCTUC/D RCTUE/F
01	#000	#000	#000
02	#001	#001	#001
03	#002	#002	#002
04	#003	#003	#003
05	#004	#004	#004
06	#005	#005	#005
07	#006	#006	#006
08	#007	#007	#007
09	#008	#008	#008
10	#009	#009	#009
11	#010	#010	#010
12	#011	#011	#011
13	#012	#012	#012
14	#013	#013	#013
15	#014	#014	#014
16	#015	#015	#015
17	#016	#016	#016
18	#017	#017	#017
19	#018	#018	#018
20	#019	#019	#019

Group 2

DSS Button No	DK40i	RCTUA	RCTUB RCTUC/D RCTUE/F
01	#020	#020	#020
02	#021	#021	#021
03	#022	#022	#022
04	#023	#023	#023
05	#024	#024	#024
06	#025	#025	#025
07	#026	#026	#026
08	#027	#027	#027
09	* 10	#028	#028
10	* 11	#029	#029
11	* 12	#030	#030
12	* 13	#031	#031
13	* 14	* 10	#032
14	* 15	* 11	#033
15	* 16	* 12	#034
16	* 17	* 13	#035
17	* 18	* 14	#036
18	* 19	* 15	#037
19	* 20	* 16	#038
20	* 21	* 17	#039

Group 3

DSS Button No	DK40i	RCTUA	RCTUB RCTUC/D RCTUE/F
01	* 22	* 18	#040
02	* 23	* 19	#041
03	* 24	* 20	#042
04	* 25	* 21	#043
05	* 26	* 22	#044
06	* 27	* 23	#045
07	* 28	* 24	#046
08	* 29	* 25	#047
09	* 30	* 26	#048
10	* 31	* 27	#049
11	* 32	* 28	#050
12	* 33	* 29	#051
13	* 34	* 30	#052
14	* 35	* 31	#053
15	* 36	* 32	#054
16	* 37	* 33	#055
17	* 38	* 34	#056
18	* 39	* 35	#057
19	AC (489)	AC (489)	AC (489)
20	NT 1 (439)	NT 1 (439)	NT 1 (439)

System & Station

Program *29 – Add-on Modules Button Assignments

Important! Run this program for each station that has an ADM or the ADM will not function. Program at least one ADM key for each ADM.

It is impossible to assign [PDNs], [SDNs] or [PhDNs] to DSS consoles or ADMs.

Button Assignments

Add-on Module 1 Button No.	DK14	DK40i	RCTUA	RCTUB RCTUC/D RCTUE/F
01	#000	#000	#000	#000
02	#001	#001	#001	#001
03	#002	#002	#002	#002
04	#003	#003	#003	#003
05	#004	#004	#004	#004
06	#005	#005	#005	#005
07	#006	#006	#006	#006
08	#007	#007	#007	#007
09	#008	#008	#008	#008
10	#009	#009	#009	#009
11	* 10	#010	#010	#010
12	* 11	#011	#011	#011
13	* 12	#012	#012	#012
14	* 13	#013	#013	#013
15	* 14	#014	#014	#014
16	* 15	#015	#015	#015
17	* 16	#016	#016	#016
18	* 17	#017	#017	#017
19	* 18	#018	#018	#018
20	* 19	#019	#019	#019

Add-on Module 2 Button No.	DK14	DK40i	RCTUA	RCTUB RCTUC/D RCTUE/F
01	* 20	#020	#020	#020
02	* 21	#021	#021	#021
03	* 22	#022	#022	#022
04	* 23	#023	#023	#023
05	* 24	#024	#024	#024
06	* 25	#025	#025	#025
07	* 26	#026	#026	#026
08	* 27	#027	#027	#027
09	* 28	* 10	#028	#028
10	* 29	* 11	#029	#029
11	* 30	* 12	#030	#030
12	* 31	* 13	#031	#031
13	* 32	* 14	* 10	#032
14	* 33	* 15	* 11	#033
15	* 34	* 16	* 12	#034
16	* 35	* 17	* 13	#035
17	* 36	* 18	* 14	#036
18	* 38	* 19	* 15	#037
19	* 39	* 20	* 16	#038
20	* 40	* 21	* 17	#039

Program 30 – Station Class of Service

Processor Type: DK14, DK40i, All RCTUs

Program Type: Station

Initialized Default: LEDs 01, 05 and 07 for all ports

* # * # 1 * 2 * 3 - Spkr 3 0 Hold - Spkr [] [] [] # [] [] [] Hold - Spkr # # Hold - Spkr # # Hold

SELECT = Station Logical Port Number(s)

Enter the port numbers to which class of service must be assigned. To add a port range, enter XXX*XXX (low port * high port).

Light LEDs for the port specified in the last step. All LEDs marked with an "X" in the table below should be lit.

Processor Type	Port Range	DISA Port
DK14	000-009	010
DK40i	000-027	035
RCTUA	000-031	039

Processor Type	Port Range	DISA Port
RCTUBA/BB	000-079	089
RCTUC/D	000-239	249
RCTUE/F	000-335	344

Feature	LED	Port									
SLT/ISDN Terminal "#" Dial	20										
Privacy Override	19										
Executive Override	18										
DND Override	17										
Change TR Traveling Class Code	16										
Change Verified Account Code	15										
Verified Account Codes	14										
	13										
SLT-Hook Flash Anti-Bounce Guard	12										
Dial Pulse - DTMF OFF	11										
Change DISA Security Code	10										
Change TR Override Code	09										
Forced Account Code	08										
OCA Automatic (originating OCA)	07										
ABR Access	06										
Speed Dial Allowed	05										
#5#30 Pickup AC Page Only (Release 3.2 and higher)	04										
Microphone Button on at Start of Call	03										
MIC Button Locked	02										
Speakerphone	01										

System & Station

Program 30 Overview

Program 30 enables or disables features for individual telephones at the station level. The following text describes Program 30 LEDs.

LED 20: SLT/ISDN Terminal “#” Dial

This feature applies to single-line telephones and ISDN station terminals to indicate when a number has been dialed and to begin dialing a sub-address. If a **#** is dialed as the first digit, it indicates that a feature access code is being entered.

For ISDN, if separate dialing and sub-address digits will be used, turn LED 20 ON. If it is OFF, **#** can be used as a dialing separator.

LED 19: Privacy Override

With Privacy Override enabled (LED 19 ON), a station can override calls and listen to a CO line conversation by pressing a common CO **Line** button (not a [DN] button). [DN] buttons are always private. A maximum of two stations can override an existing “station-line” conversation. You can set a warning tone for Privacy Override (see Program 10-2).

Privacy Override of Direct Inward System Access (DISA) Two-CO line calls is not allowed. Privacy Override is not available on any call (CO line or internal) that appears on a [PDN], [SDN], or [PhDN] button.

Block Privacy Override by a station via a **Privacy** button (Program 39) or with the Executive/Privacy Override blocking option (Program 31, LED 18). To configure the Strata DK system to operate as nonprivate, allow Privacy Override from all stations.

Disabling Privacy Override for attendant console ports does not deny Attendant Supervised Loop Monitoring.

LED 18: Executive Override

With Executive Override enabled (LED 18 ON) a station can break into and overhear an existing station conversation by pressing **3** after the busy station number or by pressing the “EXEOVR” LCD soft key. You can set a warning tone for this feature (see Program 10-2).

Privacy Override can be performed from stations with Executive/Privacy Override blocking enabled in Program 31, LED 18. The **Privacy** button does not block Executive Override. Disabling Executive Override for attendant console ports does not deny Attendant Supervised Loop Monitoring.

LED 17: Do Not Disturb (DND) Override

With DND Override enabled, (LED 17 ON), you can override a station that has DND ON. A called station with DND activated will return very fast busy tone (four tones per second). If the caller presses **2** after dialing the DND station directory number, a DND Override tone is heard on the called station’s speaker.

If a DND station has more than one [PDN] and it appears on other telephones, when called, the [PDN] rings at the other telephones and flashes on the DND station. In this case, DND override is not available unless all [PDNs] of the DND station are busy.

LED 16: Change Toll Restriction Traveling Class Code

When LED 16 is ON for a port, the station occupying it can change the four-digit Toll Restriction Traveling Class of Service Codes established in Program 44-1~8. Stations selected for this feature must follow the dialing sequences below to change the codes:

Class 1	#691	Class 5	#695
Class 2	#692	Class 6	#696
Class 3	#693	Class 7	#697
Class 4	#694	Class 8	#698

[PDN] + class code (**#691~#698**) + four-digit code + **Redial**

LED 15: Change Verified Account Code

With LED 15 ON, a station can change the Verified Account Codes established in Program 69. Selected stations must dial the following sequence to change the codes:

[PDN] + **#659** + Verified Account Code + Redial:

System	Verified Account Code
RCTUE/F	000~499
RCTUA, BA/BB, C/D, DK40i, DK14	000~299

Press **#** button if your electronic telephone does not have a **Redial** button.

Total Account Code digit length is set in Program 10-4 (up to 15 digits). All digits do not have to be verified.

LED 14: Verified Account Code

With LED 14 ON, the system verifies all Forced or Voluntary Account Codes (set in Program 69) dialed by the station user. If the station user does not dial a specific Verified Account Codes, the call does not execute (Forced), or the Account Code is not validated for the SMDR call report (Voluntary).

To force a verified account code entry on Two-CO line DISA calls through the system, turn LED 08 and 14 ON for Port 10-DK14, Port 035-DK40i, Port 039-RCTUA, Port 089-RCTUB, RCTUBA/BB or Port 249-RCTUC/D or Port 344-RCTUE/F. Also, you must enable Forced Account Code for outgoing CO line in Program 15-7.

LED 12: Single Line Telephone (SLT) Hookflash Anti-bounce Guard

SLT Hookflash Anti-Bounce Guard (LED 12 ON) prevents false recalls due to hook flash bounce during SLT hang-up on outside calls. The system automatically disconnects the CO line if the SLT hangs-up after a Hook Flash.

Use for QSTU2, PSTU, RSTU, RSTU2, RDSU, PESU, and KSTU2 standard telephone ports that have standard telephones (with/without message lamps) connected to them to prevent false ring signals. With this option ON, a CO line connected to a standard telephone is disconnected if the standard telephone user hookflashes and then hangs up. If this option is OFF, the CO line recalls the standard telephone.

LED 11: Dial Pulse - Dual-tone Multi-frequency (DTMF) OFF

Use Dial Pulse - DTMF OFF (LED 11 ON) if any device, DID or Tie line station port does not require the RRCS, K5RCU, K5RCU2, or K4RCU for DTMF decoding. When the device goes off-hook or the DID or Tie line is seized for an incoming call, the DTMF receiver is not accessed - reducing unnecessary traffic to it.

If a Tie or DID line is Dial Pulse (Program 15-1, LED ON), enable Dial Pulse - DTMF OFF (LED 11 ON) for that Tie or DID station port number. If the DID or Tie line is DTMF tone dial (Program 15-1, LED OFF) disable Dial Pulse - DTMF OFF (LED 11 OFF) and install an RRCS on the RCTU, K5RCU, K5RCU2, or K4RCU3 in the DK40i.

LED 10: Change DISA Security Code

When enabled (LED 10 ON), allows a selected station to change the DISA security code by dialing [PDN] + **#658**, + Security Code + **Redial**.

LED 09: Change Toll Restriction (TR) Override Code

When enabled (LED 09 ON), two TR Override codes are available. When one of these codes is dialed from any station, all Toll Restriction is bypassed. Change TR Override codes by pressing [PDN] + **#654** for Code 1, or [PDN] + **#655** for Code 2. Press **Redial** to store.

LED 08: Forced Account Code

When enabled, (LED 08 ON), a station or DISA CO line user using a line with a Forced Account requirement (Program 15-7) must enter an Account Code before the outgoing CO/Tie/DID line call can be completed. If Forced Account Codes should be verified, enable Verified Account Code (LED 14 ON). Program 60-4 defines the Forced Account Code digit length.

To force a verified account code entry on Two-CO line DISA calls through the system, (LED 08 and 14 ON: Port 10-DK14, Port 035-DK40i, Port 039-RCTUA, Port 089-RCTUB, RCTUBA/BB, 249-RCTU C/D, and Port 344 for RCTU E/F). Also, enable Forced Account Code for outgoing CO line in Program 15-7.

LED 07: Off-hook Call Announce (OCA) Automatic

When LED 07 is ON, a calling station has this feature enabled. If the system is set for Ring First Signaling (Program 10-1, LED 10 ON), the user must dial **21** after hearing busy tone or **12** after hearing ringback tone in order to OCA the called station. OCA Automatic only works on systems with Voice First Signaling (Program 10-1 or 10-2, LED 01, OFF) in which case the user does not have to dial **21** or **12**. Initialized default: ON - all ports. The called station must also be enabled to receive OCA (see Program 31, LED 03).

LED 06: Automatic Busy Redial (ABR) Access

ABR can be enabled (LED 06 ON) or disabled (LED 06 OFF) for each station. The system selects the last line in the originating line group each time ABR is initiated (see also Program 10-1). If you do not enable ABR access here, the ABR soft key does not appear on LCD telephones. ABR operates when calling on ground and loop start lines, but is not functional for DID or Tie line calls. ABR overrides Program 41. Program 41 is normally used with LCR.

For the DK40i, K5RCU, K5RCU2, or K4RCU must be installed; for the DK14, QRCU must be installed to detect busy tone so that ABR will function.

LED 05: Speed Dial

LED 04 enables (ON) or disables (OFF) Station and System Speed Dial. Initialized default: ON - all ports.

LED 04: Call Pickup Code Option

Determines the operation of pickup code **#5#30** in Release 3.2 (and above) software. If LED 04 is ON, **#5#30** only picks up All Call Page and External Page (per Program 10-2, LED 15). If LED 04 is OFF, **#5#30** picks up an internal call ringing on a telephone as a priority or it picks up All Call Page or External Page if no internal calls are ringing. Prior to Release 3.2, **#5#30** picked up ringing calls as priority over All Call Page pickup calls.

LED 03: Microphone Button On at Start of Call

When enabled (LED 03 ON), the microphone and Mic button LED is turned ON at the start of an on-hook speakerphone call. For this feature to work, you must enable the MIC button lock operation (LED 02 ON).

When receiving internal DN calls, the flexible Microphone Cutoff (**Microphn Cut-off**) button (Program 39) can be used to prevent room monitoring and Handsfree Answerback.

LED 02: Mic Button - Locked/Momentary

The **Mic** button turns electronic or digital telephone microphones ON/OFF:

With “Locked” (LED 02 ON), the **Mic** button will be ON or OFF (depending on LED 03) when you begin the call and you can alternately push it ON or OFF. This does not apply to Handset OCA - which is **Mic** push-to-talk only.

With “Momentary” (LED 02 OFF), the **Mic** is always ON at the start of a speakerphone call/ You must continuously press **Mic** to disable the microphone when during a speakerphone call.

LED 01: Speakerphone

Enables (LED 01 ON) or disables (LED 01 OFF) speakerphone operation on any electronic or digital telephone. If disabled, a speakerphone:

- ♦ Can be used as a handsfree electronic or digital telephone.
- ♦ Enables talk back with the receiver on-hook when receiving an internal call.
- ♦ Will not allow you to talk on a call that you place or a call that you answer by pressing a ringing button with the handset on-hook.

Program 30 - Example

Action (press buttons + LED buttons)	LCD Response
1. Use an LCD programming phone per Minimum Hardware Requirements on Page 1-14. Make sure the programming button strip template is installed on the programming telephone.	No. N-N ¹ Jan 20 Sun 06:43
2. ***#1*2*3 Enter programming mode. (Do not press [DN] button.)	Program Mode
3. Spkr (Speaker) 30 Hold Access Program 30.	Program = 30 Data Store
4. Spkr (Speaker) Prepare the system for a station port selection.	30 Select =
5. Enter the port number where the station being defined is connected. Use three digits, followed by a # button. A range of ports may be entered at once by using the * button. (See Note on system record sheet for port numbers.)	30 Select =

System & Station

Program 30 – Station Class of Service

Action (press buttons + LED buttons)	LCD Response
<p>6. LED buttons 01~20</p> <p>LED buttons 01~20 activate features for each station port or port range. Make the following selections by turning the appropriate button LED ON or OFF for each item (01~20) for each port, as marked on the system record sheet:</p> <p>LED 01: Speakerphone Enabled LED 02: Microphone Key Lock Enabled LED 03: Microphone ON at Start of Call LED 04: Not Used LED 05: Speed Dial Allowed LED 06: Automatic Busy Redial Access Enabled LED 07: Automatic Off-hook Call Announce LED 08: Forced Account Code Enabled LED 09: Toll Restriction Override Code Revision Authority</p>	
<p>LED 10: DISA Security Code Change Allowed LED 11: Dial Pulse (DTMF Off) for Standard Telephone LED 14: Account Codes Verified LED 15: Verified Account Code Revision Authority LED 16: Traveling Class of Service Code Revision Authority LED 17: Do Not Disturb Override Allowed LED 18: Executive Override Allowed LED 19: Privacy Override Allowed LED 20: Not Used</p> <p>If programming a port range, the LED indications are as follows:</p> <ul style="list-style-type: none"> ✦ LED-ON, all ports in range are enabled for that item. ✦ LED-OFF, all ports in range are disabled for that item. ✦ LED-FLASHING, some ports in range are enabled and some ports are disabled. 	
<p>7. Hold Secure data in system programming.</p>	<p>30 Select Data Programmed</p>
<p>8. Spkr (Speaker) Prepare system for another selection (go back to Step 5), or exit Program 30 (continue with Step 9).</p>	<p>30 Select =</p>
<p>9. ## Hold Secure Program 30 data in system memory.</p>	<p>30 Select = ## Data Programmed</p>
<p>10. Spkr (Speaker) Exit Program 30. Enter another program number or exit programming mode (go to Step 11). Speaker beeps to indicate it is exiting Program 33.</p>	<p>Program =</p>
<p>11. ## Hold Exit programming mode.</p>	<p style="text-align: right;">No. N-N</p> <p>Jan 20 Sun 06:58</p>

1. N-N = Programming telephone [PDN]

Program *30 – Telephone Group Page Assignments

Processor Type: DK14, DK40i, All RCTUs

Program Type: Station

Initialized Default: All LEDs OFF

* # * # 1 * 2 * 3 - Spkr * 3 0 Hold - Spkr [] [] [] # [] Hold - Spkr # # Hold - Spkr # # Hold

Enter the station logical port which will be assigned to page a group or groups. To add a port range, enter XXX*XXX (low port * high port).

Press LED Buttons 01~08 to light LEDs for the port specified in the last step. In the table below, "X" all LED Buttons which should be lit.

Processor Type	Port Range	Number of Page Groups
DK14	000~007	4
DK40i	000~027	4
RCTUA	000~031	4

Processor Type	Port Range	Number of Page Groups
RCTUBA/BB	000~079	4
RCTUC/D	000~239	8
RCTUE/F	000~335	8

Feature	LED	Port															
Page Group H	08																
Page Group G	07																
Page Group F	06																
Page Group E	05																
Page Group D	04																
Page Group C	03																
Page Group B	02																
Page Group A	01																

Shaded groups apply to RCTUC/D and RCTUE/F only.

Program *30 Overview

Digital and electronic telephones can be assigned to “internal telephone speaker” page groups with this program. Each group can have as many as 120 stations. Telephones can be a member of more than one group. Station users can access each group separately by dialing access codes. (See Program 05 for access codes.) The above table shows four or eight page groups. An additional group is the All Call Page Group set in Program 31, LED 10.

Notes

- A maximum of 120 telephones can be assigned to a particular page group.
- Only 120 telephones can be paged simultaneously. Example: If Page Group “A” has 60 telephones, Page Group “B” has 50 telephones, and Page Group “C” has 70 telephones, then Group A + B (60 + 50 = 110) can be paged simultaneously, but Group A + C (60 + 70 = 130) cannot be paged simultaneously.

Program 31 – Station Class of Service

Processor Type: DK14, DK40i, All RCTUs

Program Type: Station

Initialized Default: LED 10 ON for Ports 000~119; LED 11~13 ON for all ports.

##1*2*3 - Spkr 3 1 Hold - Spkr # Hold - Spkr ## Hold - Spkr ## Hold

SELECT = Station Logical Port Number(s)
Enter the port numbers to which class of service must be assigned.

Light LED Buttons for the port specified in the last step. All LED Buttons marked with an "X" in the table below should be lit.

Processor Type	Port Range
DK14	000-009
DK40i	000-027
RCTUA	000-031

Processor Type	Port Range
RCTUBA/BB	000-079
RCTUC/D	000-239
RCTUE/F	000-335

Feature	LED	Port									
Toshiba Stratagy/VP (B + Station No.)	20										
Toshiba Stratagy/VP (B No Station)	19										
Executive & Privacy Override Blocking	18										
End/End Signal Rcv (VM)	17										
Receive VM ID Code	16										
Toshiba Stratagy/VP Integration (A/D)	15										
Handset OCA	14										
Handset OCA Warning Tone	13										
Pooled Line Key - No Flash if No Ring	12										
Busy Override Tone - Continuous	11										
All Call Page Allowed - EKTs/DKTs	10										
VM (No Conference)	09										
VM Group 4 (does not apply to DK14)	08										
VM Group 3 (does not apply to DK14)	07										
VM Group 2	06										
VM Group 1	05										
VM to VM Call Blocking Called/Calling	04										
OCA Enabled (To Receive)	03										
Handsfree No Warning Tone	02										
Handsfree Disabled	01										


Program 31 Overview

Program 31 sets most voice mail or External Auto Attendant port assignments. Each standard telephone port (QSTU2, RSTU2, RSTU, PSTU, PESU, RDSU, KSTU2, QSTU2) connected to a Toshiba Stratagy, Stratagy DK or VP voice mail system should have LEDs 04, 15, 16, 17, 18, 19, and 20, and one of the following: 05, 06, 07, or 08 turned ON. These LED's should be ON for VM ports only, not for telephone ports.

LED 09 should be OFF for VM Auto Attendant “blind” transfer and VM tandem CO line connection with automatic release. LED 09 should be ON for VM Auto Attendant supervised transfer operation.

Example Programming Assignment to Set Up Voice Mail in a Distributed Hunt Group

Program *32	008	VMG1 Message Center
Program 13	010	VMG2 Message Center
Program 31	008 – Button 5 ON 009 – Button 5 ON	VMG1 RSTU VM Ports
	010 – Button 6 ON 011 – Button 6 ON	VMG2 RSTU VM Ports
Program *40	850 – 01 008 850 – 02 009	VMG1 DH Group Members
	851 – 01 010 851 – 02 011	VMG1 DH Group Members

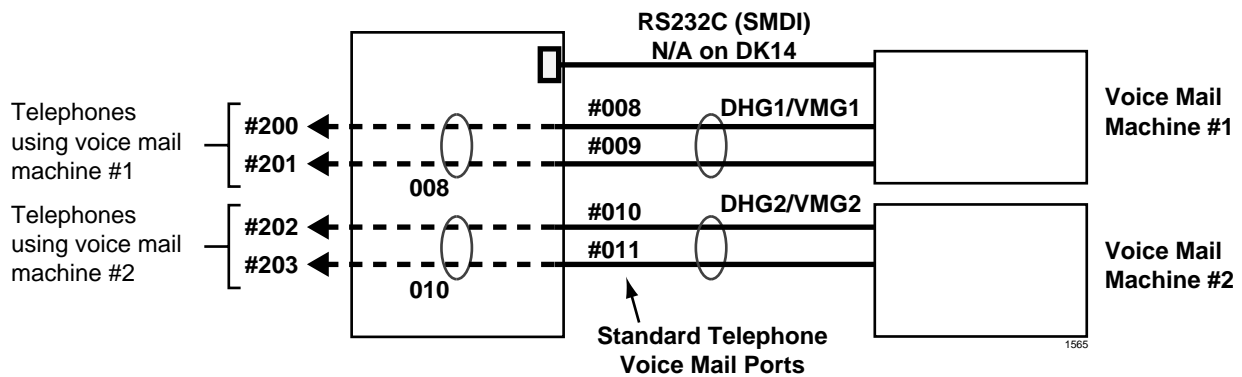

All ports assigned to a Voice Mail Group should also be assigned to a unique Distributed Hunt Group using Program *40. Each Program 31 Voice Mail Group must be associated with a unique Program *40 Distributed Hunt Group that hunts only to its own Voice Mail Group ports. (See above example of how to connect/program two voice mail/auto attendant machines and associate them with two different DH groups.)

- ♦ If LED 15 or 19 is ON, turn LED 17 ON. If LED 20 is ON, turn LEDs 17 and 19 ON.
- ♦ For SMDI or DTMF integration, turn ON LEDs 04, 16, 17 and 18, and one of the following: 05, 06, 07, or 08 for all standard telephone ports connected to a VM unit.
- ♦ Turn LED 19 and 20 OFF if the VM unit does not respond properly to transfer recall (B-Tone) signals when using any type of Voice Mail Interface.
- ♦ LED 09 – see above comments in Program Overview.
- ♦ If CO lines direct ring VM ports via Program 81~89, the data in Programs *81, *84, and *87 must be blank.

Important! Do not assign Program 31 VM/AA options to built-in Auto Attendant digital announcer ports.

LED 20: Toshiba Stratagy/VP (B + Station Number)

Use with Toshiba Stratagy/Stratagy DK/VP systems connected to a standard telephone port (PSTU, RSTU, RSTU2, PESU, RDSU, KSTU2 and QSTU2). Toshiba voice mail systems receiving DTMF B tone followed by the station number may not know where the call is coming from - such as hold recall or “blind” ring transfer recall.

When enabled (LED 20 ON), allows Toshiba voice mail systems to respond more intelligently with appropriate voice prompts. Use this feature for standard telephone ports connected to voice mail devices only, not for station ports connected to telephones. The station number is not returned, it blind transfers to a DND station.

Note You must enable Toshiba Stratagy/Stratagy DK/VP (B No Station) with LED 19 to allow this function.

LED 19: Toshiba Stratagy/Stratagy DK/VP (B No Station)

DTMF “B” tone is sent to Toshiba voice mail systems to signify a recall where Toshiba voice mail systems already knows the recalling station number. Again, this allows Toshiba voice mail systems to respond more intelligently with appropriate voice prompts. Use this feature for standard telephone ports (PSTU, RSTU, RSTU2, PESU, RDSU, KSTU2 and QSTU2) connected to voice mail devices only, not for station ports connected to telephones.

LED 18: Executive and Privacy Override Blocking (Modem)

When enabled (LED 18 ON), denies a station user the capability to break into a station connection with Executive or Privacy Override. Use this feature for standard telephone ports (PSTU, RSTU, RSTU2, PESU, RDSU, KSTU2 and QSTU2) connected to a modem, voice mail/auto attendant or ACD digital announcement device in order to ensure data and voice security. Also, use this feature to deny override of any station. This feature does not block Attendant Supervised Loop Monitoring.

You can use the Privacy Release **Privacy Release** button to disable Privacy on a call-by-call basis; this button does not disable Executive Override Blocking.

Enable this feature if a modem is assigned to the system modem pool in Program 21 to provide data security for modem standard telephone ports.

Disable this feature (LED 18 OFF) for the modem standard telephone ports assigned in Program 21 if using the system modem pool for data calls that must be switched between voice and data.

LED 17: End-to-end Signal RCV (VM)

When enabled (LED 17 ON), provides End-to-end Signaling of Dual-tone Multi-frequency (DTMF) tones through the system. Required on all voice mail ports (RSTU, RSTU2, RDSU/RSTS, PSTU, PESU, RDSU, QSTU2 and KSTU2) for proper signaling communication.

LED 16: Receive Voice Mail (VM) ID Code

When a station is call-forwarded to a VM system, certain identification (ID) DTMF tones are automatically sent to direct the call to a specific mailbox (VM ID Code #656 or DNIS VM ID Code). The automatic ID is also sent to the VM device when electronic, digital, or standard telephone users retrieve messages via the Message Waiting buttons (VM ID Code #657). The VM port must be programmed for this feature to allow the reception of VM ID DTMF digits.

LED 15: Toshiba Strategy, Strategy DK and/or VP Integration (A Tone/D Tone)

When enabled (LED 15 ON), sends an answer tone (DTMF A tone) to the Toshiba voice mail system when a station answers, and a disconnect tone (DTMF D tone) when a station disconnects. This allows Toshiba voice mail systems to respond quickly rather than waiting during long time-outs. If the Central Office (CO) provides an Automatic Release (AR) signal (sometimes referred to as Calling Party Control or Loop Supervision), D tone is also sent to disconnect VM ports when outside callers hang up (see Program 15-0 and 15-3).

LED 14: Off-hook Call Announce (OCA) Handset or Speaker

If a station is enabled to receive OCA (Program 31, LED 03 ON), LED 14 defines which type of OCA the telephone should receive: Headset/Handset (LED 14 ON) or Speaker (LED 14 OFF).

Digital Telephones: Speaker OCA requires a DVSU and a special Program 03 code. Only digital telephones can receive Handset OCA. Handset OCA does not require DVSU or any other special hardware.

Electronic Telephones: Speaker OCA requires a HVSU and three-pair wiring. Headset OCA does not require these items; Electronic or standard telephones cannot receive Handset OCA.

LED 13: OCA Handset Warning Tone

This option enables (LED 13 ON) or disables (LED 14 OFF) a warning-tone (one-second tone burst) for digital telephones that receive Headset OCA. Does not apply to Speaker OCA.

LED 12: Pooled Line Button Operation, No Flash if No Ring

When enabled (LED 12 ON) on telephones assigned to ring in Programs 81~89, incoming line calls in pooled line groups only flash on **Pooled Line** buttons. When disabled (LED 12 OFF), the Pooled Line LED flashes when an incoming line call is received – even if the telephone does not ring.

LED 11: Busy Override (BOV) Tone

Digital or Electronic Telephones: If a [DN] is busy and receives a call on an idle [DN] or CO button from another station or an outside line then BOV tone is sent. BOV tone can be continuous muted one-second rings (LED 11 ON) or two muted one-second rings three seconds apart (LED 11 OFF).

If all the [DN] button appearances of the called [DNs] are busy, the call will camp-on and the telephone receives two muted rings (camp-on tone) three seconds apart (only if LED 01 is ON for the telephone in Program *34).

This BOV feature does not apply to CO lines that are ring transferred to a busy telephone - with or without an idle [DN] or CO **Line** button. In this case, the call is a camped-on call to the busy telephone.

BOV and Camp-on muted ring tone frequency for digital and electronic telephones: 1209Hz/modulated by 10Hz on CO line calls; 1209Hz/unmodulated on station-to-station calls.

Standard Telephones: This feature does not apply to Camp-on tone sent to standard telephones. Standard telephones only receive two Camp-on tone bursts - three seconds apart, regardless of this BOV Tone feature's setting. Also, you must run Program *34 to enable a standard telephone to receive Camp-on tone. Camp-on tone is sent when the busy standard telephone receives a transferred CO line call and when the busy standard telephone receives a direct call from a station or CO line.

BOV and Camp-on muted ring tone frequency for standard telephone:
 BOV tone is a 160ms burst of 1209Hz/ unmodulated, twice - three seconds apart.
 Camp-on tone is two one-second bursts of 1209Hz/interrupted by 160ms bursts, three seconds apart.

LED 10: All Call Page Allowed-Digital and Electronic Telephones

When enabled, (LED 10 ON) any station can be allowed to receive an All Call Page and still have the ability to initiate an All Call Page. Up to 120 stations can be assigned and paged at one time. All Call Page is treated as any other page group. See Program *30 for telephone page group assignments and Program 10-2, LED 15 for External Page with All Call Page option (see Program *34).

LED 09: No Station plus CO Line Conference Origination by VM

When enabled (LED 09 ON), prohibits VM ports from setting up conference calls with a station and the outside line party and tandem calls with two outside lines. Use this feature for VM (RSTU, RSTU2, PSTU, PESU, RDSU/RSTS, KSTU2, QSTU2) ports. This LED should be ON when VM/Auto Attendant does screened or supervised transfers and OFF if only doing blind transfers.

If LED 09 is OFF or ON, station can still set up a conference call with an outside line and a VM port so the station user and outside party can listen to a message together (R3.2 and above).

In DK release 3.2 software, VM ports are allowed to set up tandem calls with two CO lines and then hook-flash and hang-up to exit the call, allowing the two CO lines to remain connected. For this feature, LED 09 must be OFF for VM ports.

LED 05~08: Voice Mail (VM) Groups 1~4

The system allows the following VM station port groups to be configured for support of VM/auto attendant devices:

One group is intended for each different device.

System	Number of VM Groups	LEDs
DK14	1~2	05~06
DK424 and DK40i	1~4	05~08

All standard telephone ports (RSTU, RSTU2, PSTU, PESU, RDSU/RSTS, KSTU2 and QSTU2) connected to a particular VM machine should be assigned to the same VM group (SMDI or DTMF Integration). The purpose of VM grouping is to allow efficient use of the message waiting (MW) set and cancel operations from the VM machine. Since each digital, electronic, and standard telephone can only have a maximum of four messages waiting, the VM device should set MW only once, regardless of how many messages there are.

Assign all ports of each Program 31 VM Group to a unique Program *40 Distributed Hunt (DH) Group. Telephones should Call and/or Call Forward to the DH Group [DN] to connect to VM. In Programs 13 and *32, assign the lowest port in the Program 31 VM group as the message center. Do not assign the VM DH Group port as the message center.

LED 04: Voice Mail (VM) to VM Call Blocking

When enabled (LED 04 ON), prevents VM/auto attendant ports from call forwarding to other VM ports during screened or supervised voice mail transfers. Use this feature for all VM/auto attendant ports if their transferred calls are screened or supervised. Disable this feature (LED 04 OFF) for all VM/auto attendant ports if their calls are ring (blind) transferred.

LED 03: Off-hook Call Announce (OCA) Enabled (Receive)

Enable this option (LED 03 ON) for any digital or electronic telephone requiring OCA. Telephones must be equipped for OCA. OCA is not available on standard telephones.

This feature does not affect the station's ability to originate OCA.

Digital telephones: Speaker OCA requires a DVSU in the telephone. Also, the PDKU supporting OCA must have code 62 or 64 set in Program 03. Handset/headset OCA does not require extra hardware - only that Program 31 LED 03, and 14 be ON.

Electronic telephones: Speaker OCA requires a HVSU/HVSI in the telephone and a third pair of wires from the PEKU. Electronic telephones cannot receive Handset OCA.

LED 02: Handsfree No Warning

As a default, on Voice First systems (Program 10-1, LED 1) a one-second warning tone is sent to a handsfree digital or electronic telephone to inform its user that someone is calling and that they can be heard. If the warning tone is not desired at the called digital or electronic telephone, this assignment can disable it, allowing silent room monitoring of the area surrounding the telephone. This will also prevent ringing the digital or electronic telephone as a ring-first situation. Initialized data activates the warning tone for all ports.

LED 01: Handsfree Disabled

It is possible to disable the internal call Handsfree Answerback function on any digital or electronic telephone. This option ensures privacy (no room monitoring) when enabled on the called station but it prevents the called station from answering an internal call hands free. The **Microphn Cutoff** button (Program 39) can be used instead of this feature to allow the user to enable/disable Handsfree Answerback, as desired.

Program *31 – Group Pickup Assignments

Processor Type: DK14, DK40i, All RCTUs

Program Type: Station

Initialized Default: All LEDs OFF

* # * # 1 * 2 * 3 - Spkr * 3 1 Hold - Spkr # Hold - Spkr # # Hold - Spkr # # Hold

Station Logical Port Number

Enter the station logical port which will be assigned to a pickup group or groups. To add a port range, enter XXX*XXX (low port * high port).

Light LED Buttons for the port specified in the last step. In the table below, mark an "X" for all LED Buttons which should be lit.

Processor Type	Port Range	Pickup Groups
DK14	000-009	8
DK40i	000-027	16
RCTUA	000-031	20

Processor Type	Port Range	Pickup Groups
RCTUBA/BB	000-079	20
RCTUC/D	000-239	20
RCTUE/F	000-335	20

Pickup Group	LED	Port													
		<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Pickup Group 20	20														
Pickup Group 19	19														
Pickup Group 18	18														
Pickup Group 17	17														
Pickup Group 16	16														
Pickup Group 15	15														
Pickup Group 14	14														
Pickup Group 13	13														
Pickup Group 12	12														
Pickup Group 11	11														
Pickup Group 10	10														
Pickup Group 9	09														
Pickup Group 8	08														
Pickup Group 7	07														
Pickup Group 6	06														
Pickup Group 5	05														
Pickup Group 4	04														
Pickup Group 6	03														
Pickup Group 2	02														
Pickup Group 1	01														

Program *31 Overview

Stations can be divided into as many as 20 pickup groups (see the legend above the record sheet). Station users can pick up calls (internal or line) that are ringing any station within their group by dialing a single access code (or with a **Call Pickup** button assigned with Code 480 in Program 39), and pick up calls that are ringing stations in other groups by dialing selected access codes.

Stations can belong to more than one group. (See Program 05 for access codes.) This feature also picks up ringing transfer and hold recall calls, but does not pick up held calls or selectively by directory number.

To pickup held or ringing [PDN] and/or [PhDN] calls selectively, use the **#5#2** + XXX pickup access code (where XXX is the [PDN] or [PhDN]).

Program 32 Overview

This program defines which [PDN] or CO line a digital (cordless, corded, or Strata AirLink wireless) and electronic telephone will be automatically connected to when the telephone handset is taken off-hook or the **Spkr** button is used.

Note Strata AirLink wireless handsets do not have a **Spkr** button.

The lowest [PDN], lowest CO line, or Line Group is selected only if the telephone is not ringing when it is taken off-hook (no **Spkr** pressed). If a telephone is ringing, the [PDN] Auto Preference, or outgoing CO line is canceled. In this case, no selection is made if Ring Line Preference is disabled; the ring line is selected if Ringing Line Preference is enabled.

Automatic Preference for digital, electronic, or Strata AirLink wireless telephones via handset off-hook or the **Spkr** button is the automatic connection to lines, or the [PDN] of a telephone under various conditions.

With Ringing Line Preference, a digital, electronic, or Strata AirLink wireless telephone user by going off-hook (or by pressing the **Spkr** button) may be automatically connected to the lowest line ringing in without having to press a CO **Line** button or dial an access code.

If no lines are ringing and an electronic or digital telephone goes off-hook, the station can be automatically connected to the [PDN] or to a line. The line connected can be the lowest numbered line available on the telephone or the highest idle line from a selected group.

Notes

- Program 32 does not apply to standard telephones. To allow system features to be accessed, standard telephones always receive system internal dial tone when originating calls.
- If ringing line preference is not selected, no auto preference selection will occur when a station goes off hook during an incoming ring condition.
- Toshiba cordless telephones can have [PDN] (Code 01) selected for Auto Preference so the user will get system dial tone when pressing the **TALK** button from the idle state, or a line or line group can be selected for Auto Preference if CO dial tone should be accessed when the **TALK** button is pressed.
- Strata AirLink wireless handsets must have Code 01 assigned to receive system dial tone after pressing **CALL** in the idle mode. A line or line group can be selected instead, if CO dial tone should be accessed when **CALL** is pressed.

On Ring-first systems, if a [PDN] appears on more than one button (on owner's telephone), the DK will not hunt until all appearances of the [PDN] are in use.

On Voice-first systems, the system will hunt for an available station if any one of the [PDN] appearances is busy.

Program 33 - Example

Action (press buttons+LED buttons)	LCD Response
1. Use the programming LCD electronic or digital telephone connected to physical port 005 - circuit 6. Make sure the programming button strip template is installed on the programming telephone. (See "Program 38 Digital and Electronic Telephone Keystrip Type" on Page 3-109.)	No. N-N ¹ Jan 20 Sun 06:43
2. ***#1*2*3 Enter programming mode. (Do not press [DN] button.)	Program Mode
3. Spkr (Speaker) 33 Hold Access Program 33. System beeps after Spkr (Speaker) is pressed to indicate program number may be entered.	Program = 33 Data Store
4. Spkr (Speaker) Prepare the system for a station port selection.	33 Select =
5. 000~335 or 500~835 Select the port number of the Hunt From station. A range of ports can be entered as specified on the record sheet. After the Hunt From port is entered, press the # button. Do not press # when entering a range.	33 Select = (000~335) Hunt To =
6. 000~335 or 500~835 Enter the port number of the Hunt To point, as recorded on the system record sheet. Press LED button 01 to delete a digit from Hunt To point ports.	33 Select = (000~335) Hunt To = (000~335)
7. Hold Secure data in system programming.	33 Select = (000~335) Data Programmed
8. Spkr (Speaker) Prepare system for another selection (go back to Step 5), or exit Program 33 (continue with Step 9).	33 Select = ##
9. ## Hold Secure Program 33 data in system memory.	33 Select = Data Programmed
10. Spkr (Speaker) Exit Program 33. Enter another program number or exit programming mode (go to Step 11). Speaker beeps to indicate it is exiting Program 33.	Program =
11. ## Hold Exit programming mode.	No. N-N Jan 20 Sun 06:58

1. N-N = Program telephone [PDN]

Program *33 Overview

This program assigns each [PhDN] to a designated “Owner” telephone. Each [PhDN] must be assigned to a designated “Owner” telephone and that [PhDN] must be assigned (using Program 39) to appear on the owner telephone. If a [PhDN] is not assigned to an “Owner” telephone, it cannot receive calls (caller will receive reorder tone) but it can be used to originate calls.

If the [PhDN] owner telephone is unplugged, the [PhDN] is busy (vacant) when called, unless CF-All Call is set, in which case, it will forward. A telephone can be assigned as “Owner” of up to eight [PhDNs].

[PhDN] “Owner” telephones have the following attributes for the [PhDNs] that it is assigned to own:

- ♦ Set Call Forward for all [PhDNs] that the telephone owns.
- ♦ Set Call Forward to a VM Mail Box and Message Retrieve ID codes (#656/#657), independent of the telephone’s Voice Mail assignments. This “CF to” VM Box can be the same as the Owner telephone’s VM Box or any other VM Box, including a dedicated VM Box for the [PhDN].
- ♦ Have up to four [PhDN] Message Waiting (MW) LEDs (Program 39, flexible button). This [PhDN] MW button indicates that the [PhDN] has a message waiting from voice mail or another [DN] - again independent of the telephone’s fixed Msg LED.
- ♦ Store ANI and/or Caller ID information for abandon calls directed to the [PhDN]. The [PhDN] Owner telephone must be assigned “Abandon Call Memory” in Program *51 if the [PhDN] rings on more than one telephone.
- ♦ Can receive OCA calls to the [PhDN].

Program *34 – Station Class Of Service

Processor Type: DK14, DK40i, All RCTUs

Program Type: Station

Initialized Default: LED 01 ON for all ports

* # * # 1 * 2 * 3 - Spkr * 3 4 Hold - Spkr # Hold - Spkr # # Hold - Spkr # # Hold

SELECT = Station Logical Port Number

Enter the port number(s) being defined.

To add a port range, enter XXX*XXX
(low port * high port).

LED = Select LEDs to light for the port specified in the last step. Mark an "X" in the table below for all LEDs which should be lit.

Processor	Port Range
DK14	000-009
DK40i	000-027
RCTUA	000-031

Processor	Port Range
RCTUBA/BB	000-079
RCTUC/D	000-239
RCTUE/F	000-335

Feature	LED	Port												
	20													
	19													
	18													
	17													
	16													
	15													
	14													
	13													
	12													
	11													
	10													
	09													
	08													
	07													
	06													
	05													
	04													
	03													
	02													
Camp-on Tone to standard telephone, DKT, or EKT handset/Spkr	01													

System & Station

Program *34 Overview

Program *34 assigns Camp-on tone to standard telephones.

A standard telephone can receive (LED 01 ON), or be blocked (LED 01 OFF) from receiving Camp-on tone depending on how LED 01 is programmed for its standard station port.

When LED 01 is ON for a standard telephone: Camp-on tone is sent when the busy standard telephone receives a transferred CO line call and when the busy standard receives a direct call from a station or CO line.

An optional Camp-on busy tone burst can be sent to standard telephone handsets/headsets (LED 01 ON). Turn LED 01 OFF for all standard telephone ports connected to voice mail and/or auto attendant devices.

Camp on tone to a standard telephone handset is:

- ♦ Two 160 ms bursts of 1209 Hz, 3-seconds apart (internal, transferred, or Tie line calls)
- ♦ Two 1-second bursts of 1209 Hz, (interrupted by 160 ms), 3-seconds apart (external CO or DID line call)

If this option is disabled on Toshiba digital or electronic telephones (LED 01 OFF), the telephone will not receive camp-on tone on direct DID calls or transferred CO line calls if there is not an idle [DN] or **Line** button to receive the call, but the telephone will continue to receive BOV tone on direct internal or CO line calls, providing there is a [DN] or **Line** button available for the call to ring.

Also, if a busy DKT or EKT receives any type of call and there is not an idle [DN] or **Line** button available for the call to ring, the DKT or EKT will receive camp-on tone (if LED 01 is ON) or will not receive camp-on or BOV tone (LED 01 OFF).

Program 35 – Station Class of Service

Processor Type: DK14, DK40i, All RCTUs

Program Type: Station

Initialized Default: LED 01, 02, 04, 05, 16 are ON, all other LEDs OFF.

##1*2*3 - Spkr 3 5 Hold - Spkr [] [] # [] Hold - Spkr # # Hold - Spkr # # Hold

SELECT = Station Logical Port Number

Enter the port number(s) being defined.

To add a port range, enter XXX*XXX
(low port * high port).

LED = Select LEDs to light for the port specified in the last step. Mark an "X" in the table below for all LEDs which should be ON.

Processor	Port Range	Maximum LCD Phones With Personal Messages
DK14	000-009	8
DK40i	000-027	16
RCTUA	000-031	16

Processor	Port Range	Maximum LCD Phones With Personal Messages
RCTUBA/BB	000-079	32
RCTUC/D	000-239	96
RCTUE/F	000-335	96

Feature	LED	Port											
Busy Station Transfer	20												
Busy Station Ringing	19												
Automatic Hold	18												
DKT 2000 Telephone Continuous DTMF Tones OFF	17												
No CF/NA Handsfree or OCA	16												
Not used	15												
Toll Restriction After Answer	14												
Toll Restriction After Answer	13												
Not used	12-07												
Disable Hold Display Scrolling (Release 3.2 and higher)	06												
LCD Personal Message (10-19) Allowed	05												
Message Waiting (RCV)	04												
Message Waiting Lamp Standard. Telephones	03												
LCD Type/32-ON/12-OFF	02												
LCD Display	01												

System & Station

Program 35 Overview

LED 19: Busy Station Transfer (BST), LED 20 / Busy Station Ringing (BSR)

BST and BSR operate together to ensure that a busy digital or electronic telephone station always receives transferred line calls along with LED and tone indications. The station or Voice Mail (VM)/auto attendant device that transfers the call must be programmed with BST (LED 20 ON) and the station port that receives it must have BSR (LED 19 ON).

When a busy station with BSR receives a transfer from a station or VM/auto attendant with BST, there is a muted repetitive BOV tone (see Program 31, LED 11) at the busy station; if there is an idle [DN], its LED will flash at the ringing rate until the station transferring the call hangs up. When it does hang up, or if there is not an idle [DN], the line call then camps-on to the busy station. The busy station is alerted of the camp-on by a camp-on tone (see Program *34), the CO line LED flashes at the exclusive hold rate, and a message (“CAMP-ON X”, X = the line number) appears on the LCD (if equipped).

Among other applications, a VM/auto attendant device that transfers calls to a typically busy answering position station benefits from this program. Some auto attendant devices cannot transfer a call to a busy station if BST and BSR are not activated.

Notes

- A BST station receives ringback tone, instead of busy tone, when transferring a call to a busy BSR station.
- Do not assign BST/BSR to built-in Auto Attendant announcement ports.
- BST (LED 20 ON) should be assigned to all ACD agent telephones and BSR (LED 19 ON) should be assigned to all ACD supervisor telephones to allow agent assistance calls to supervisor telephones that are busy.
- LEDs 01, 02, and 04 must be ON to allow the Telephone’s Message Waiting LED to function with voice mail—even if the Telephone is not an LCD type.
- Dial out (with or without Toll Restriction) must be allowed to use Speed Dial Buttons after answering incoming calls. If a CO line is put on hold, Toll Restriction is applied to stations that are restricted when the held line is picked up by a toll restricted station. If “Dial out with T.R.” is enabled, the CO line will drop if a station dials a restricted number after answering an incoming call, or if any digit is dialed with “dial out not allowed.”

LED 18: Automatic Hold

When enabled, (LED 18 ON), station users with CO **Line** buttons can place a CO line or [DN] call on hold, then call another line or station just by pressing another CO **Line** or [DN] button and dialing the number. If Automatic Hold is not allowed (LED 18 OFF), users can put calls on hold and place calls, but they must press the **Hold** button before accessing another line or [DN].

Notes

- CO line or internal calls that appear on the [DN] buttons will automatically hold when accessing another line.
- Toshiba recommends that the **Release and Ans** button be provided via Program 39 to telephones programmed for Auto Hold.

LED 17: Continuous DTMF Tones Off

2000-series digital telephones can send DTMF tones for as long as station users press their buttons (80 msec. minimum). This feature can be disabled (LED 17 ON). If it is disabled, DTMF tones sent by these telephones will be either 80 or 160 milliseconds depending on the selection made with Program 10-1, LED 04 and Program 10-2, LED 06.

Note PDKU1 does not support continuous DTMF tones on 2000-series digital telephones.

LED 16: No Call Forward/No Answer on Handsfree Answerback

When enabled (LED 16 ON), a Handsfree Answerback call to an idle station in the Call Forward No-Answer or Call Forward-Busy/No Answer mode is not forwarded. If the system is Programmed for Voice first (Program 10-1 and 10-2, LED 01 OFF), Voice Announce calls do not Call Forward No-Answer; however, calls will call forward busy. This prevents the call from being forwarded 8-60 seconds after the called party has been talking in the Handsfree Answerback mode.

Outside calls and busy internal calls to the station continue to forward with this feature set. If the system is set for Tone First, calls will call forward on Busy and No Answer.

Notes

- The caller can press the RING Soft Key on digital LCD telephones or press **1** on digital or electronic telephones to activate Call Forward on Voice Announce calls.
- OCA calls do not Call Forward No Answer in any case.

LED 15

Not used at this time.

LEDs 13 and 14: Toll Restriction After Answer

These two LEDs determine whether or not a toll restricted telephone user is allowed to use one touch speed dial buttons after answering an incoming CO line call. LED 13 and 14 should be turned ON for Toll Restricted Telephones that must answer incoming CO line calls and use **SD** (speed dial) buttons programmed to perform functions that Hold or Park calls and access the page system automatically.

LED 13	LED 14	Description
OFF	OFF	Not allowed to use Speed Dial after answering a line call.
ON	OFF	Allowed to use Speed Dial buttons but subject to toll restriction tables.
OFF	ON	Allowed to use Speed Dial buttons and not subject to toll restriction.

Initialized data sets both LEDs 13 and 14 off for all telephone users (not allowed to use Speed Dial buttons after answering incoming CO line calls).

LED 07~12

Not used at this time.

LED 06: Disable Hold Display Scrolling (Release 3.2)

If LED 06 is ON, Hold Display scrolling is disabled. Also, a telephone LCD cannot display which CO lines are on hold on a [PDN] if the **Scroll** button is pressed. Hold Display causes the [DN] button LED, of the line displayed on the LCD, to flash at a fast rate. If LED 06 is OFF, Hold Display Scrolling is enabled. Prior to Release 3.2, Hold Display Scrolling was always enabled. Hold Display Scrolling requires an LCD telephone.

LED 05: LCD Individual Message

This option defines which ports can allow LCD digital and electronic telephones to store up to 10 personal messages. It offers the option of entering alphanumeric memos for each of the LCD's station speed dial numbers. See the record sheet legend for the maximum stations that can have this option:

A low port must be disabled (LED 05 OFF) before adding a port above the initialized ports.

LED 04: Message Waiting (RCV)

If the message waiting indication is not desired on an electronic, digital or standard telephone, this program can be used to deny it. This does not affect that station's ability to send a message waiting indication to another station ([PDN] or [PhDN]). Do not use this option to enable/disable MW lamps on standard telephones; use LED 03 below for standard telephones.

LED 03: Standard Telephone Message Waiting Lamp Enable

This option is used to identify which station ports are connected to Standard Telephones (2500 or 500 type telephones) that have Message Waiting Lamps. LED 03 should be turned ON for all Standard Telephones ports that should support Standard Telephone Message Waiting lamps; LED 03 must be turned OFF for all other station ports including digital and electronic telephone ports that support Message Waiting LEDs. This also applies to Voice Mail ports.

Important! *Standard telephones that require the Message Waiting Lamp functions must be connected to an RSTU2 PCB. Only one standard telephone with Message Waiting Lamp is allowed to be connected to each RSTU2 port.*

LED 02: LCD Type 32/12

Digital and 6000/6500-series LCD electronic telephones have 32-character displays. Therefore, assignments should be left in the initialized state of 32 characters. LED 02 must be ON to receive the voice mail message waiting indication.

LED 01: LCD Display

This option should be used (LED 01 ON) for all stations (even non-LCD), unless it is desired to disable the station's LCD and message waiting functions.

Program 36 – Fixed Call Forward

Processor Type: DK14, DK40i, All RCTUs

Program Type: Station

Initialized Default: Does not assign a Fixed Call Forward location to any port

##1*2*3 - Spkr 3 6 Hold - Spkr [][] # [][] Hold - Spkr ## Hold - Spkr ## Hold

SELECT = Station Logical Port Number

FORWARD TO TEL = Port Number

Enter the port number of the station that needs a Fixed Call Forward location assigned.

Enter the port number of the [PDN], [PhDN] or DH [DN] that will be call forwarded to when the **Fixed Call Forward** button is pressed.

To add a port range, enter XXX*XXX (low port * high port).

[PhDNs] or DH [DNs] can be entered with DK Release 3.2 and above software only.

Processor	[PDN] Port Range	[PhDN] Port Range	DH Group Ports
DK14	000-009	500-509	900-915
DK40i	000-027	500-527	900-915
RCTUA	000-031	500-531	900-915

Processor	[PDN] Port Range	[PhDN] Port Range	DH Group Ports
RCTUBA/BB	000-079	500-579	900-915
RCTUC/D	000-239	500-739	900-915
RCTUE/F	000-335	500-835	900-915

Port	Forward to Tel Port

Port	Forward to Tel Port

Port	Forward to Tel Port

Port	Forward to Tel Port

System & Station

Program 36 Overview

Fixed Call Forwarding is different from other station Call Forwarding options. It is fixed in terms of the destination [PDN] which is assigned in this program. The station user cannot change the Fixed Call Forward destination, unlike the other station Call Forwarding options. If Fixed Call Forwarding is set on a station, the station does not ring and all calls forward immediately.

Note Telephones and attendant consoles must have a **Fixed-Call Forward** button to activate this feature (See Programs 39 and 59).

Program *36 – System NT Button Lock Password Changing Station Assignment

Processor Type: DK14, DK40i, All RCTUs

Program Type: Station

Initialized Default: 000




Processor	Port Range
DK14	000-009
DK40i	000-027
RCTUA	000-031

Processor	Port Range
RCTUBA/BB	000-079
RCTUC/D	000-239
RCTUE/F	000-335

Tenant Number	NT Lock Station or Console Port
1	
2	
3	
4	

Program *36 Overview

Attendant Consoles and stations assigned in this program can change the System Night Transfer (NT) Lock password by dialing the sequence below:



Only one station or console can change the code. System/Tenant CO lines can be locked into the Day, Day2, or Night ringing mode only after the NT Lock password is entered. Locking the system into a particular ringing mode adds security to line call routing which prevents accidental or mischievous changing of the system ringing mode.

Any telephone or an attendant console can lock the system into a ringing mode. The telephone or console must have both a **Night Transfer** and an **Night Transfer Lock** button *and* the person locking the system must enter the password.

NT lock related programs include:

- Program 39** Station Flexible Button Assignments – **Night Transfer** and **Night Transfer Lock** buttons
- Program 59** Attendant Console Flexible Button Codes – **Night Transfer** and **Night Transfer Lock** buttons
- Program *36** NT Lock Station Assignment. Program *36 is not required to assign attendant consoles to NT Lock functions
- Program *15** CO Line Tenant Assignments
- Program 74** System NT Lock Password Assignment
- Program 77-3** Tenant Night Ring Over External Page Assignments

Program 38 Overview

Four telephone button arrangements are provided (see the Program 38 System Record Sheet). It is best to start with one of these four, and then move on to Program 39, where individual buttons may be programmed. Initialized data treats all digital telephone ports as 20-button types with 17 CO **Line** buttons, one [PDN] button, one **Do Not Disturb** button, and the **Speed Dial** button. See the System Record Sheet for electronic telephone arrangements.

Important!

- Always complete Program 38 before proceeding to Program 39.
- DKAdmin will program a Pause on buttons 11~20 on 10-key telephones.

Assignments for 2000-Series Digital Telephone Keystrips

Speed Dial ¹
Do Not Disturb
Line 7
Line 6
Line 5
Line 4
Line 3
Line 2
Line 1
[PDN]

Code 21 – 10-Button

Line 9	Speed Dial ¹
Line 8	Do Not Disturb
Line 7	SD 14
Line 6	SD 13
Line 5	SD 12
Line 4	SD 11
Line 3	SD 10
Line 2	Line 12
Line 1	Line 11
[PDN]	Line 10

DK424 and DK40i
Code 32 – 20-Button (B)

SD10	Flash
Line 8	Do Not Disturb
Line 7	Speed Dial
Line 6	Redial
Line 5	Speed Dial Pause
Line 4	SD 15
Line 3	SD 14
Line 2	SD 13
Line 1	SD 12
[PDN]	SD 11

DK424
Code 33 – 20-Button (C)
(Keystrip not provided, but can be assigned)

All Call Voice Page (for DK40i only) ...or Line 9	Speed Dial ¹
Line 8	Do Not Disturb
Line 7	Line 17 ²
Line 6	Line 16
Line 5	Line 15
Line 4	Line 14
Line 3	Line 13
Line 2	Line 12
Line 1	Line 11
[PDN]	Line 10

Code 31 (Default) – 20-Button (A)

SD14	Speed Dial ¹
SD13	Do Not Disturb
SD12	SD 22
SD11	SD 21
SD10	SD 20
Line 4	SD 19
Line 3	SD 18
Line 2	SD 17
Line 1	SD 16
[PDN]	SD 15

DK14
Code 32 – 20-Button (B)

Line 9	Flash
Line 8	Do Not Disturb
Line 7	Speed Dial
Line 6	Redial
Line 5	Speed Dial Pause
Line 4	Line 12
Line 3	Line 11
Line 2	Line 10
Line 1	
[PDN]	

DK40i
Code 33 – 20-Button (C)

Assignments for 1000-Series Digital Telephone Keystrips

CO15	CO16	CO17	DND	SDS
CO10	CO11	CO12	CO13	CO14
CO5	CO6	CO7	CO8	CO9
[PDN]	CO1	CO2	CO3	CO4

Code 31 (Default) – 20-Button (A)

SD12	SD13	SD14	DND	SDS
CO10	CO11	CO12	SD10	SD11
CO5	CO6	CO7	CO8	CO9
[PDN]	CO1	CO2	CO3	CO4

Code 32 – 20-Button (B)

PAU	RDL	SDS	DND	FLASH
SD11	SD12	SD13	SD14	SD15
CO5	CO6	CO7	CO8	CO9
[PDN]	CO1	CO2	CO3	CO4

Code 33 – 20-Button (C)

Assignments for Electronic Telephone Keystrips

MW/FL ¹
Do Not Disturb
CO7
CO6
CO5
CO4
CO3
CO2
CO1
[PDN]

Code 21 – 10-Button

CO9	MW/FL ¹
CO8	Do Not Disturb
CO7	CO17 ²
CO6	CO16
CO5	CO15
CO4	CO14
CO3	CO13
CO2	CO12
CO1	CO11
[PDN]	CO10

Code 31 (Default) – 20-Button (A)

CO9	MW/FL ¹
CO8	Do Not Disturb
CO7	SD14
CO6	SD13
CO5	SD12
CO4	SD11
CO3	SD10
CO2	CO12
CO1	CO11
[PDN]	CO10

Code 32 – 20-Button (B)

SD10	MW/FL ¹
CO8	Do Not Disturb
CO7	SDS
CO6	RDL
CO5	PAU
CO4	SD15
CO3	SD14
CO2	SD13
CO1	SD12
[PDN]	SD11

Code 33 – 20-Button (C)

1. The **Speed Dial** button is the same as the **SDS** or **REP** buttons in previous Strata systems (Program 39, Code 97). Also, if changing PEKU PCBs (electronic telephone) to PDKU PCBs (digital telephone), or vice versa, always check that the **Speed Dial** or **MW/FL** button is set appropriately in Program 39.
2. This button is initialized as **SD10** with RCTUA since there are only 16 CO lines.

System & Station

Program 38 – Digital and Electronic Telephone Keystrip Type

10	30, 50, 70 90, 110, 130, 150, 170, 190	9	20	40, 60, 80 100, 120, 140, 160, 180, 200	9
09	29, 49, 69 89, 109, 129, 149, 169, 189	8	19	39, 59, 79 99, 119, 139, 159, 179, 199	8
08	28, 48, 68 88, 108, 128, 148, 168, 188	7	18	38, 58, 78 98, 118, 138, 158, 178, 198	7
07	27, 47, 67 87, 107, 127, 147, 167, 187	6	17	37, 57, 77 97, 117, 137, 157, 177, 197	6
06	26, 46, 66 86, 106, 126, 146, 166, 186	5	16	36, 56, 76 96, 116, 136, 156, 176, 196	5
05	25, 45, 65 85, 105, 125, 145, 165, 185	4	15	35, 55, 75 95, 115, 135, 155, 175, 195	4
04	24, 44, 64 84, 104, 124, 144, 164, 184	3	14	34, 54, 74 94, 114, 134, 154, 174, 194	3
03	23, 43, 63 83, 103, 123, 143, 163, 183	2	13	33, 53, 73 93, 113, 133, 153, 173, 193	2
02	22, 42, 62 82, 102, 122, 142, 162, 182	1	12	32, 52, 72 92, 112, 132, 152, 172, 192	1
01	21, 41, 61 81, 101, 121, 141, 161, 181	0	11	31, 51, 71 91, 111, 131, 151, 171, 191	0

16, 36, 56, 76 96, 116, 136, 156, 176, 196	17, 37, 57, 77 97, 117, 137, 157, 177, 197	18, 38, 58, 78 98, 118, 138, 158, 178, 198	19, 39, 59, 79 99, 119, 139, 159, 179, 199	20, 40, 60, 80 100, 120, 140, 160, 180, 200
11, 31, 51, 71 91, 111, 131, 151, 171, 191	12, 32, 52, 72 92, 112, 132, 152, 172, 192	13, 33, 53, 73 93, 113, 133, 153, 173, 193	14, 34, 54, 74 94, 114, 134, 154, 174, 194	15, 35, 55, 75 95, 115, 135, 155, 175, 195
06, 26, 46, 66 86, 106, 126, 146, 166, 186	07, 27, 47, 67 87, 107, 127, 147, 167, 187	08, 28, 48, 68 88, 108, 128, 148, 168, 188	09, 29, 49, 69 89, 109, 129, 149, 169, 189	10, 30, 50, 70 90, 110, 130, 150, 170, 190
01, 21, 41, 61 81, 101, 121, 141, 161, 181	02, 22, 42, 62 82, 102, 122, 142, 162, 182	03, 23, 43, 63 83, 103, 123, 143, 163, 183	04, 24, 44, 64 84, 104, 124, 144, 164, 184	05, 25, 45, 65 85, 105, 125, 145, 165, 185



1843

1000-series digital telephone strip - shows programming button/LED assignment locations. Shown as reference only - not available as an individual strip.

LED Buttons and CO line numbers (01~20)

Last digit of EK port number for programs with a format like *71, *72, and *73

CO line numbers (21~200)

2000-series digital telephone strip - supplied with each *Strata DK Programming Manual* and each Documentation Package that ships with the system. Can also be used with 6000- and 6500-series electronic telephones.

Note Button numbers 01~200 on electronic telephones (6000, 6500 series, etc.) are in the same position as shown on the 2000-series digital telephone programming keystrip.

Program *38 Overview

Standard telephones can be assigned to ring a destination automatically by going off-hook (ring down). They can also be programmed to ring a destination if an incomplete valid number is dialed. This program assigns the ring down destination. The timer in Program 12-1 determines when the destination should ring after the standard telephone goes off hook or if an incomplete valid number is dialed.

If a standard telephone is assigned a ring down destination, ring down will always occur after the ring down timer expires unless a valid feature access code or [DN] is dialed prior to the ring down timer expiration (Program 12-1). Ring down applies only to standard telephone ports, not electronic or digital telephone ports.

Program 39 – Flexible Button Assignments

Processor Type: DK14, DK40i, All RCTUs

Program Type: Station

Initialized Default: See Program 38

* # * # 1 * 2 * 3 - Spkr 3 9 Hold - Spkr [] [] # [] [] [] Hold - Spkr # # Hold - Spkr # # Hold

SELECT = Port Number

Enter the port number(s) to which class of service must be assigned.
To add a port range, enter XXX*XXX (low port * high port).

Code

Press LED Button to be defined.

Port No. _____	10 <input type="checkbox"/>	LCD <input type="checkbox"/>	
	20 <input type="checkbox"/>	DIU <input type="checkbox"/>	
Location:			
Button	Code	Button	Code
10		20	
09		19	
08		18	
07		17	
06		16	
05		15	
04		14	
03		13	
02		12	
01		11	

Port No. _____	10 <input type="checkbox"/>	LCD <input type="checkbox"/>	
	20 <input type="checkbox"/>	DIU <input type="checkbox"/>	
Location:			
Button	Code	Button	Code
10		20	
09		19	
08		18	
07		17	
06		16	
05		15	
04		14	
03		13	
02		12	
01		11	

Port No. _____	10 <input type="checkbox"/>	LCD <input type="checkbox"/>	
	20 <input type="checkbox"/>	DIU <input type="checkbox"/>	
Location:			
Button	Code	Button	Code
10		20	
09		19	
08		18	
07		17	
06		16	
05		15	
04		14	
03		13	
02		12	
01		11	

Port No. _____	10 <input type="checkbox"/>	LCD <input type="checkbox"/>	
	20 <input type="checkbox"/>	DIU <input type="checkbox"/>	
Location:			
Button	Code	Button	Code
10		20	
09		19	
08		18	
07		17	
06		16	
05		15	
04		14	
03		13	
02		12	
01		11	

Port No. _____	10 <input type="checkbox"/>	LCD <input type="checkbox"/>	
	20 <input type="checkbox"/>	DIU <input type="checkbox"/>	
Location:			
Button	Code	Button	Code
10		20	
09		19	
08		18	
07		17	
06		16	
05		15	
04		14	
03		13	
02		12	
01		11	

Port No. _____	10 <input type="checkbox"/>	LCD <input type="checkbox"/>	
	20 <input type="checkbox"/>	DIU <input type="checkbox"/>	
Location:			
Button	Code	Button	Code
10		20	
09		19	
08		18	
07		17	
06		16	
05		15	
04		14	
03		13	
02		12	
01		11	

Port No. _____	10 <input type="checkbox"/>	LCD <input type="checkbox"/>	
	20 <input type="checkbox"/>	DIU <input type="checkbox"/>	
Location:			
Button	Code	Button	Code
10		20	
09		19	
08		18	
07		17	
06		16	
05		15	
04		14	
03		13	
02		12	
01		11	

Port No. _____	10 <input type="checkbox"/>	LCD <input type="checkbox"/>	
	20 <input type="checkbox"/>	DIU <input type="checkbox"/>	
Location:			
Button	Code	Button	Code
10		20	
09		19	
08		18	
07		17	
06		16	
05		15	
04		14	
03		13	
02		12	
01		11	

Port No. _____	10 <input type="checkbox"/>	LCD <input type="checkbox"/>	
	20 <input type="checkbox"/>	DIU <input type="checkbox"/>	
Location:			
Button	Code	Button	Code
10		20	
09		19	
08		18	
07		17	
06		16	
05		15	
04		14	
03		13	
02		12	
01		11	

Port No. _____	10 <input type="checkbox"/>	LCD <input type="checkbox"/>	
	20 <input type="checkbox"/>	DIU <input type="checkbox"/>	
Location:			
Button	Code	Button	Code
10		20	
09		19	
08		18	
07		17	
06		16	
05		15	
04		14	
03		13	
02		12	
01		11	

Port No. _____	10 <input type="checkbox"/>	LCD <input type="checkbox"/>	
	20 <input type="checkbox"/>	DIU <input type="checkbox"/>	
Location:			
Button	Code	Button	Code
10		20	
09		19	
08		18	
07		17	
06		16	
05		15	
04		14	
03		13	
02		12	
01		11	

Port No. _____	10 <input type="checkbox"/>	LCD <input type="checkbox"/>	
	20 <input type="checkbox"/>	DIU <input type="checkbox"/>	
Location:			
Button	Code	Button	Code
10		20	
09		19	
08		18	
07		17	
06		16	
05		15	
04		14	
03		13	
02		12	
01		11	

System & Station

Program 39 Overview

Program 39 assigns features to the flexible buttons for individual telephones in the system. Several types of buttons can be assigned with this program, including:

- ◆ Feature
- ◆ [PDNs], [SDNs] and [PhDNs] – Message Waiting buttons can be assigned to [PhDNs]
- ◆ Alert Signal (Buzz key)

Feature Buttons Assignments

You can assign commonly used telephone features to any flexible button (see Table 3-1). Button assignments can be different for individual telephones. Telephone users can also assign flexible buttons if their COS and/or if programming permits the feature on their telephone.

Strata AirLink handsets interfaced to the Strata DK using the RWIU/WWIS PCB have only six flexible buttons (4~9) available for programming.

Important!

- *DKAdmin programs a Pause on buttons 11~20 on 10-key telephones.*
- *The **Line** button on the DKT2001 is flexible button 01. Only program a [PDN] onto this button. Do not program CO lines or secondary line appearances onto button 01 or in any other position. Since the system assigns CO lines 01~17 by default, be sure to remove any CO line appearances by programming them as Station Speed Dial buttons (code *).*

Note If the **Speed Dial Select** button is removed, the * key becomes the **Speed Dial Select** button. While on an outside call, the user must press * then # to activate the * and # DTMF tones for the duration of the call.

► To assign features to flexible buttons

1. Complete Program 38 before Program 39. Initialized data assigns the keystrip pattern associated with Code 31 from Program 38.
2. Use “Program 39 – Flexible Button Assignments” on Page 3-111 to indicate feature buttons. Use the programming sequence after this table to perform the following steps.
3. Program the port number or enter a range of port numbers.
4. Press the button that will be associated with the feature.
5. Enter the feature code.
6. Repeat this procedure until all feature buttons have been assigned.

Table 3-1 Feature Button Codes for Digital, Electronic, and Strata AirLink Wireless Telephones

Button Function	Button Labels	Code	Notes
Account Code	Account Code or ACCNT	450	Allows a Voluntary Account Code entry.
Alarm ¹	Alarm Reset or ALRM	477	Resets alarm condition system-wide.
Alert Signaling (see following pages) ¹			
All Call Voice Page	All Call Page or AC	489	Pages up to 120 idle electronic or digital telephones over speaker.
Automatic Busy Redial	Auto Busy Redial or ABR	470	Sets ABR of busy outgoing number.
Automatic Callback Busy	Auto Callback or ACB	494	Sets ACB for station recalled by busy line.
Background Music ¹	Tel Set Music or BGM	478	Turns BGM ON or OFF through station speaker.
Call Forward All Calls	Call Frwd All Calls or CFAC	487	All calls forward to selected station.

Table 3-1 Feature Button Codes for Digital, Electronic, and Strata AirLink Wireless Telephones (continued)

Button Function	Button Labels	Code	Notes
Call Forward A.C. Fixed	Call Frwd to: or CFF	486	Forwards all calls to pre-defined destination. See Program 36.
Call Forward Busy	Call Frwd Busy or CFB	459	Forwards calls to selected station if station is busy.
Call Forward Busy/No Answer	Call Frwd Busy/NANs or CFB/NA	457	Forwards calls to selected station if station is busy or does not answer.
Call Forward External	Call Frwd External or CF-EXT	460	Forward calls externally.
Call Forward No Answer	Call Frwd No Answer or CFNA	458	Forwards calls to selected station if station does not answer.
Call Park ²	Park in Orbit or PARK (R3)	464	Call Park Only.
Call Park LCD Display ¹	Park Orbit Display or CPD (R3)	465	CP Display Button and Mode 64 can be used interchangeably. Displays call parked via telephone LCD.
Call Park and Page	Call Park/Page or CP/PG (R3)	463	Parking and Paging Park Pickup.
Call Pickup (Directed)	Directed Pickup or PKUP	484	Picks up ringing or held intercom, trunk calls, and page.
Call Pickup Tenant 4 ³	PKUP 4	435	Picks up tenant's ringing CO calls. See Program *15 for Tenant Group assignments.
Call Pickup Tenant 3 ³	PKUP 3	436	
Call Pickup Tenant 2 ³	PKUP 2	437	
Call Pickup Tenant 1 ³	PKUP 1	438	
Call Pickup (Group) ²	Group Pickup	480	
Unanswered Caller ID and/or ANI Stored Number Auto Dial ¹	Lost Call Auto Dial (R3) or LCAD	462	Will Auto Dial a Caller ID and/or Automatic Number Identification (ANI) telephone number that was stored in station Caller ID/ANI memory.
CO Line Appearance	Line 1~200 or CO 001~CO 200	001~200	CO line access of appearing calls.
Data ¹	Data Call or DATA	456	Used to place data call.
Data Release ¹	Data Release or DRLS	454	Releases data call.
Direct Station Selection	DSS	#000~#239	Assigns DSS hotline keys to port number.
Directory Numbers (see following pages)			
Do Not Disturb ⁴	Do Not Disturb or DND	498	Prevents calls to station.
Door Lock 0 ~4 (DDCB/HDCB) ¹	Unlock Door 0 or DRLK 0 Unlock Door 1 or DRLK 1 Unlock Door 2 or DRLK 2 Unlock Door 3 or DRLK 3 Unlock Door 4 or DRLK 4	471 472 473 474 475	Momentarily unlocks door (3 or 6 seconds). See Program 77-1 and 77-2.
Handset Off-Hook Call Announce ¹	HS-OCA	468	Activates 2-way voice path to Off-Hook Call Announce caller. (R3)
ISDN Sub-address	Sub-address	467	Separates the called party's ISDN sub-address from the called party number. The # digit performs this function on standard telephones.
ISDN Start	Start	469	Initiates DK to send dialed digits to the ISDN network when this button is pressed from a digital or electronic telephone. Program *63-2 invokes the same function when the Dial Timer expires. Also see Tone Button in this table.
LCD Message Select	LCD Msg Select or LCD M	481	Begins LCD message selection.
Message Waiting and Flash	Msg Wait, Flash or MW/FL	499	Provides message waiting LED for EKT and Flash Button.
Microphone Cutoff ⁵	Microphn Cut-off or MCO	488	Sets microphone ON/OFF for incoming handsfree Directory Number [DN] calls.
Modem ¹	Modem or MODEM	455	Used to reserve modem in modem pool.
Night Transfer Tenant 1 ³	Night Transfer1 or NT1	439	Sets Tenant CO line DAY/NIGHT ring mode.
Night Transfer Tenant 2 ³	Night Transfer2 or NT2	440	
Night Transfer Tenant 3 ³	Night Transfer3 or NT3	441	
Night Transfer Tenant 4 ³	Night Transfer4 or NT4	442	
Night Transfer Lock Tenant 1	Night Lock1 or NT1 L1	431	
Night Transfer Lock Tenant 2	Night Lock2 or NT2 L2	432	Available with RCTUA3, RCTUBA3/RCTUBB3 or RCTUC/D3 Release 3 or above only. Used to lock system ringing mode: DAY, DAY2, NIGHT See Programs 74 and *36 for NT Lock Password assignments.
Night Transfer Lock Tenant 3	Night Lock3 or NT3 L3	433	
Night Transfer Lock Tenant 4	Night Lock4 or NT4 L4	434	
Pause ¹	Spd Dial Pause or PAU	495	
Pause (Long) ¹	Spd Dial Lng Pause or PAU/L	493	Sets a 10-second pause in Speed Dial.
Pooled Line	Pooled Line Grp or PL	301~316	Multiple CO line may appear under one button.
Privacy	Privacy On Line or PRIV	453	Prevents Privacy Override (not Executive Override).
Privacy Release	Privacy Release or PRV RLS	479	Changes station Privacy mode to Non-private for CO lines.

Table 3-1 Feature Button Codes for Digital, Electronic, and Strata AirLink Wireless Telephones *(continued)*

Button Function	Button Labels	Code	Notes
Redial Last Number (# Button)	Redial or RDL	496	Redials the last number.
Release to Idle	Release Call or RLS	476	Releases current call and makes station idle.
Release and Answer	Release and Ans or RLS/ANS	466	Simulates On-hook/Off-hook operation to release an existing call and answer new incoming/ringing call.
Save Last Dialed Number	Save Last Number on SAVE	485	Saves last number dialed for future speed dial.
Speed Dial Select (* Button) ⁶	Speed Dial or SDS	497	Begins speed dial selection.
Station Speed Dial Codes ⁶	SD (All DK systems)		Reserves button for station speed dial. Station Speed Dial code ranges vary per processor:
		* 10~ * 49	DK14, DK40i, RCTUA
		* 10~ * 49	RCTUBA/BB, RCTUC/D
		* 100~ * 139	RCTUE/F
System Speed Dial Codes ⁶	SD		Speed dial number set by station port 000. System Speed Dial code ranges vary per processor:
		* 60~ * 99	DK14, DK40i, RCTUA
		* 600~ * 699	RCTUBA/BB, RCTUC/D
		* 200~ * 999	RCTUE/F
Tone ¹	Tone Dial Select or TONE	490	CO dial signals set to tone or pulse.

1. Unavailable to Strata AirLink handsets (RWIU/WWIS interface).
2. Picks up calls to telephones in any call pickup group to which the telephone is assigned in Program *31.
3. See Program *15 for Tenant Group assignments.
4. The Strata AirLink handset (RWIU/WWIS interface) displays DND, but no warning tone is enabled for Executive or Busy Override.
5. The Strata AirLink handset (RWIU/WWIS interface) has mute only.
6. Both wireless system handsets (RWIU and Base Station Interface Adapter) only have an internal memory Speed Dial capability.

Notes

- The Strata AirLink “call” button is set using Program 39, key 01. It must be set as the PDN of the handset.
- Strata AirLink handset buttons 1~6 when used with the FCN button are set using Program 39, keys 02~07 respectively.

Directory Number Button Assignments

* * * 1 * 2 * 3 - Spkr 3 9 Hold - Spkr X X X # ■ ## Y Y Y Hold - Spkr # # Hold - Spkr # # Hold

Enter the logical port number of the telephone that will be assigned a [DN] button.

Press the telephone button to which the [DN] button should be assigned.

...or

Z Z Z

YYY = the Program 04 Port Number (000–336) of the [DN] that should be assigned. If YYY=XXX, then the [DN] is the [PDN]; if YYY does not = XXX, then the [DN] is an [SDN].

ZZZ = the Program *04 Port Number (500–835) of the [PhDN] that should be assigned.

Directory Numbers are assigned to the flexible button positions on telephones.

- ♦ Primary Directory Number Buttons [PDNs] are similar to Intercom numbers.
- ♦ Secondary Directory Numbers [SDNs] are [PDNs] which appear on another telephone.
- ♦ Phantom Directory Numbers [PhDNs] are generally used as numbers that may appear on a group of telephones, such as an extension number which rings all phones in a department.
- ♦ There are a number of considerations for assigning Directory Numbers. Toshiba suggests reading the following steps and Directory Number Considerations before assigning [DNs].

► To assign directory numbers to flexible buttons

1. Refer to the next page to determine how many and what type of Directory Numbers to assign per telephone. You can use the Flexible Button Assignments forms to indicate where [DNs] will be placed (see “Program 39 Flexible Button Assignments” on Page 3-113).
2. Assign [PDNs] and [SDNs] by entering the Program 04 port number assignment sequence shown below. Refer to Program 04 for Station Logical Port Numbers.

##YYY, where YYY is the port number of the DN.

If a telephone has multiple [PDN] buttons, put the lowest number [NNNN-1] on the top, the next lowest number [NNNN-2] below that, etc. This is the order in which they will ring (from the top down). See the Directory Number Programming Example.

3. Assign [PhDNs] by entering the Program *04 port number assignment sequence shown below. Refer to Program *04 for Station Logical Port Numbers. Also refer to Program *33 to determine which Station Logical Port Number is the owner of the [PhDN].


##ZZZ, where ZZZ is the Program *04 port number of the [PhDN].

System & Station

Program 39 – Flexible Button Assignments

Button Type	Button Labels	Code	Notes
Primary Directory Numbers [PDNs] 4-Maximum of same [PDN] per telephone	[PDN] NNNN - 1, Highest button [PDN] NNNN - 2, next highest [PDN] NNNN - 3, next highest [PDN] NNNN - 4, Lowest button	##YYY ##YYY ##YYY ##YYY	YYY = the Program 04 station logical port number of the [DN] that should appear as a [PDN]. YYY should be the same port number as the port number (XXX) of the telephone to which the [PDN] is assigned. NNNN is the actual [DN] assignment for Port YYY in Program 04.
Secondary Directory Numbers [SDNs] 16 total [PDNs] + [SDNs]; 4-Maximum of same [SDN] per telephone	[SDN] NNNN - 1, Highest button [SDN] NNNN - 2, next highest [SDN] NNNN - 3, next highest [SDN] NNNN - 4, Lowest button	##YYY ##YYY ##YYY ##YYY	YYY = the Program 04 station logical port number of the [DN] that should appear as a [SDN]. YYY should not be the same port number as the port number (XXX) of the telephone on which the [SDN] is assigned. NNNN is the actual DN assignment for Port YYY in Program 04.
Phantom Directory Numbers [PhDNs] 8-Maximum unique [PhDNs] 1-Maximum of same [PhDN] per telephone	[PhDN] NNNN	##ZZZ	ZZZ = the Program *04 Port ref. number of the [PhDN]. NNNN is the actual [DN] assignment for Port ZZZ in Program *04. Each [PhDN] must have an owner telephone assigned in Program *33. If an owner is not assigned, the [PhDN] can originate but cannot receive calls.
Phantom Directory Number Message Waiting button [PhDN] 4- maximum [PhDN/MW] per telephone	[PhDN/MW] - 1 Lowest [PhDN] [PhDN/MW] - 2 Next Highest [PhDN/MW] - 3 Next Highest [PhDN/MW] - 4 Highest [PhDN]	423 424 425 426	Message Waiting Key for [PhDNs] assigned to telephone. Telephone must be assigned as [PhDN] owner in Program *33 to allow it to be equipped with a [PhDN/MW] button.

Directory Number Programming Example

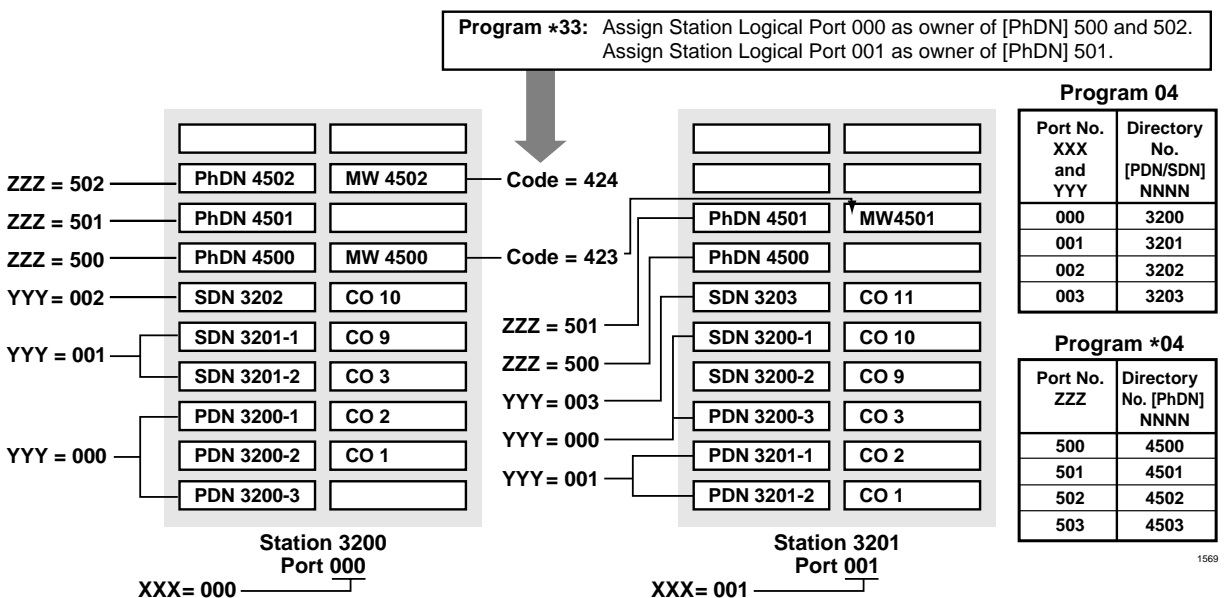

1569

- ♦ The total number of [DNs] allowed on a telephone ([PDN], [SDNs], and [PhDNs]) is limited to the number of buttons on the telephone (i.e., a 20-button telephone can have 20 [DN] buttons).
- ♦ The number of [SDN] buttons programmed on a telephone for a given Primary Directory Number must always be the same as the number of [PDN] buttons that exist on the [PDN] owner telephone.

Example: If [PDN] 200 appears on 3 buttons on station 200, and [SDN] 200 should appear on station 201, then [SDN] 200 must appear on 3-buttons on station 201. Never put more (or less) [SDN] buttons of the same Directory Number on a telephone than [PDN] buttons that appear on the [PDN] owner telephone. If this guideline is not followed, calls to the [PDN] telephone will be missed on the [SDN] telephone.

- ♦ The maximum number of [DNs] per system is listed below:

Processor	Maximum [PDNs] per System	Maximum [PhDNs] per System	Total Number of Unique [DNs] per system [PDNs] + [PhDNs]
DK14	10	10	20
DK40i	27	27	54
RCTUA	32	32	64
RCTUBA/BB	80	80	160
RCTUC/D	240	240	480
RCTUE/F	336	336	672

- ♦ [PhDN] can appear on all Toshiba telephones in the system, but a [PhDN] is limited to ring on 120 telephones maximum.
- ♦ Phantom [DN] owner telephones have the following attributes:
 - ♦ Set Call Forward for [PhDNs]
 - ♦ Set Call Forward Mail Box destinations (VM ID codes) for [PhDNs]
 - ♦ Receive Message Waiting indication for up to four Phantom Directory Numbers on individual [PhDN/MW] button LEDs
 - ♦ When off-hook, the [PhDN] telephone owner will receive OCA calls directed to a busy the [PhDN].
 - ♦ [PDN] and/or [PhDN] Call Forward/Message retrieval can only be set/received from the [PDN] and/or [PhDN] owner telephone.

Alert Signal Button Assignments

* # * # 1 * 2 * 3 - Spkr 3 9 Hold - Spkr # Hold - Spkr # # Hold - Spkr # # Hold

Enter the logical port number of the telephone that will be assigned an **Alert Signal** button.

YYY = the Program 39 code for the **Alert Signal** button that should be installed.

Press the telephone button to which **Alert Signal** should be assigned.

Station Number: _____

Alert Signal Button		Button Number (01~20)	Speed Dial Number	Alert Signal Button Partner Station Number
No.	Code			
1	427			
2	428			
3	429			
4	430			

Station Number: _____


Alert Signal Button		Button Number (01~20)	Speed Dial Number	Alert Signal Button Partner Station Number
No.	Code			
1	427			
2	428			
3	429			
4	430			

The Alert Signal is four short bursts of tone, sent two times/three seconds apart from one partner station when the other partner station when one of the partners presses the **Alert Signal** button on their telephone. An Alert Signal can be sent to stations that are idle or busy, or in Call Forward or Do Not Disturb mode. No talk path will exist before or after the Alert Signal is activated.

Important!

- Both partner stations must have the same Alert Signal button number programmed in Program 39 and the appropriate Speed Dial Number programmed to allow the Alert Signal buttons to operate.
- Strata AirLink does not support this feature.

Alert Signal Button Programming Example

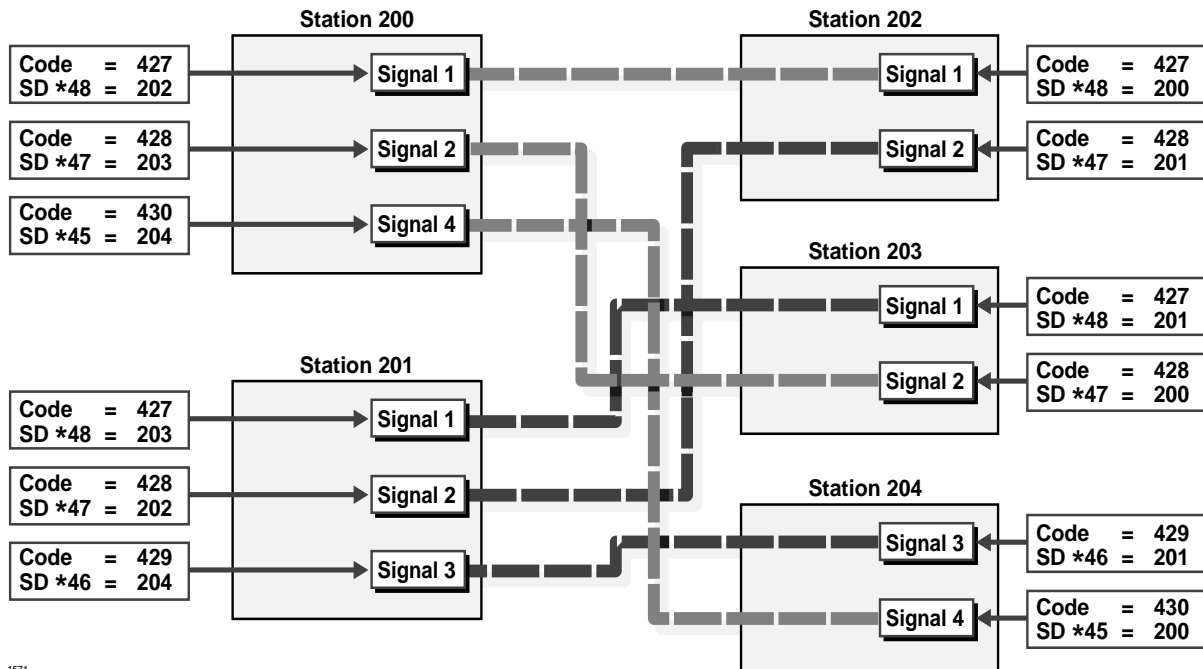

1571

Program *40 Overview

This program assigns the members (station primary [DN] port numbers and hunting orders [01~32] of Distributed Hunt (DH) groups [900~915]). When a member of a DH group is added or deleted, all the other members' hunting orders are automatically shifted to a new sequential order.

If Ground/Loop start CO lines ring DH Group member telephones, use Program 81~89 to assign the selected CO lines to ring the DH group (900~915); do not use *81, *84, and *87 to assign [PDNs] or [PhDNs] to flash and ring on the DH Group member telephones. Instead, put the CO lines in a pooled line group and put the appropriate **Pooled Line Grp** buttons on the DH member telephones. Do not assign DH Group member telephones to ring in Program 81~89.

To assign ANI/DNIS/DID/Tie and Internal calls to ring DH groups, use Program *04, *09, *71~*73, or 71 (1~3) as required and do not put DID or Tie line pooled or direct line buttons on DH member telephones. These calls ring the DH member telephone [PDN].

Each port assigned to a Program 31 Voice Mail Group should also be assigned to a dedicated Distributed Hunt Group. (See Program 31 record sheet overview for Voice Mail/Distributed Hunt program example.)

Program *41 for DK424 – T1 Assignment Series (Part 1)

Processor Type: RCTUBA/BB, RCTUC/D and RCTUE/F

Program Type: System

Initialized Default: See each program


Series Overview

Use Program *41 (Part 1) and *42 (Part 2) series to set T1 parameters and assignments on the DK424. See the Strata DK Configuration and T1 sections for additional T1 information. RCTU support is as follows:

Processor	Number of RDTU's Supported
RCTUBA/BB	2
RCTUC/D	6
RCTUE/F	8

Program *41-1 – T1 Span (RDTU) Frame and Line Code Assignments

Initialized Default: LED 01 and LED 02 OFF for all T1 span lines



T1 Span	Extended Superframe LED 01 ON	Superframe LED 01 OFF	B8ZS LED 02 ON	AMI Code LED 02 OFF
1 RDTU				
2 RDTU				
3 RDTU				
4 RDTU				
5 RDTU				
6 RDTU				
7 RDTU				
8 RDTU				


Program *41-1 Overview

T1 Span Framing Assignments: Each RDTU PCB can be individually assigned for Superframe (LED 01 OFF) or Extended Superframe (LED 01 ON).

T1 Span Line Code Assignments: Each RDTU PCB can be individually assigned for B8ZS (LED 02 ON) or AMI coding (LED 02 OFF).

Program *41-2 – T1 Channel Assignments

Initialized Default: 1 = Loop Start



SELECT = 2

Enter the RDTU being programmed (1-8).

Enter the RDTU channel number (01-24) to be assigned a line type.

To add a port range, enter XXX*XXX (low port * high port).

Enter the line type to be assigned to the RDTU channel:

- 1 = Loop Start (initialized)
- 2 = Ground Start
- 3 = Tie (immediate)
- 4 = Tie (Wink)
- 5 = DID (immediate)
- 6 = DID (Wink)

See Programs 17 and 71 for other Tie/DID assignments;

See Program *17 and Program *09 for other DID assignments.

Processor	Line Range
RCTUBA/BB	001-048
RCTUC/D	001-144
RCTUE/F	001-200

RDTU: _____ Slot: _____

RDTU Channel No.	Line Type
1	
2	
3	
4	
5	
6	
7	
8	
9	
10	
11	
12	
13	
14	
15	
16	
17	
18	
19	
20	
21	
22	
23	
24	

RDTU: _____ Slot: _____

RDTU Channel No.	Line Type
1	
2	
3	
4	
5	
6	
7	
8	
9	
10	
11	
12	
13	
14	
15	
16	
17	
18	
19	
20	
21	
22	
23	
24	

RDTU: _____ Slot: _____

RDTU Channel No.	Line Type
1	
2	
3	
4	
5	
6	
7	
8	
9	
10	
11	
12	
13	
14	
15	
16	
17	
18	
19	
20	
21	
22	
23	
24	

Important! See Program 17 for other Tie/DID assignments; see Program *17 and Program *09 for other DID assignments.

System & Station

Notes

- You must cycle system power or run Program 91-2 to transfer Program *41-2 data from temporary memory to working memory. Turn system power OFF (five seconds) and ON after running Program *41-2.
- Always install RDTU PCBs that have Tie or DID channels in slot numbers that are higher than station and Attendant Console PCB slot numbers whenever possible. Each Tie or DID line installed uses a station port in software (see the Configuration worksheets for Tie/DID configuration in the *Strata DK Installation and Maintenance Manual*).


Program *41-2 Overview

RDTUs provide 8, 16, or 24 channels as set in Program 03. Each channel can operate independently as CO lines (ground start or loop start), Tie lines (Wink or Immediate Start), or DID lines (Wink or Immediate Start). Assign the number of channels for each RDTU with Program 03.

Important! *Program 91-2 must be run or System Power must be momentarily turned OFF (five seconds) then ON for Program *41-2 to take effect.*

Program *41-3 – T1 Span Transmit Level Pad Assignments

Initialized Default: 5 (-6dB)



SELECT = 3 ————
 Enter the RDTU being programmed (1-8). ————

Enter one of the following pad codes for the transmission of path:

- 1 = +6 dB pad
- 2 = +3 dB pad
- 3 = 0 dB pad
- 4 = -3 dB pad
- 5 = -6 dB pad (Initialized: PAD_S = 5)
- 6 = -9 dB pad
- 7 = -12 dB pad
- 8 = -15 dB pad

RDTU No.	1	2	3	4	5	6	7	8
PAD Code								

Program *41-3 Overview

The transmission path of each RDTU can be set for one of several pad settings:

Code	Decibel Level
Enter 1	+6 decibel (dB) padding
Enter 2	+3 dB
Enter 3	0 dB
Enter 4	-3 dB

Code	Decibel Level
Enter 5	-6 dB (initialized setting)
Enter 6	-9 dB
Enter 7	-12 dB
Enter 8	-15 dB

Program *41-4 – T1 Span Receive Level Pad Assignments

Initialized Default: 4 (-3dB)

* # * # 1 * 2 * 3 - Spkr * 4 1 Hold - Spkr 4 [] [] Hold - Spkr # # Hold - Spkr # # Hold

SELECT = 4
Enter the RDTU being programmed (1-8).

Enter one of the following pad codes for the transmission of path:

- 1 = +6 dB pad
- 2 = +3 dB pad
- 3 = 0 dB pad
- 4 = -3 dB pad
- 5 = -6 dB pad (Initialized: PAD_R = 4)
- 6 = -9 dB pad
- 7 = -12 dB pad
- 8 = -15 dB pad

RDTU No.	1	2	3	4	5	6	7	8
PAD Code								

Note See “Program *41-3 Overview” on Page 3-124 above for decibel levels.

Program *42 for DK424 – T1 Assignment Series (Part 2)

See “Program *42 – Clock Source” on Page 7-8.

Program *50 Overview

In DK40i and DK424, each analog ground/loop start CO line that receives Caller ID information from the local Central Office must be assigned to an RCIU or RCIS circuit using this program.

In DK14, each CO line that receives Caller ID must be assigned an MLX-41 interface box circuit number. For information regarding the MLX-41, see Chapter 1 - DK14 Installation in the *Strata DK Installation and Maintenance Manual*. This is necessary to allow Caller ID information to be recognized by the DK system processor. Any RCIU, RCIS or MLX-41 circuit can be assigned to any analog ground/loop start CO line circuit.

Each RCIU slot will be allocated eight Caller ID circuits when assigned with Code 81 in Program 03; because of this, you should always install RCIS on RCIU when more than four circuits are required. TCIU2 allocates four Caller ID circuits to TCOU.

Program *51 Overview

Use this program to allocate “Abandon-Call-Memory” when any LCD telephone must store abandon call information for Caller ID, Ground/Loop start line and/or ANI, DID/Tie lines.

On direct incoming calls that ring on more than one telephone, the Caller ID, Ground/Loop start, line must also be assigned to the designated abandon call storage LCD telephone in Program *52. If a CO line only direct-rings one telephone, that telephone will store the abandoned call information automatically without being assigned in Program *52; however, Program *51 is still required.

The IDL memory allocation displays on the program telephone’s LCD, indicating the total number of telephone numbers that can be stored at the designated port(s). These numbers are reduced accordingly each time memory is allocated to a station.

On direct incoming calls, the ANI abandon call information is stored in the “Abandon-Call-Memory” of the [PDN] owner or [PhDN] owner LCD telephone - depending on which [DN] rings when the call is received. Do not assign ANI/DNIS lines in Program *52.

Abandoned “Call-forwarded” calls will store Caller ID and/or ANI information in the “Abandon-Call-Memory” of the “first-call-forwarded-from-station”. The “first-call-forwarded-from-station” does not have to be assigned as the owner of the CO line in program *52 or as the owner of the [PhDN] in Program *33, but it must be assigned memory in this program.

Distributed Hunt Queue or DISA line, Abandoned Calls store ANI/Caller ID data in the Program *52 CO line owner station.

If a Caller ID CO line is programmed to direct ring more than one station (81~89) a station logical port must be assigned as owner of the ground and/or loop start Caller ID line (in Program *52) to be able to store Caller ID numbers on abandoned or unanswered calls on Direct Incoming calls.

If a Caller ID CO line is programmed (81~89) to ring only one station, that station will store Caller ID abandoned call information regardless of Program *52 data - the station must have storing memory assigned in Program *51. ANI abandoned call numbers will be stored in the telephone memory of the called Primary Directory Number [PDN] owner telephone or the called Phantom Directory Number [PhDN] owner telephone.

Transferred Caller ID and/or ANI line abandoned call numbers will be stored in the “transferred-to” telephone memory if that telephone is assigned memory in this program. (see Program *52). Call forwarded Caller ID and/or ANI line abandoned call numbers will be stored in the [PDN] or [PhDN] owner telephone memory if that telephone is assigned memory in this program.

ACD calls that are abandoned while the call is in queue or calls abandoned while connected to an Auto Attendant or VM device will register on the SMDR report as a call answered by the ACD announcement [DN], Auto Attendant [DN], or Voice Mail [DN].

Program *52 Overview

Use this program for any LCD telephone that must store abandon call information for Caller ID, Ground/Loop start lines and/or ANI, DID/Tie lines must be allocated “Abandon-Call-Memory” LCD telephones can be allocated memory to save up to 100 numbers in 10 number increments (see IDL totals).

When Caller ID and ANI lines ring into the Strata DK system and the caller hangs-up before the call is answered, the call is considered abandoned. In this case, the Caller ID and ANI information received can be stored at a designated LCD telephone. When a Caller ID line rings at more than one telephone (Program 81-89), the LCD telephone that should store the Caller ID information for that line must be programmed as the owner of that Caller ID line using this program.

When a Caller ID line rings only one LCD telephone (Program 81-89), the abandoned call Caller ID information will be stored at that LCD telephone regardless of the Program *52 assignment. The number of abandoned calls the station can store is set in Program *51.

An LCD telephone can be assigned as owner of any number of Caller ID lines. A Caller ID line can only be assigned to one owner LCD telephone.

If a Caller ID CO line or ANI Tie/DID line is answered by the, Distributed Hunt group queue, or DISA line, and if this call is abandoned before it is routed to and rings a station, the Caller ID or ANI data will be stored in the abandoned call memory of the station owner assigned to the Caller ID or ANI line assigned in this program.

Notes

- Abandoned “call-forwarded” calls will store Caller ID information in the “Abandon-Call-Memory” of the “first-call-forwarded-from-station”. The “first-call-forwarded-from-station” does not have to be assigned to the CO line in this program. To store abandon call information for CO lines, the station must also be allocated “Abandon Call Memory” in Program *51.
- If a Caller ID CO line is answered by the Strata DK Distributed Hunt Group Queue or DISA line, and if this call is abandoned before it is routed to and rings a station, the Caller ID data is stored in the abandon call memory of the station owner assigned to the Caller ID line assigned in this program.
- Tie/DID ANI lines store abandoned call ANI numbers on the Primary and/or Phantom Directory Number owner telephones if they are allocated memory in Program *51. Tie/DID ANI line calls that are abandoned while Distributed Hunt Group queue will store ANI information on the station owner assigned in this program.
- ACD or Auto Attendant calls that are abandoned while the call is in queue or calls abandoned while connected to an Auto Attendant or VM device will register on the SMDR report as a call answered by the ACD announcement [DN], Auto Attendant [DN], or Voice Mail [DN].

Program 58 – DK424 Attendant Console Series (Part 1)


Processor Type: RCTUBA/BB, RCTUC/D and RCTUE/F

Program Type: Station

Initialized Default: see each program

Program 58-1 – Attendant Console Overflow Timer

Initialized Default: 32 seconds

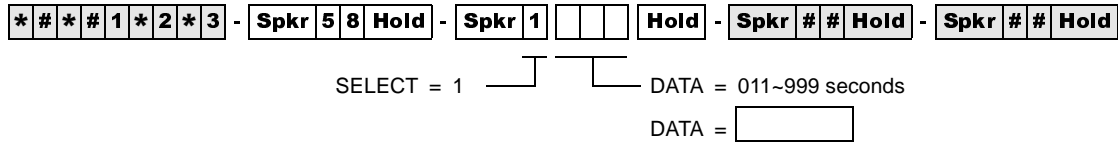

Program 58-1 Overview


Incoming Line Calls (not recalls) to attendant consoles will overflow to a designated attendant console or station port (Program 58-5) if the call is not answered within the time (011~999 seconds) specified by this program. The overflow call will ring on either the **In-Trans** button (assigned in Program 59) of the console that receives the overflow call, or the [DN] or CO **Line** button of a station.

Notes

- This program sets overflow timer for all attendant consoles (1~4)
- The overflow destination is assigned in Program 58-5.

Program 58-2 – Attendant Console Display Type


Initialized Default: All LEDs OFF

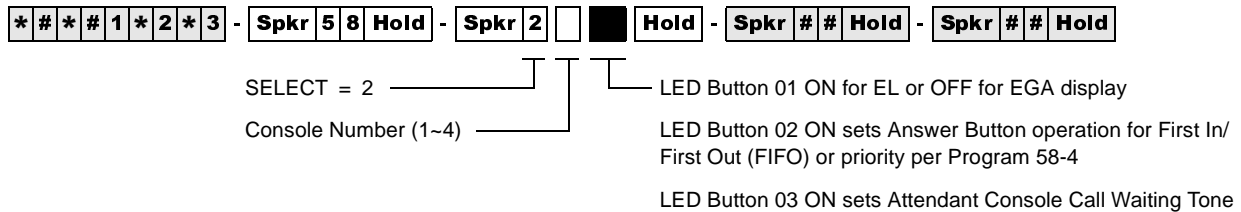

Attendant Console	Button 01 LED		Button 02 LED		Button 03 LED	
	ON (EL)	OFF (EGA)	ON (FIFO)	OFF (58-4)	ON (Call Waiting Tone)	OFF (No Call Waiting Tone)
1						
2						
3						
4						

Program 58-5 – Attendant Console Overflow Destination Assignments

Initialized Default: *Blank*

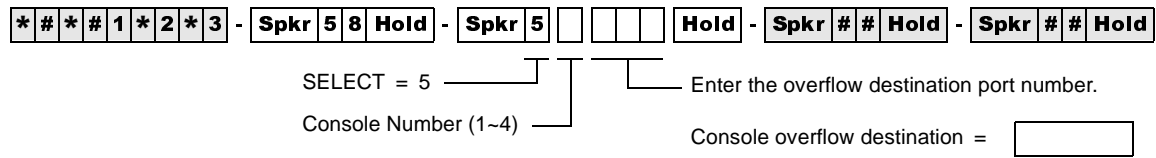

Processor	[PDN] Port Range	Max. Consoles
RCTUBA/BB	000-079	2
RCTUC/D	000-239	4
RCTUE/F	000-335	4

Program 58-5 Overview

When the attendant console has been placed in the Overflow mode (via the **Overflow** button), calls queue to be answered based on the predetermined FIFO or priority basis. If a call remains in queue for a period longer than the time period set for the Overflow Timer (set in Program 58-1), then the call will overflow to the destination assigned in this program.

The assigned destination can be either a station, voice mail, auto attendant, or another attendant console.

- Calls that will overflow include ring transfer, incoming CO **Line**, dial “0”, and **Attd Call** button calls; Transfer Recall (**In-Trans**) and **Hold** recall will not overflow.
- Overflow recall time is set in Program 58-1.

Program 59 – Attendant Console Flexible Button Codes

Processor Type: RCTUBA/BB, RCTUC/D, RCTUE/F

Program Type: Station

Initialized Default: Given throughout this section



Attendant Console (1~4)

1 = Left
2 = Right

DATA = Button Code
See legend.

Press LED Buttons 01~12 on Programming Telephone to enter data for corresponding console button.

Codes (Left Buttons 1-12)

Split (295)	Join Loop (239)	Sup. Loop (296)
In-Emrg (261)	In-DN (257)	In-Dial "0" (262)
In-Trans (258)	Trans-RC (260)	Hold-RC (259)
In-LG3 (243)	In-LG2 (242)	In-LG1 (241)

Codes (Right Buttons 1-12)

Conf (297)	Overflow (299)	Night (439)
Redial (496)	Spdial (497)	SD13 (*13)
BLF (298)	Out Dial (294)	SD12 (*12)
Attd Call (000)	SD10 (*10)	SD11 (*11)

Console 1

Left

10		11		12	
07		08		09	
04		05		06	
01		02		03	

Right

10		11		12	
07		08		09	
04		05		06	
01		02		03	

Console 2

Left

10		11		12	
07		08		09	
04		05		06	
01		02		03	

Right

10		11		12	
07		08		09	
04		05		06	
01		02		03	

Console 3

Left

10		11		12	
07		08		09	
04		05		06	
01		02		03	

Right

10		11		12	
07		08		09	
04		05		06	
01		02		03	

Console 4

Left

10		11		12	
07		08		09	
04		05		06	
01		02		03	

Right

10		11		12	
07		08		09	
04		05		06	
01		02		03	

Program 59 Overview

Attendant Consoles have 24 flexible buttons (12 on left and 12 on the right side of the dial pad). This program is used to assign each button to an available function or options. Program 59 record sheets define the button options (and codes) available.

Table 3-2 Required PC Attendant Console Button Codes

Button Function	Button Labels	Code	Notes
Conference	Conf	297	Starts conference calls.
Hold Recall	Hold-RC	259	Held calls recall on this button.
Incoming Dial "0"	In-Dial "0"	262	Dial "0" calls ring in on this button.
Incoming Directory Number	In-DN	257	Incoming calls to the console DN ring on this button. The console [DN] is the Prog 04 assignment of the Prog 04 console port number.
Incoming Ring Transfer	In-Trans	258	Receive call transfer.
Join-Loop	Join-Loop	293	Connects any held call to an existing call.
Out Dial	Out Dial	294	Switches ATTD consoles dial pad from digital to tone mode.
Redial Last Number (#)	Redial or RDL	496	Redials the last number.
Release to Idle	Release Call or RLS	476	Releases current call and makes station idle.
Speed Dial Select (*)	Speed Dial or SDS	497	Begins speed dial selection.
Split Call	Split	295	Allows attendant to talk to either party separately on a conference call.
Supervised Loop	Sup Loop	296	Places call on attendant hold loop key so attendant can supervise call.
Transfer Recall	Trans-RC	260	No answer transferred calls, recall on this button.
Attendant Call	Attd Call	000	Can originate calls on this button. The Attendant Call LED is lit red any time the attendant talk path is connected.

Table 3-3 Recommended PC Attendant Console Button Codes

Button Function	Button Labels	Code	Notes
Display BLF	BLF	298	Displays BLF on CRT or EL display.
Incoming Emergency	In-Emrg	261	Indicates to all consoles an incoming emergency call.
Message Waiting/Flash	Msg Wait, Flash or MW/FL	499	Indicates a message from station or VM device to Attendant. Disconnects and recalls dial tone on CO line; accesses Centrex or PBX features; enters pause or flash during speed dial programming.
Overflow	Overflow	299	Places console in the call overflow mode.
Park Recall	Park-RC	263	Parked calls recall on this button.

Table 3-4 Incoming Line Group Button Assignments

In-LG1~241	In-LG5~245	In-LG9~249	In-LG13~253
In-LG2~242	In-LG6~246	In-LG10~250	In-LG14~254
In-LG3~243	In-LG7~247	In-LG11~251	In-LG15~255
In-LG4~244	In-LG8~248	In-LG12~252	In-LG16~256

Table 3-5 Optional Attendant Console Button Codes

Button Function	Button Labels	Code	Notes
Alarm	Alarm Reset or ALRM	477	Resets alarm condition system-wide.
Call Pickup Tenant 1~Call Pickup Tenant 4	PKUP 1~PKUP 4	435~438	Picks up tenant 3's ringing CO calls.

Table 3-5 Optional Attendant Console Button Codes (continued)

Button Function	Button Labels	Code	Notes
CO Line Appearance	Line 1~48 Line 1~144 Line 1~200	001~048 001~144 001~200	CO line access of appearing calls. CO line ranges vary according to processor: RCTUBA/BB RCTUC/D RCTUE/F
Door Lock 0~Door Lock 4 (DDCB/HDCB)	DRLK 0~4	471~475	Momentarily unlocks door (3 or 6 seconds). The PC attendant activates these options when these buttons are assigned.
Emergency Page Access	Emrg Page	292	Activates ALL CALL Paging to telephone speakers (not EXTR Page). Overrides any existing ALL CALL page.
Night Transfer Tenant 1~Tenant 4	Night Transfer1 or NT1~Night Transfer4 or NT4	439~442	Sets Tenant 1 CO line DAY/NIGHT ring mode.
Privacy	Privacy On Line or PRIV	453	Prevents Privacy Override (not Executive Override).
Privacy Release	Privacy Release or PRV RLS	479	Changes station Privacy mode to Non-private for CO lines.
Pause	Spd Dial Pause or PAU	495	Sets pause in Speed dial (see Program 12-3.)
Pause (Long)	Spd Dial Lng Pause or PAU/L	493	Sets a 10-second pause in Speed Dial.
Unanswered Caller ID and/or ANI Stored Number Auto Dial	Lost Call Auto Dial or LCAD	462	Will Auto Dial a Caller ID and/or Automatic Number Identification (ANI) telephone number that was stored in station Caller ID/ANI memory.

Table 3-6 Additional Feature Button Codes

Button Function	Button Labels	Code	Notes
Account Code	Account Code or ACCNT	450	Allows a Voluntary Account Code to be entered.
Alert Signaling	Alert 1~4	427~430	Console can alert another station but another station cannot alert the console. See Program 39 for more information.
All Call Voice Page	All Call Page or AC	489	Pages up to 120 idle electronic or digital telephones over speaker.
Automatic Busy Redial	Auto Busy Redial or ABR	470	Sets ABR of busy outgoing number.
Automatic Callback Busy	Auto Callback or ACB	494	Sets ACB for station recalled by busy line.
Call Forward All Calls	Call Frwd All Calls or CFAC	487	All calls forward to selected station.
Call Forward A.C. Fixed	Call Frwd to: or CFF	486	Forwards all calls to pre-defined destination. See Program 36.
Call Forward Busy	Call Frwd Busy or CFB	459	Forwards calls to selected station if station is busy.
Call Forward Busy/No Answer	Call Frwd Busy/NAAns or CFB/NA	457	Forwards calls to selected station if station is busy or does not answer.
Call Forward External	Call Frwd External or CF-EXT	460	Forward calls externally.
Call Forward No Answer	Call Frwd No Answer or CFNA	458	Forwards calls to selected station if station does not answer.
Call Park	Park in Orbit or PARK	464	Call Park Only.
Call Park LCD Display	Park Orbit Display or CPD	465	CP Display Button and Mode 64 can be used interchangeably. Displays call parked via telephone LCD.
Call Park and Page	Call Park/Page or CP/PG	463	Parking and Paging Park Pickup.
Call Pickup (Directed)	Directed Pickup or PKUP	484	Picks up ringing or held intercom, trunk calls, and page.

Table 3-6 Additional Feature Button Codes (continued)

Button Function	Button Labels	Code	Notes
Call Pickup (Group)4	Group Pickup	480	Picks up a call to any group to which station is assigned in *31.
Do Not Disturb	Do Not Disturb or DND	498	Prevents calls to station.
ISDN Sub-address	Sub-address	467	Separates the called party's ISDN sub-address from the called party number. The # digit performs this function on standard telephones.
ISDN Start	Start	469	Initiates DK to send dialed digits to the ISDN network when this button is pressed from a digital or electronic telephone. Program *63-2 invokes the same function when the Dial Timer expires. Also see Tone Button in this table.
LCD Message Select	LCD Msg Select or LCD M	481	Begins LCD message selection.
Night Transfer Lock Tenant 1~Night Transfer Lock Tenant 4	Night Lock1 or NT1 L1~Night Lock4 or NT4 L4	431~434	Used to lock system ringing mode: DAY, DAY2, NIGHT See Programs 74 and *36 for NT Lock Password assignments.
Release and Answer	Release and Ans and RLS/ANS	466	Simulates On-hook/Off-hook operation to release an existing call and answer new incoming/ringing call.
Save Last Dialed Number	Save Last Number or SAVE	485	Saves last number dialed for future speed dial.
Station Speed Dial Codes	SD	*10~*49 *10~*49 *100~*139	Reserves button for station speed dial for the following processors: RCTUBA/BB RCTUC/D RCTUE/F
System Speed Dial Codes	SD	*600~*699 *600~*699 *200~*999	Speed dial number is set by station port 000. RCTUBA/BB RCTUC/D RCTUE/F
Tone	Tone Dial Select or TONE	490	CO dial signals set to tone or pulse. For ISDN applications, after the user presses the Tone Dial Select button, any digits dialed after it will be sent using DTMF tones.

Notes

- See Program *15 for Tenant Group assignments.
- Picks up calls to telephones in any call pickup group to which the telephone is assigned in Program *31.
- Attendant consoles cannot be equipped with [SDNs] or [PhDNs]. The console [DN] is assigned to the console port number in Program 04. The console's [DN] can have only one appearance.
- Attendant consoles cannot be equipped with [PDNs], [SDNs], or [PhDNs]. The [In-DN] button is the console's [DN], assigned in Program 04; it supports incoming calls only and can only appear once on a console.

Program 60-1 – SMDR Data Output Options

Processor Type: *DK14, DK40i, All RCTUs*

Program Type: *System*

Initialized Default: *LED 01 OFF*

* # * # 1 * 2 * 3 - Spkr 6 0 Hold - Spkr 1 Hold - Spkr # # Hold - Spkr # # Hold

SELECT = 1 Light the LED Buttons that are marked with an X in the table below.

LED/Button	X	LED ON	LED OFF
20			
19			
18			
17			
16			
15			
14			
13			
12			
11			
10			
09			
08			
07			
06			
05			
04			
03			
02			
01		Caller ID, ANI and DNIS data will be sent from the system SMDR port	Account code data will be sent from the system SMDR port

System & Station

Program 60-1 Overview

Program 60-1 determines which information will be sent out the system SMDR port: System Account codes or Caller ID and/or ANI telephone numbers.

Turn LED 01 ON if received Caller ID and/or ANI information should be sent out the system SMDR port.

Turn LED 01 OFF if Account Code information should be sent out the system SMDR port.

Note LED 01 determines if received Caller ID and/or ANI information (LED 01 ON) or data is sent out the SMDR port. This data is output on the last 15-digit (right hand) field columns of the SMDR print out.

Program 60-2~7 – SMDR Output/Account Code Digit Length

Processor Type: DK14, DK40i, All RCTUs

Program Type: System

Initialized Default: Item 2: 10 seconds
 Item 3: SMDR output is enabled for answered incoming/outgoing calls
 Item 4: a 6-digit length is assigned to all Forced/Voluntary Account Codes
 Item 7: 21 digits

* # * # 1 * 2 * 3 - Spkr 6 0 Hold - Spkr [] [] [] [] Hold - Spkr # # Hold - Spkr # # Hold

SELECT = 2~7 (Item) ———— See table below.

Make a selection from the table below.

Item	Description	Data
2	SMDR Threshold Time 0 = 1 second 1 = 10 seconds	Time
3	SMDR Output when a call is completed 0 = Outgoing Only 1 = Incoming and Outgoing	SMDR COR
4	Forced/Voluntary Account Code Digit Length 04~15 (See Program 69 for Verified Account Codes) Digits are verified per Program 30, Button/LED 14 and Program 69	Account
5	SMDR Printout Options Toll Dial: 0 = All Calls (item 3, printout outgoing call only is still available) 1 = Dial "0" calls only 2 = Dial "1" calls only 3 = Dial "00" calls only 4 = Dial "1", "0" calls only 5 = Dial "1", "00" calls only	Toll Dial Data
6	DISA Security Code 01~15 digits, may be changed from station, per Program 30 If a security code is not programmed, outgoing trunk access via DISA will not require a security code when dialing.	Data Button 01 = blank Button 02 is wild card (any digit from 1~9)
7	Credit Card Call Digit Length, 01~30 digits (see Program 43)	Credit Number of digits required when "0" is the first digit dialed; if this number of digits is not dialed, the system will disconnect the call after 20 seconds. "0" is counted as a digit. Example: 0 + 714 + 583 - 3700 = 11 digits; 11 should be programmed as a minimum in this case.

Program 60-2-7 Overview

This program assigns the type of data to send to the Station Message Detail Report (SMDR).

Item 2: SMDR Threshold Time

The time that a call must be in progress before it will register with SMDR can be set to 1 or 10 seconds.

Item 3: SMDR Output

System output to a Station Message Detail Recording (SMDR) device can include information for both incoming and outgoing calls, or only for outgoing calls. Local and long distance call data will be sent out.

Item 4: Forced/Voluntary Account Code Digit Length

The Account Code entered at a station can vary in length from 4~15 digits. For Forced Account Code use, a call will not be completed unless the specified number of digits is entered by a station user. In the case of Voluntary Account Codes, the Account Code will not be sent to the SMDR call record unless the specified number of digits is dialed. Initialized data assigns a six-digit length for all Account Codes. See Program 60-1 and Program 69 for Verified Account Codes.

Item 5: Station Message Detail Recording (SMDR) Printout Options

This option selectively deletes local call data and allows long distance/toll call data only to be sent out the SMDR port. The type of long distance/toll call data that prints out is selected by long distance prefix codes 0, 1, 00, or 1 or 0.

Item 6: Direct Inward System Access (DISA) Security Code

The optional security code (1~15 digits) is required for incoming DISA calls to access outgoing CO lines. If the DISA security code is not set in programming, DISA users can access outgoing lines without dialing a security code. This code is not required for DISA internal calls to stations. The DISA security code can also be changed from stations enabled in Program 30. If the DK280 built-in Auto Attendant is installed, make sure to program a DISA security code to prevent Auto Attendant callers from making unauthorized external DISA calls by using the DISA access feature (Dial *).

Item 7: Credit Card Call Digit Length

Station users bypassing Toll Restriction with the “0 +” Credit Card Calling feature (Program 43) must dial a predetermined number of digits including the “0.” This predetermined number is established with Item 7, and can be 1~30 digits. Set 11 digits in this program when using LCR.

Notes

- If PBX code is dialed, numbers dialed after the code will be checked.
- If A/C, O/C or SPCC code begins with “0”, “1”, or “00”, that call will print out.
- When accessing LCR feature, all digits sent to CO will be output.

Program 69 Overview

Verified Account Codes (VACs) may be added, deleted, or changed with Program 69. Each Verified Account Code can be 1~15 digits long, but cannot exceed the Account Code length requirement set in Program 60-4.

Account Codes may not conflict with (be the same as) emergency numbers in Program 44-91~93.

The following programs and options should be considered when establishing Verified Account Codes.

Account Code Digit Length

Program 60-4 sets the digit length that must be dialed for all Account Codes: Forced (Verified/Nonverified) and Voluntary (Verified/Nonverified).

Full and Partially Verified Account Codes

Verified Account Codes can contain the same number of digits (full Verified Account Code) or less (partially Verified Account Code) than the length set in Program 60-4.

If the quantity of digits in a VAC is the same as the Account Code digit length in Program 60-4, then all digits will be Verified; if the quantity of digits is less, then only those digits will be verified. Stations must have LED 14 ON in Program 30 to use Verified Account Codes.

If partially verified, the first part of the Account Code is verified and the remainder is not. For example, if VAC 2734 is set in Program 69, but the digit length is set to eight in Program 60-4, then the user must dial 2734 plus any other four digits to enter a partially Verified Account Code. There are many applications for partially VACs. For instance, using the code in the example above, the numbers 2734 could be the user's dial restriction code and the remaining four digits could be a customer-client code, a sales order, etc.

Verified Account Code Toll Restriction Assignments

A Toll Restriction Class can be assigned with Program 70 to each of the 300 VACs. This feature can be used to change a telephone's Class of Service to allow long distance calls from restricted telephones only when a verified account code is entered before dialing the long distance number. These calls will be recorded with the account code on the system SMDR output.

Verified Account Code Dial Requirement

Assigned on a station-by-station basis in Program 30, LED 14 ON. All Account Codes dialed (Forced or Voluntary) from stations assigned in this program will be verified.

Code Change

Stations selected in Program 30, LED 15 ON, can change VACs by dialing the following:

[PDN] + **#659** + **000~499** + VAC + **Redial**

Verified Account Codes: Forced/Voluntary Program Options

Any station can dial a VAC after accessing a CO line—by pressing the **Speed Dial + 50** (DK14, DK40, RCTUA~C/D), **Speed Dial + 050** (RCTUE/F), or by pressing the **Account Code** button. Forced Account Code requirements are assigned via station and line program options: stations are assigned in Program 30, LED 08 ON; and lines are assigned in Program 15-7. Stations must dial VACs when assigned in Program 30, LED 14 ON. Direct Inward System Access (DISA) callers that access outgoing lines can be required to enter Verified Account Codes with Program 30 (LED 08 ON for Port 99).

Program 70 Overview

A Toll Restriction Class can be assigned with this program to each of the 300 Verified Account Codes assigned in Program 69. This class of restriction overrides the normal station class of restriction assigned in Program 48 when a VAC is entered at the station. The station resumes its Program 48 restriction after the call is disconnected.

When a Forced or Voluntary Verified Account Code is dialed at a station after accessing a CO line and before dialing a telephone number, the station temporarily assumes the Toll Restriction Class assigned to the Verified Account Code. When Program 70 is initialized, all Verified Account Codes are assigned as not Toll Restricted (data = 00). Verified Account Code Toll Restriction class assignments are not user programmable; so if the assignments are not known, it is recommended to assign a number (block) of Verified Account Codes to each type of Toll Restriction class. For example:

VACs 000~050 = no restriction

VACs 051~100 = total restriction

VACs 101~150 = Class 1, etc.

- ◆ When stations enter VACs they will be unrestricted.
- ◆ Range programming is not available.
- ◆ If dial “0” credit card dialing is allowed, use Program 43 to allow designated stations/CO lines credit card calling.

Program 71 – DNIS

Processor Type: DK40i, all RCTUs
Program Type: System
Initialized Default: All Programs blank

DNIS Addresses

Processor	DNIS Address	ANI Address
DK14	NA	NA
DK40i	000~199	199
RCTUA	000~199	199

Processor	DNIS Address	ANI Address
RCTUBA/BB	000~349	349
RCTUC/D	000~499	499
RCTUE/F	000~499	499

Program 71-0: DID / Tie / DNIS / ANI Lines

* # * # 1 * 2 * 3 - Spkr 7 1 Hold - Spkr 0 [] [] [] [] [] [] Hold - Spkr # # Hold - Spkr # # Hold

DNIS Address (see legend above)

DNIS Number (2~5 digits)

Press LED Button 01 to blank out data.

Program 71-1~3: DNIS Number and ANI Line Routing Assignments

* # * # 1 * 2 * 3 - Spkr 7 1 Hold - Spkr [] [] [] [] [] [] Hold - Spkr # # Hold - Spkr # # Hold

Enter 1, 2, or 3

- 1 = Day Ring Assignment
- 2 = Day2 Ring Assignment
- 3 = Night Ring Assignment

Ringing Destination (see legend below)

Use LED Button 01 to blank out data.

DNIS Address (see legend above)

For ANI-only lines, enter address (only one assignment is provided for ANI lines without DNIS, see legend above).

DNIS/ANI Routing Destinations

Route to Ports	[PDN]	[PhDN]	DH [DN]	ACD	IMDU/RMDS	Network Table
DK40i	0000~0027	0500~0527	0900~0915	NA	#031	#300~#399
RCTUA	0000~0031	0500~0531	0900~0915	NA	#035	#300~#399
RCTUBA/BB	0000~0079	0500~0589	0900~0915	#090~#097	#085	#300~#499
RCTUC/D	0000~0239	0500~0739	0900~0915	#250~#265	#245	#300~#599
RCTUE/F	0000~0335	0500~0835	0900~0915	#345~#360	#340	#400~#699

All Processors: External Page = #039
 All processors except RCTUE/F: Night Ring Over External Page = #271
 Night Ring Over External Page for RCTUE/F = #366

A DNIS and/or Tie/DID extension number and/or ANI only line can be assigned to route one of the following destinations:

- ♦ Primary Directory Number [PDN] - secondary appearances of this [PDN] will also ring if Programmed to ring in Program *71, *72, and/or *73
- ♦ Phantom Directory Number
- ♦ Distributed Hunt Group
- ♦ ACD Group
- ♦ Outside telephone number routed externally over the Public Telephone Network
- ♦ The system remote maintenance modem
- ♦ Night ringing over the external page
- ♦ The external voice paging system (Private Network Tie lines only)

A DNIS number or ANI only line can be assigned to route to one destination only in each of the three system ringing modes (Day, Day2 and Night); the destination can be unique or different in each ringing mode. For each DNIS Tie/DID extension number, the routing destination can be a unique destination or it can be the same destination as that assigned to other DNIS numbers. To assign lines that receive both ANI and DNIS with each call to Program 71-1 assignments: Program 17, LED 05, 07 and 08 must be turned ON; for lines that receive DNIS digits only, LED 05 and 08 must be ON.

This program can also be used with non-DNIS or non-ANI Tie and/or DID lines to route calls. In this case, the normal Tie digit assignments in Program 04 and DID digit assignments in Program *09 will not be active - Program 17, LED 06, 07, 08 must be OFF and LED 05 must be ON for normal Tie/DID lines.

The last address (499 for RCTUC3/D3, RCTUE3/F3; 349 for RCTUBA3/B3; and 199 for RCTUA3 or DK40i) in Program 71-0 is used to assign ANI only lines to a routing destination. All ANI only lines must be assigned to the same routing destination; this destination can be unique in each of the ringing modes (Day/Day2/Night).

To assign an ANI only Tie/DID line to Program 71-1 assignments: Program 17, LED 05 must be turned OFF and LED 07 and 08 must be ON for lines that receive ANI digits only.

Program 71-4 Overview

This feature is available when using DTMF In-band VM integration only; it is not provided with SMDI VM integration.

This Program assigns a Voice Mailbox ID (VMID) number to each DNIS/Tie/DID extension number and/or ANI only lines. This allows each DNIS/Tie/DID extension number and/or ANI only lines to be routed to a unique Voice Mail box when the number directly rings or is Call Forwarded to the Voice Mail system. When a DNIS/Tie/DID extension number or ANI line rings a station that has call forwarding set to Voice Mail, the DNIS/Tie/DID extension or ANI VMID is sent to the VM machine (if programmed in Program 71-4). If a DNIS/Tie/DID extension or ANI VMID is not programmed, the Call Forwarding station's VMID is sent to the voice mail machine when the DNIS/Tie/ DNIS extension or ANI call forwards to VM. This program can also be used with non-DNIS Tie and/or DID lines to assign VMID digits to normal Tie or DID numbers.

The last address (499 for RCTUC3/D3, RCTUE3/F3; 349 for RCTUBA3/B3, and 199 for RCTUA3 or DK40i) in Program 71-4 can be used to assign a VMID code to ANI only lines. All ANI only lines will be directed to the same Voice Mailbox.

To assign an ANI only Tie/DID line to Program 71-4 assignments: Program 17, LED 05 must be turned OFF and LED 07 and 08 must be ON for lines that receive ANI digits only.

Program 71-5 Overview

This program is used to assign names to each DNIS number. The names for each DNIS/Tie/DID extension number is normally supplied by the customer. Each DNIS name can be up to 16 alphanumeric characters. The DNIS/Tie/DID extension name will display on a telephone's LCD when the DNIS/Tie/DID extension number rings the telephone directly or is transferred, Call Forwarded, or Hunted to the telephone.

To assign a Tie/DID line to Program 71-5 assignments: Program 17, LED 05 must be turned ON for lines that should display DNIS/Tie/DID extension name tags. When a Tie/DID line receives both DNIS and ANI digits on the same call, Program 17, LED 06 determines what information, DNIS extension name or ANI number, will display as a priority when the line rings incoming to the system.

This program can also be used with non-DNIS or ANI Tie and/or DID lines to display names, associated with the Tie or DID numbers, on telephone LCDs. In this case, the normal Tie digit assignments in Program 04 and/or DID digit assignments in Program *09 will not be active.

Important!

- *An individual telephone user can disable/enable the DNIS name display by using the Mode 60/61 function on his/her LCD telephone.*
- *The DNIS extension name can be assigned or not assigned to display as a priority over the ANI display (in Program 17, LED06) when both ANI and DNIS digits are received on the same call.*
- *If a name is not assigned to a DNIS number, DN:XXXX will display on telephone LCDs when the DNIS/Tie/DID line rings into the DK system (where XXXX = actual DNIS/Tie/DID digits received).*

First Telephone Group

Buttons 01~20 on the programming telephone are associated with the telephone groups displayed on the telephone LCD.

- GRP EK000 = Telephone Port 000 is represented by programming button 01...
- GRP EK001 = Telephone Port 001 is represented by programming button 02...
- GRP EK019 = Telephone Port 019 is represented by programming button 20.

Second Telephone Group

In telephone group “GRP 020~039”, the relationship is as shown below:

- GRP EK020 = Telephone Port 020 is represented by programming button 01...
- GRP EK021 = Telephone Port 021 is represented by programming button 02...
- GRP EK039 = Telephone Port 039 is represented by programming button 20.

Program *71, *72, *73 Overview

Primary/Phantom Directory Number and Telephone Ringing assignments:

- ♦ This program assigns telephones to ring when a [PDN] or [PhDN] that appears on the telephone is dialed from another telephone (direct or transferred call). The [PDN] may appear as an [SDN] on other telephones that should ring.
- ♦ This program assigns telephones to ring when a call is routed from a Tie, DID, DNIS, DNIS/ANI or ANI only line to a [PDN] or [PhDN] that appears on the telephone. The [PDN] may appear as an [SDN] on other telephones that should ring.
- ♦ Calls that Call Fwd, Hunt, or are transferred to a [PDN] or [PhDN] will ring on telephones per Program *71, *72, and *73 ringing assignments. The [PDN] or [PhDN] must appear on a flexible button (as a [PDN], [SDN], or [PhDN]) of telephones that should ring.

Important! *120 Telephones (maximum) can be programmed to ring for any given [PDN], [SDN] or [PhDN] in Program *71, *72, and *73 combined.*

For the above case:

- ♦ Telephones can be programmed to immediately Ring (*71 assignments), delay ring after 12 seconds (*72 assignments), or delay ring after 24 seconds (*73 assignments) for each [PDN] or [PhDN] button that appears on the telephone.
- ♦ The called [PDN], [SDN], or [PhDN] button must be programmed to appear (Program 39) on all Telephones that should ring.

Program 72 Overview

This program defines the external Network routing numbers that can be assigned DNIS/Tie/DID extension numbers in the Day, Day2, or Night ringing mode. This assignment will cause incoming DNIS/Tie/DID calls to route (forward) back out over a public, or private, telephone network to a pre-assigned telephone number.

To assign a Tie/DID line to Program 72 assignments: The DNIS/Tie/DID extension number must be assigned to route to the appropriate Network routing number in Program 71-1.

This program can also be used with non-DNIS or ANI (only), Tie and/or DID Lines to assign normal incoming Tie/DID calls to route back out over the public, or private telephone network to an external telephone number.

Important!

- *Tie/DID lines used for DNIS network routing must be enabled with tandem (Two-CO line) connection with Program 15, Code 5 and Program 10-1, LED 20.*
- *DNIS Network routing numbers will not be restricted by DK424 Toll Restriction assignments.*
- *Tie/DID lines must have LED05 ON in Program 17 to use the (DID, Tie) DNIS routing assignments in Program 71 and 72.*
- *DNIS network calls are timed by the Program 12 disconnect timer which, if set to default, will disconnect the call after four minutes. The disconnect timer may be disabled (see “Program 12 – System Assignments, Basic Timing” on Page 3-41).*

Program 74 – System NT Button Lock Password

Processor Type: DK14, DK40i, All RCTUs

Program Type: System

Initialized Default: Port 000 for all tenants

* # * # 1 * 2 * 3 - Spkr 7 4 Hold - Spkr [] [] [] [] Hold - Spkr # # Hold - Spkr # # Hold

Tenant Number (1~4) DATA = Night Lock Password for selected Tenant (4-digits)

Tenant Number	NT Lock Password (4 Digits)			
1				
2				
3				
4				

Program 74 Overview

This program assigns the password for each **Night Transfer** or **Night Transfer1~4** button. To lock the system ringing mode requires a password and two buttons: **Night Transfer** and **Night Transfer Lock**.

- ♦ **Night Transfer** switches the station to Night Transfer mode.
- ♦ **Night Transfer Lock** + the Night Lock password, locks the **Night Transfer** button into that ringing mode.

The Strata DK system provides three system ringing modes (Day/Day2/Night). The system ringing modes are controlled by the **Night Transfer** button which is programmed on a flexible button of a telephone or attendant console. Each ringing mode allows incoming calls to be routed to different destinations.

Programs related to Program 74 are:

Program 39, which assigns the **Night Transfer** and **Night Transfer Lock** buttons to stations. Also, these station(s) must be assigned as the designated Night Transfer Lock station in Program *36.

Program 59, which assigns **Night Transfer/Night Transfer Lock** buttons to attendant consoles. Attendant consoles and stations (assigned in Program *36) can also change the **Night Transfer Lock** button password using a special access code. Program *36 is not required to assign attendant consoles to Night Transfer Lock functions.


Also see Programs 39, *36, *15 and 77-3.

Program 76-1(X-Y) – DK14, DK40i, All RCTUs

Processor Type: DK14, DK40i, All RCTUs

Program Type: System

Initialized Default: Port 1 (Type 1), Ports 2~4 (Type 0)

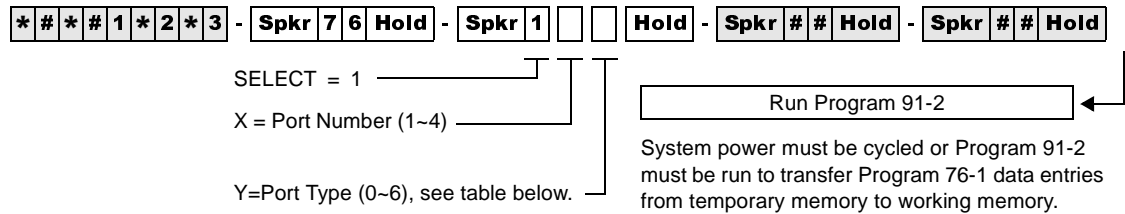

Port Number	Port Type (0~6)
1	
2	
3	
4	

Program 76-1 Overview

This program assigns each installed WSIU (DK14 only), TSIU (DK40i only) or RSIU/RSIS (DK424 only) port to a function.

For Program 76-1(X-Y):

X identifies the WSIU, TSIU port number 1~2 or RSIU/RSIS/RMDS port number 1~4.

Y identifies the WSIU, TSIU or RSIU/RSIS/RMDS port function as shown below:

Port Type (Y)	Function
0	No port equipped. This should be used for any of the four RSIU/RSIS/RMDS ports that are not used.
1	TTY or modem ¹ . TTY RS-232 port (set Program 77-1, LED 14 OFF; DK14, DK40i or DK424). RMDS modem port (set Program 77-1, LED 14 ON; DK424).
2	SMDR
3	MIS or SMIS (DK424)
4	SMDI
5	Open Architecture Interface (see Program 77-4) (DK424 R3.2)
6	Caller ID output to Caller ID interface box (DK14 only) ²

1. If port type code 1 is set, then Program 77-1, LED 14 status determines if the port operates as a system administration/maintenance modem (LED 14 ON) or an RS-232 administration/maintenance TTY port (LED 14 OFF). For modem operation, an RMDS piggy-back PCB is required, for RS-232 TTY port, a TSIU, WSIU, RSIU/RSIS/RMDS PCB may be used.

2. If the DK14 CO lines must pass Caller ID information to the Toshiba telephones, LCD/RPCI-DI, an interface box, TC1041 (MLX-41), must be connected to one of the WSIU outputs. For more information, see the Caller ID instructions in Chapter 1 – DK14 Installation of the *Strata DK Installation and Maintenance Manual*.


- ♦ Port types set in this program override RSSU, PIOU, and/or PIOUS function codes (41, 42, 43) set in Program 03. To activate changes made to this program, system power must be turned off/on or Program 91-2 must be run.
- ♦ Communication Parameters: SMDI, MIS or SMIS, TTY, IMDU/RMDS, Caller ID, OAI: 7 bits, even parity, 1 stop bit. SMDR: 8 bits, no parity, 1 stop bit.

Program 76-2 (X-Z) – WSIU, TSIU and RSIU / RSIS / RMDS Transmission Rates

Processor Type: DK14, DK40i, All RCTUs

Program Type: System

Initialized Default: All ports 2400 bps



Port Number (x)	Data Transmission Rate (z)
1	
2	
3	
4	
Total	
Note Total must be ≤ 9600 bps.	

Program 76-2 Overview

Assigns each installed WSIU (DK14 only), TSIU (DK40i only) or RSIU port to operate at a specified transmission rate. Where X identifies the WSIU, TSIU port number 1~2 or RSIU/RSIS/RMDS port number 1~4 and Z identifies the WSIU, TSIU or RSIU/RSIS/RMDS port data transmission rate in bits-per-second (bps).

Whenever uploading Program 76 with DKAdmin/DKBackup, the bps rate of the DKBackup/DKAdmin customer database (on the PC) and the WSIU, TSIU or RSIU/RSIS/RMDS TTY/RMDS port must all be set the same. If the bps rate of these items are not the same, uploading Program 76 will fail.

The sum of the transmission rates of equipped WSIU, TSIU or RSIU/RSIS/RMDS ports cannot exceed 9600 bps. Ports assigned “no-function” (code 0) in Program 76-2X-Y will not be included in the transmission rate sum. The RMDS will only function at 1200 or 2400 bps on the DK424 (see Program 77-1 LED 15).

Program 76-2 does not require system power OFF/ON to change the bps rate.

Program 77-1 – Peripheral Options (Door Phones) RSIU / RSIS / RMDS, PIOUS/PIOUS / IMDU, PEPU

Processor Type: DK14, DK40i, All RCTUs

Program Type: System

Initialized Default: All LEDs are OFF

* # * # 1 * 2 * 3 - Spkr 7 7 Hold - Spkr 1 Hold - Spkr # # Hold - Spkr # # Hold

SELECT = 1 Light the LED Buttons that are marked with an X in the table below.

LED/ Button	X	LED ON	LED OFF
20		Door Lock Time/6 seconds	Door Lock Time/3 seconds
19		Port 028/DDCB 4 or HDCB 4 (DK424)	Port 028/Telephone (DK424)
18		Port 020/DDCB 3 or HDCB 3 (DK40i/DK424)	Port 020/Telephone (DK40i/DK424)
17		Port 012/DDCB 2 or HDCB 2 (DK424) Port 012/DDCB 2 or HDCB 2 (DK40i Expansion Unit) Port 003/DDCB 2 (DK14)	Port 012/Telephone (DK40i Expansion Unit, DK424). Port 003/Telephone (DK14).
16		Port 004/DDCB 1 or HDCB 1 (DK424) Port 004/DDCB 1 (DK40i) Port 002/DDCB 1 (DK14)	Port 004/Telephone (DK40i, DK424). Port 002/Telephone (DK14).
15		RMDS Modem Protocol CCIT (2400 bps)	RMDS Modem Protocol Bell212A (1200 bps)
14		RMDS/IMDU Modem (DN #19)/Enabled	RMDS/IMDU Modem (DN #19)/Disabled
10		Enable DKAdmin/Backup ACK/NAC Protocol	Disable DKAdmin/Backup ACK/NAC Protocol
08		Door Phone Ring on External Page in Night Mode	No Ring on External Page in Night Mode
07		Door Lock Relay Enabled	External Page Relay Enabled
06		NT Relay with NT1 and NT2 Button and Ringing CO Line	NT Relay Steady with NT1 Button (DK424 only)
05		MOH Relay Enabled	NT Relay Enabled
04		—	—
03		—	—
02		LED 02 applies to DK14/DK40i only. LED 01 has priority.	External Page on Base Unit Relay Enabled
01		LED 01 applies to DK14/DK40i only. MOH on Base Unit Relay Enabled	NT on Base Unit Relay Enabled

System & Station

Program 77-1 Overview

This program performs the following functions:

- ♦ Programs door lock relays
- ♦ Assigns door phones/lock control units
- ♦ Enables RMDS/IMDU built-in maintenance modems
- ♦ Sets RMDS communications standard type
- ♦ Enables DKAdmin Communications Protocol
- ♦ Enables/disables door phone ring tone to external paging when system is in Night mode
- ♦ Assigns a relay to operate with door lock function or external page for mute control
- ♦ Assigns a relay to operate in one of two Night Transfer modes
- ♦ Assigns a relay to operate in one of two applications

LED 20: Door Lock Time

The Door Lock Relay contact may be programmed to operate for either three or six seconds (applies to PIOU, PIOUS, PEPU, DDCB, and HDCB door lock controls).

LEDs 16~19: Port Number/Door Phone/Lock Control Units

Door phone/lock existence is defined by this program. The door lock option is set via Program 77-2.

- ♦ **DK424:** Door phone/lock controllers (DDCBs and/or HDCBs) can only exist at Ports 004, 012, 020 and 028, and can only be installed on Circuit 5 of a PDKU, RDSU, PEKU and/or PESU. PDKUs and RDSUs support DDCBs, but not HDCBs. PEKUs and PESUs can support HDCBs, but not DDCBs. After assignment of a DDCB or HDCB, door phone numbers (#151~#159, #161~#163) effectively replace the station number assignment in Program 04.

Up to four DDCBs/HDCBs can be installed in a system with RCTUB, RCTUBA/BB and C/D, only 3 are allowed with RCTUA. They must be assigned a PDKU, RDSU, PEKU or PESU port number to operate (DDCB to PDKU or RDSU, and HDCB to PEKU or PESU). (See Program 79 and *79 for door phone ringing assignments)

Station PCBs that are connected to HDCB/DDCB door phones control boxes must be installed in lower slot numbers than Tie, DID, or Attendant Console PCBs.

- ♦ **DK40i and DK14:** See port information on record sheet.

LED 15: RMDS Protocol

This program sets the RMDS communications standard type to CCITT/V.22bis (2400bps) or Bell 212A (1200bps). The standard set in this program must match the standard of the modem that will be used to communicate with the Strata DK RMDS.

- ♦ If the RMDS modem standard should be 2400bps/CCITT/ V.22bis, turn LED 15 on; if the RMDS standard is a 1200 bps/Bell 212A, turn LED 15 off. Most Hayes compatible modems will function with either standard; check with the modem manufacturer's documentation to verify which protocol should be used. When the system is initialized the Bell 212A (1200 bps) standard is set (LED 15 off).
- ♦ IMDU can be 1200 bps or 300 bps as set by SW2 on the PIOU or PIOUS PCB; RMDS can be 1200 bps or 2400 bps as set in Program 76-2 and Program 77-1 LED 15.

LED 14: RMDS or IMDU Modem

DK424: This program enables the DK424 built-in maintenance modem function: RMDS or IMDU. If LED 14 is off, the RSIU Port (1~4) which is set for TTY operation (Code 1 in Program 76-1) will operate as a local RS-232 maintenance port. If RSIU is not configured as TTY, then the PIOU/PIOUS/RSSU that has code 41 set in Program 03, will operate as a local TTY maintenance port.

Only one DK424 built-in modem RMDS or IMDU can be used in the DK424; if both are installed, RMDS will be accessed when a CO line direct rings the modem or is transferred to the modem by dialing **Cnf/Trn+#19**.

- ♦ **DK40i:** Turn LED 14 ON if the optional PIOU or PIOUS has Remote Maintenance from the IMDU modem subassembly. If an IMDU is installed on a DK40i PIOU or PIOUS, it can be accessed by dialing station #19 (unless the access code prefix has been changed with Program 05).

Other system Programs that are related to the system modem are: Program 76, RMDS/TTY assignments on RSIU PCB; *-51~53, system CO line to modem ringing assignments; Program 71-1, DNIS line to modem ringing assignments; Program *09, DID line to modem ringing assignments; Program 77-1, LED 15, RMDS modem Protocol/speed assignments.

If a modem unit (RMDS/IMDU) is installed, it can be accessed by dialing Station #19 and can be assigned a DID extension number in Program *09 or in Program 71 (1~3). See Program 79 and Program *79 for door phone ringing assignments.

LED 10: DKAdmin/Backup

Enables the system to Upload/Download the RCTU RAM data base using Toshiba DKAdmin and/or DKBackup software program. DKAdmin/Backup will automatically turn LED 10 ON when the DKAdmin/Backup PC communicates with the DK424. LED 10 should be OFF if the maintenance PC is using standard communication software (such as Procomm™) to program the DK424.

LED 08: Door Phone Ring On External Page

If a door phone button is pressed, a ring tone can be enabled or disabled to external paging when the system is in the Night mode. Activation of a Tenant 1 **Night Transfer1** button is required to activate this feature. The Tenant 2~4 **Night Transfer2~4** buttons do not apply to door phones.

CO lines must be assigned to night ring over External Page (Program 78-1) to allow the NT relay to operate when incoming CO lines ring. See Programs 79 and *79 for door phone ringing assignments.

LED 07: Door Lock Relay/External Page Relay

A relay on the PIOU, PIOUS, or PEPU can be assigned to operate with the Door Lock function or with External Page for mute control. The door lock button (**Unlock Door0~4**) is assigned in Program 39; the door lock activation time is assigned in Program 77-1. This door lock function is not associated with the DDCB or HDCB door lock, but is an addition to them.

This option applies to the PIOU/PIOUS/PEPU Door Lock Control 0 assigned to electronic or digital telephone buttons using Code 471 in Program 39; it does not apply to DDCB or HDCB Door Lock Control.

LED 06: NT Relay

A relay located on the PIOU, PIOUS, PEPU, DK14 KSU or DK40i KSU can be assigned to operate in one of two Night Transfer modes (see next item, MOH/NT Relay).

- ♦ **DK14:** Activate the NT Relay in the DK14 KSU *before* setting the specific Night Transfer mode with LED 06.
- ♦ **DK40i:** Activate the NT Relay on the PIOU or PIOUS with LED05, or activate the NT Relay on the DK40i KSU with LED 01 before setting Night Transfer mode with LED 06.

In one mode, the relay will activate for one second, then be idle for three seconds when a line rings (incoming) while the system is in the Night mode. The intended application is to control an external ringing device at night.

Program 78 or Program 71 (1~3, Code #271) must have Ring Over External Page activated for this feature. In the second mode, the relay will operate continuously while the NIGHT mode is activated. One application for this mode is to control an external answering machine.

CO lines must be assigned to night ring over External Page (Program 78-1) to allow the NT relay to operate when incoming CO lines ring.

LED 05: MOH/NT Relay (DK40i, DK424)

A relay on the PIOU, PIOUS, or PEPU can be assigned to operate in one of two applications. A choice must be made between use for Night Transfer application (see NT Relay, LED 06) or Music-on-Hold (MOH). If used for MOH, the relay will activate when any trunk or station is placed on hold. The intended application is to control a tape player which can be used as a Music-on-Hold source.

LEDs 02 and 01: MOH/NT/External Page Relay (DK14 and DK40i)

For KSU relay to MOH, LEDs 01 and 02 must be ON.

For NT function, LED 02 must be ON, LED 01 OFF.

For External Page function, LED02 must be OFF, LED 01 can be ON or OFF.


Program 77-2 – Door Phone Busy Signal/Door Lock Assignments

Processor Type: DK14, DK40i, All RCTUs

Program Type: Station

Initialized Default: All LEDs are OFF

* # * # 1 * 2 * 3 - Spkr 7 7 Hold - Spkr 2 ████ Hold - Spkr # # Hold - Spkr # # Hold

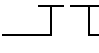SELECT = 2  Light the LED Buttons that are marked with an X in the table below.

LED/ Button	X	LED ON	LED OFF
20		One Door Phone Ring	Five Door Phone Rings
19		—	—
18		—	—
17		—	—
16		DDCB4/HDCB4 B-jack is Lock Control #4 (DK424)	B is connected to Door Phone 4B
15		Door phone 4C Busy Out	No Busy Signal
14		Door phone 4B Busy Out	No Busy Signal
13		Door phone 4A Busy Out	No Busy Signal
12		DDCB4/HDCB3 B-jack is Lock Control #3 (DK40i/ DK424)	B is connected to Door Phone 3B
11		Door phone 3C Busy Out	No Busy Signal
10		Door phone 3B Busy Out	No Busy Signal
09		Door phone 3A Busy Out	No Busy Signal
08		DDCB4/HDCB2 B-jack is Lock Control #2 (DK424) DDCB2 B-jack is Lock Control #2 (DK40i, DK14)	B is connected to Door Phone 2B
07		Door phone 2C Busy Out	No Busy Signal
06		Door phone 2B Busy Out	No Busy Signal
05		Door phone 2A Busy Out	No Busy Signal
04		DDCB4/HDCB1 B-jack is Lock Control #1 (DK424) DDCB1 B-jack is Lock Control #2 (DK40i, DK14)	B is connected to Door Phone 1B
03		Door phone 1C Busy Out	No Busy Signal
02		Door phone 1B Busy Out	No Busy Signal
01		Door phone 1A Busy Out	No Busy Signal

System & Station